


Fintek WDT demo software


1. Install driver

if you are X64 OS , Please go to /20200423_FitSdk/install directory , please use Run as administrator execute install_x64.exe file

(if you are X32 OS, Please use Run as administrator execute install_x32.exe file)

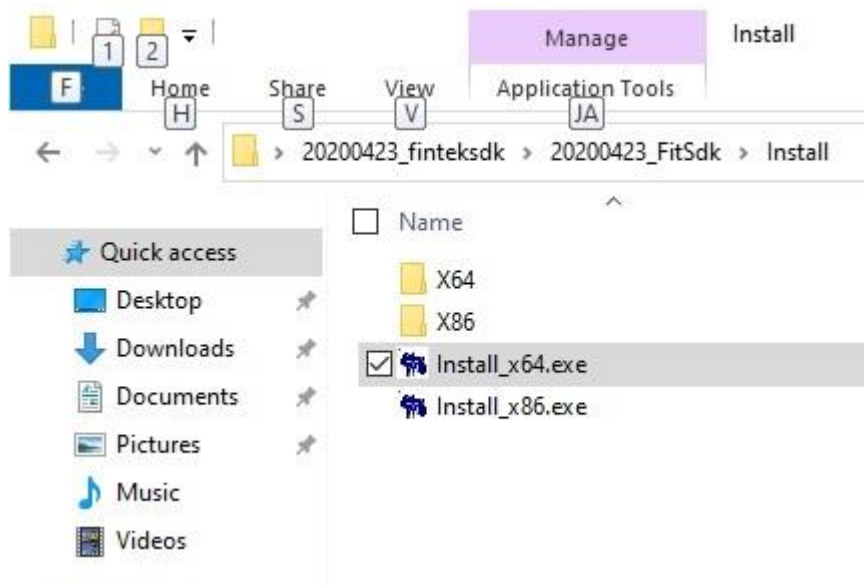


2. After you install driver, please go to Device manager to check the Fintek IO system driver install properly.

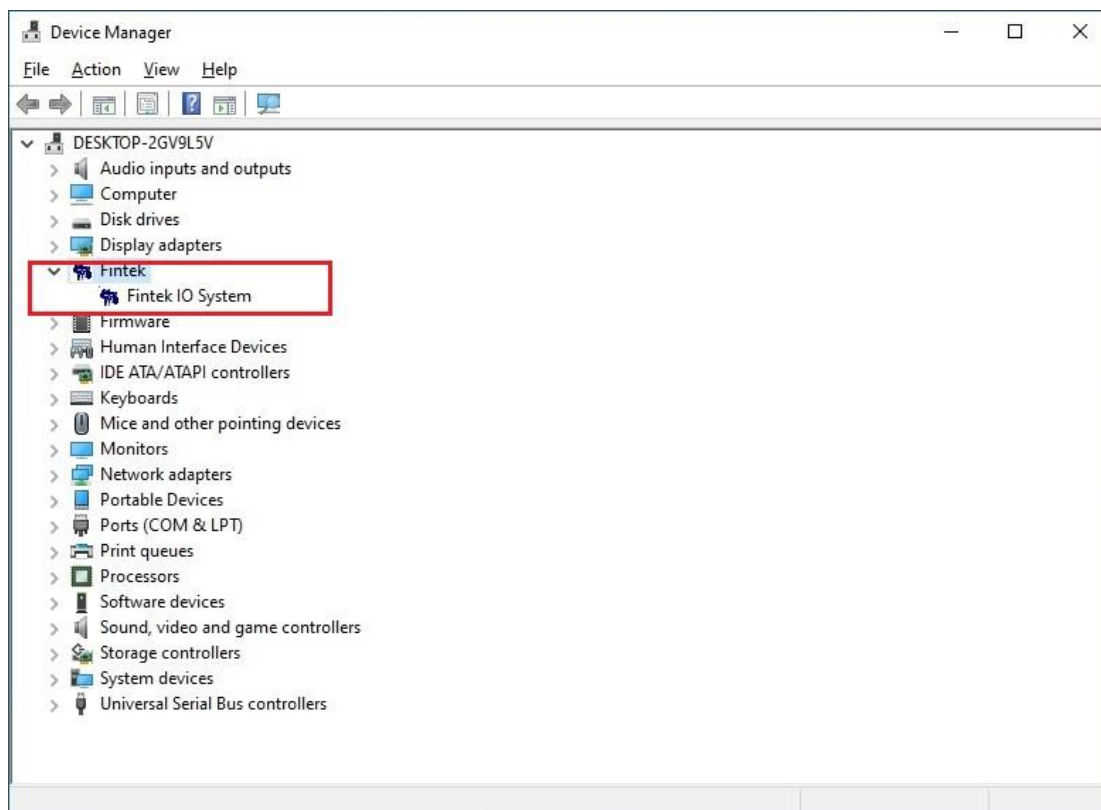

3. Please go to /20200423_FitSdk/RuntimePackage directory, please use Run as administrator execute WDTSet.exe file.

After execute WDTSet.exe file, you can see follow demo software .

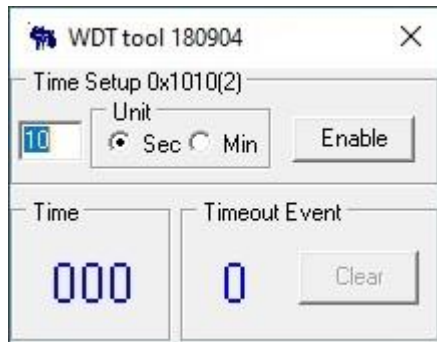

The demo software , you can set the Watchdog timer times, example you use default 10 seconds watchdog timer , when you press "Enable" button , after 10 seconds final count down , it will execute watchdog reset signal .