

***Technical Manual***  
***Of***  
***Intel Bay Trail Series CPU***  
***Based IPC M/B***

***NO. G03-NF533M-F***

***Revision: 3.0***

***Release date: October 1, 2019***

**Trademark:**

\* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

---

---

## Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.



---

---

# **TABLE OF CONTENT**

ENVIRONMENTAL SAFETY INSTRUCTION.....	iv
USER'S NOTICE.....	v
MANUAL REVISION INFORMATION.....	v
ITEM CHECKLIST.....	v
<b>CHAPTER 1 INTRODUCTION OF THE MOTHERBOARD</b>	
1-1 FEATURE OF MOTHERBOARD.....	1
1-2 SPECIFICATION.....	2
1-3 LAYOUT DIAGRAM.....	3
<b>CHAPTER 2 HARDWARE INSTALLATION</b>	
2-1 JUMPER SETTING.....	8
2-2 CONNECTORS AND HEADERS.....	11
2-2-1 CONNECTORS.....	11
2-2-2 HEADERS.....	14
<b>CHAPTER 3 INTRODUCING BIOS</b>	
3-1 ENTERING SETUP.....	19
3-2 BIOS MENU SCREEN.....	20
3-3 FUNCTION KEYS.....	20
3-4 GETTING HELP.....	21
3-5 MEMU BARS.....	21
3-6 MAIN MENU.....	22
3-7 ADVANCED MENU.....	23
3-8 CHIPSET MENU.....	34
3-9 SECURITY MENU.....	36
3-10 BOOT MENU.....	37
3-11 SAVE & EXIT MENU.....	38



## Environmental Safety Instruction

---

- Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- 0 to 60 centigrade is the suitable temperature. (The figure comes from the request of the main chipset)
- Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.
- Attention to the heat sink when you over-clocking. The higher temperature may decrease the life of the device and burned the capacitor.

---

---

## USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

## Manual Revision Information

Reversion	Revision History	Date
3.0	Third Edition	October 1, 2019

## Item Checklist

- Motherboard
- Cable(s)

---

---

# Chapter 1

## Introduction of the Motherboard

### 1-1 Feature of Motherboard

- Onboard Intel® Bay Trail Series Processor, with low power consumption never denies high performance
- Support 1\* DDR3L 1333MHz SO-DIMM, maximum capacity up to 8GB
- Onboard 1\* half-size Mini-PCIE slot & 1\* full-size Mini-PCIE slot
- Onboard 1\* M.2 slot (M-key, type-2242 SATA interface for SSD device)
- Support 1 \* SATAII (3Gb/s) Device
- Support USB 3.0 data transport demand
- Support 4\* RJ-45 LAN port
- Support CPU Over-Temperature protection
- Support CPU Over-Current/Under Voltage protection
- Support CPU Smart FAN
- Compliance with ErP standard
- Support Watchdog function


## 1-2 Specification

Spec	Description
<b>Design</b>	<ul style="list-style-type: none"> <li>● 3.5" SBC Form Factor; PCB size: 148mm * 102mm</li> </ul>
<b>Embedded CPU</b>	<ul style="list-style-type: none"> <li>● Integrated with Intel® Bay Trail-D/M/I series CPU</li> </ul> <p><i>*CPU model varies from different IPC options. Please consult your dealer for more information of onboard CPU.</i></p>
<b>Memory</b>	<ul style="list-style-type: none"> <li>● 1 * DDR3L SO-DIMM slot</li> <li>● Support 1* DDR3L 1333 MHz SO-DIMM up to 8GB</li> </ul>
<b>Expansion Slot</b>	<ul style="list-style-type: none"> <li>● 1* Half-size Mini-PCIE slot (<b>MPE1</b>)</li> <li>● 1* Full-size Mini-PCIE slot (<b>MPE2</b>)</li> <li>● 1* SIM card slot (<b>SIMCARD1</b>)</li> </ul>
<b>LAN Chip</b>	<ul style="list-style-type: none"> <li>● Integrated with 4* Intel I211AT PCI-E Gigabit LAN chip</li> <li>● Support Fast Ethernet LAN function of providing 10/100/1000Mbps Ethernet data transfer rate</li> </ul>
<b>Storage</b>	<ul style="list-style-type: none"> <li>● 1* SATAII 3G/s port</li> <li>● 1* M.2 Slot (Socket 3, M-key, support type-2242 SSD)</li> </ul>
<b>BIOS</b>	<ul style="list-style-type: none"> <li>● AMI 64MB Flash ROM</li> </ul>
<b>Rear I/O</b>	<ul style="list-style-type: none"> <li>● 1* 12V DC-in power Jack</li> <li>● 1* USB 3.0 port</li> <li>● 1* USB 2.0 port</li> <li>● 4* RJ-45 LAN port</li> <li>● 1* RS232 serial port (<b>COM1</b>)</li> </ul>
<b>Internal I/O</b>	<ul style="list-style-type: none"> <li>● 1* 2-Pin internal 12V DC-in power connector</li> <li>● 1* SATA Power-out connector</li> <li>● 1* CPUFAN header</li> <li>● 1* Front panel header</li> <li>● 1* Speaker &amp; Power LED header</li> <li>● 1* LAN LED activity header</li> </ul>

- 
- 
- |  |   |
|--|---|
|  | <ul style="list-style-type: none"><li>● 1* 9-pin USB 2.0 header (Expansable to 2* USB 2.0 ports)</li><li>● 1* RS232(/422/485) serial port header(<b>COM2, RS422/485 optional by order</b>)</li><li>● 1* PS/2 keyboard &amp; mouse header</li><li>● 1* SMBUS header</li><li>● 1* GPIO_CON header</li><li>● 1* Front panel VGA header</li></ul> |
|--|---|

## 1-3 Layout Diagram

### *Rear IO Panel Diagram:*

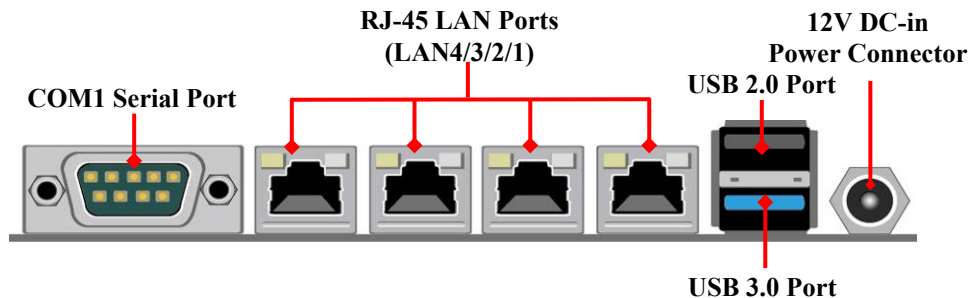


### **Warning!!**

The board has a 12V DC-in power connector (DCIN) in I/O back panel and an internal ATX12V (ATX2P) power connector. User can only connect one type of compatible power supply to one of them to power the system.



# Motherboard Internal Diagram-Front Side

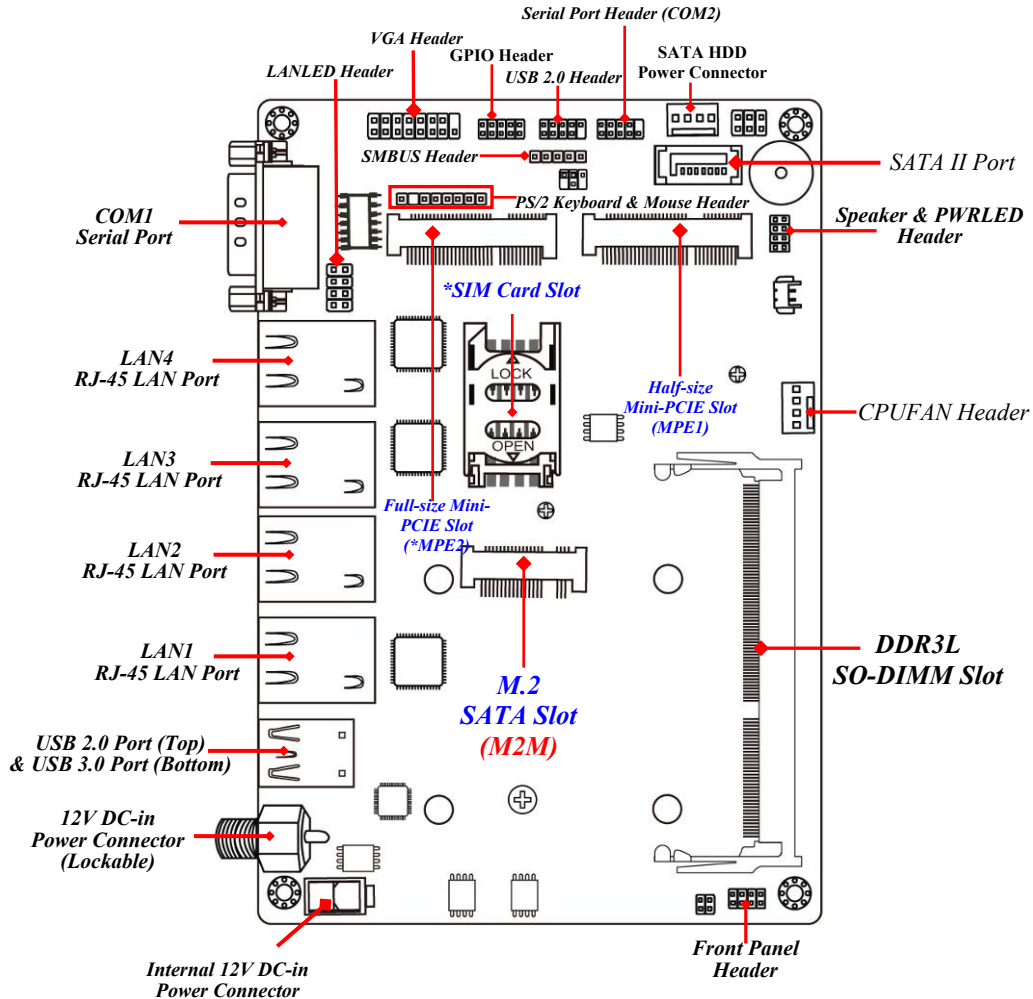


**\*Note:** SIM card slot only work **when** compatible SIM card installed & 3G LAN card installed in MPE2 Mini-PCIE slot.

---

---

## Motherboard Internal Diagram-Back Side

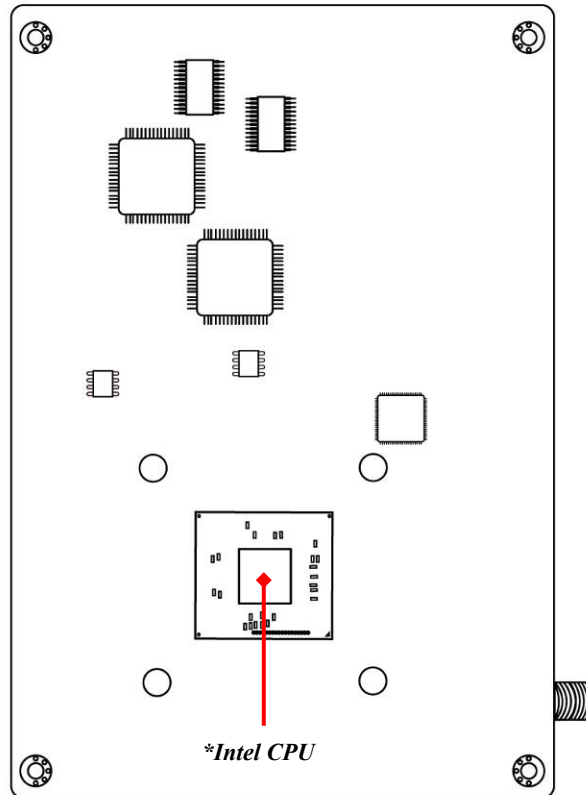

**\*Note:** CPU is the most important part of the board and very fragile to any possible harm. Make sure that there is no damage to the CPU during any installation procedures!

---

---


## Connectors

Connector	Name
DCIN	12V System DC-in Power Jack Connector
USB1	<b>Top:</b> USB 2.0 Port Connector <b>Bottom:</b> USB 3.0 Port Connector
LAN1/2/3/4	RJ-45 LAN Port Connector x 4
COM1	Serial Port Connector
ATX2P	Internal 12V System DC-in Power Connector
SATA1	SATAII Connector
SATAPW	SATA Power out Connector
CPUFAN1	CPUFAN Connector

## Headers

Header	Name	Description
JW_FP	Front Panel Header(PWR LED/ HDD LED/Power Button /Reset)	8-pin Block
SPK-LED1	Power LED & Speaker Header	8-pin Block
LAN_LED	LAN Activity LED Header	8-pin Block
COM2	Serial Port Header	9-pin Block
FP_USB2	USB 2.0 Header	9-pin Block
PS2KBMS	PS/2 Keyboard & Mouse Header	6-pin Block
SMBUS	SMBUS Header	5-pin Block
GPIO_CON	GPIO Port Header	10-pin Block
VGA	VGA Port Header	15-pin Block

## Jumper Positions:

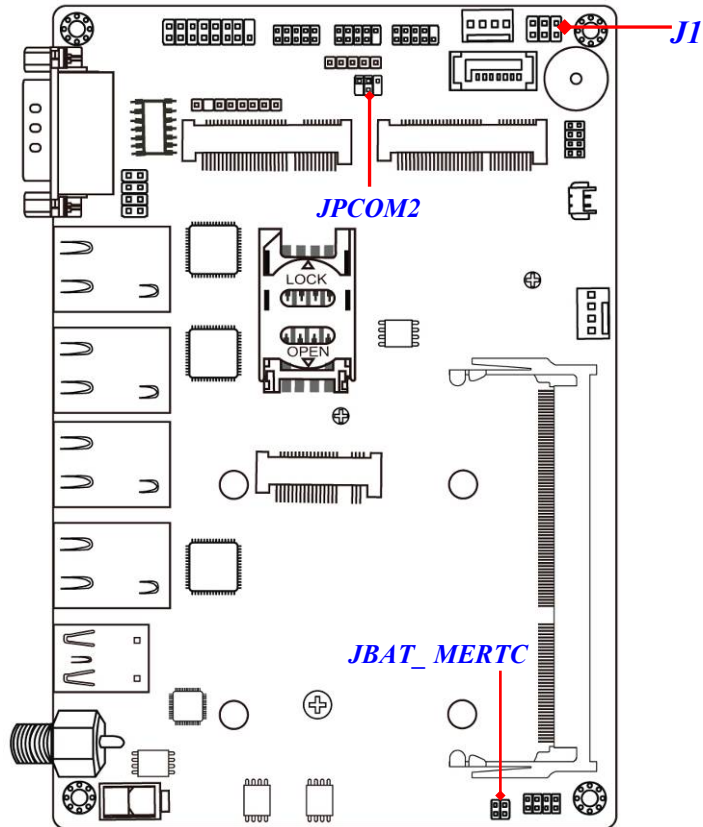

Jumper	Name	Description
<b>JBAT_MERTC</b>	<i>Pin (1&amp;3):</i> Clear ME Function Setting <i>Pin (2&amp;4):</i> Clear CMOS RAM Function Setting	4-Pin Block
<b>J1</b>	<i>Pin (1&amp;2):</i> ATX Mode / AT Mode Select <i>Pin(3&amp;4):</i> Case Open Message Display Function <i>Pin(5&amp;6):</i> ME Security Measure Function Select	6-Pin Block
<b>JPCOM2</b>	COM2 Header Pin9 Function Select	4-Pin Block

---


---

# Chapter 2


## Hardware Installation

### 2-1 Jumper Setting


**Pin (1&3) of JBAT\_MERTC (4-pin): Clear ME Settings**

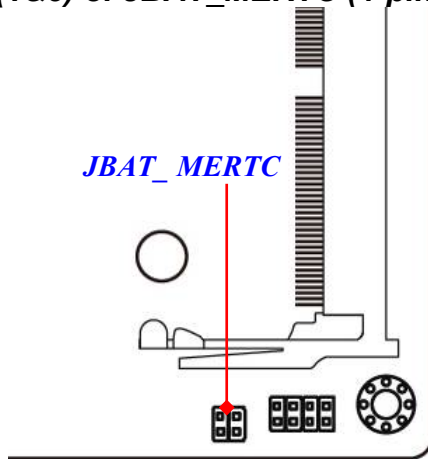

**Pin(1&3) of JBAT\_MERTC → Clear ME**

 


**1-3 Open: Normal(Default);**

 


**1-3 Closed: Clear ME.**


**Pin(2&4) of JBAT\_MERTC (4-pin): Clear CMOS Settings**

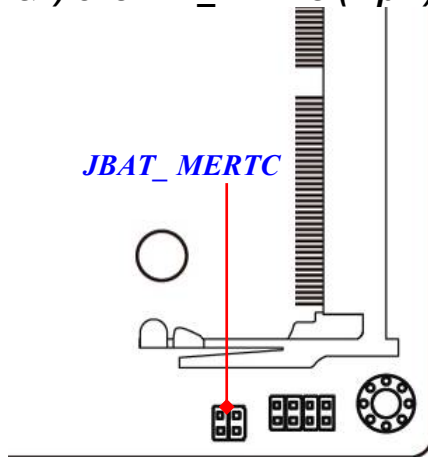

**Pin (2&4) of JBAT\_MERTC → Clear CMOS**

 

**2-4 Open: Normal(Default);**

 


**2-4 Closed: Clear CMOS(One Touch).**

---

---

### Pin (1&2) of J1 (6-pin): ATX Mode/AT Mode Select

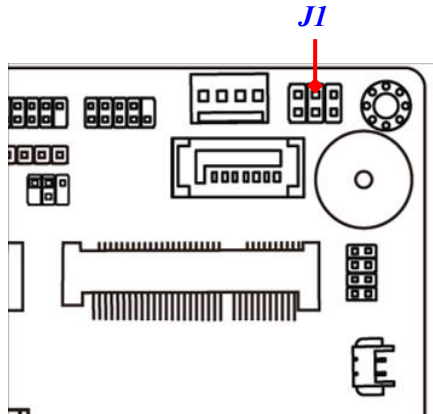

#### Pin (1&2) of J1 → ATX/AT Mode Select



Pin1

1-2 Open: ATX Mode Selected(Default);




Pin1

1-2 Closed: AT Mode Selected.

*\*ATX Mode Selected: Press power button to power on after power input ready;  
AT Mode Selected: Directly power on as power input ready.*

### Pin (3&4) of J1 (6pin):Case Open Message Display Function Select

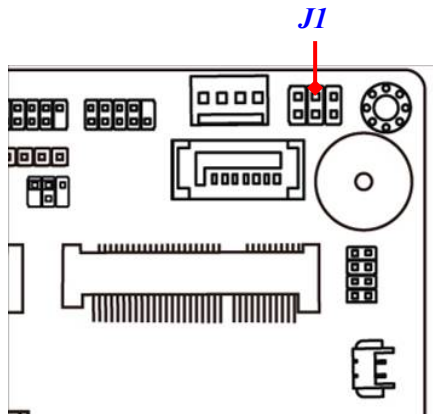

#### Pin (3&4) of J1 → Case Open



Pin1

3-4 Open: Normal(Default);




Pin1


3-4 Closed: Case Open Function.

**Pin (3&4) Closed:** *When Case open function pin short to GND, the Case open function was detected. When used, needs to enter BIOS and enable 'Case Open Detect' function. In this case if your case is removed, next time when you restart your computer, a message will be displayed on screen to inform you of this.*


**Pin (5&6) of J1 (6-pin): ME Security Measure Function Select**

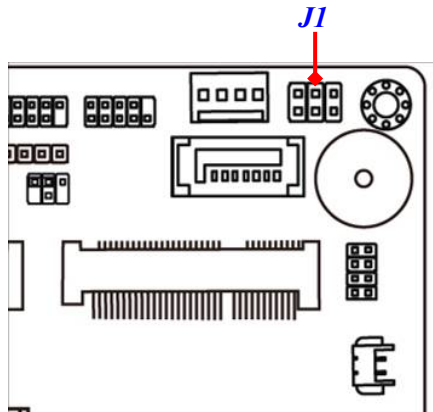

**Pin (5&6) of J1 → ME Security Function Select**

 


 5-6 Open: Enable Security Measures in the Flash Descriptor(Default);




5-6 Closed: Disable Security Measures in the Flash Descriptor(Override).


**JPCOM2 (4-pin): COM2 Header Pin9 Function Select**

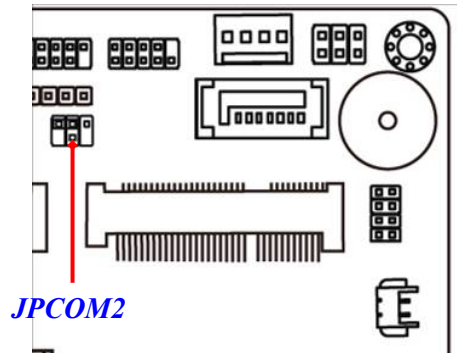


**JPCOM2 → COM2 Header Pin-9**

 

2-4 Closed:  
Pin9= RI (Default);

 

3-4 Closed:  
Pin9=+5V;

 

4-6 Closed:  
Pin9=+12V.


---






---

## 2-2 Connectors and Headers
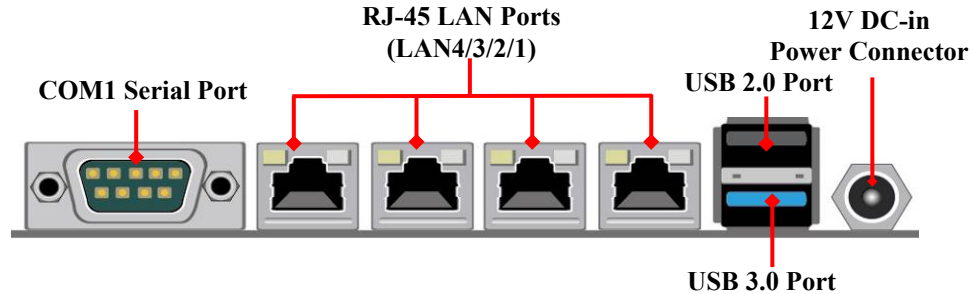
### 2-2-1 Connectors

#### (1) Rear I/O Connectors



 

<i>Icon</i>	<i>Name</i>	<i>Function</i>
	<b>12V DC-in Power Connector</b>	For user to connect compatible power adapter to provide power supply for the system.
	<b>USB 2.0 Port</b>	To connect USB keyboard, mouse or other devices compatible with USB specification.
	<b>USB 3.0 Port</b>	To connect USB keyboard, mouse or other devices compatible with USB specification. USB 3.0 ports supports up to 5Gbps data transfer rate.
	<b>RJ-45 LAN Port</b>	This connector is standard RJ-45 LAN jack for Network connection.
	<b>RS232 Serial Port</b>	Mainly for user to connect external MODEM or other devices that supports Serial Communications Interface.



---

---


## (2) ATX2P (2-pin Block): Internal 12V DC-in Power Connector

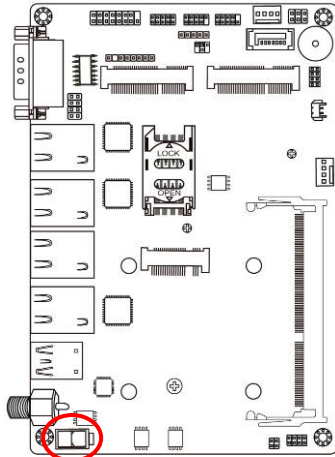


Pin.	Definition
1	GND
2	+12V DC_IN

## (3) SATA1 (7-pin Block): SATAII Port connector

SATA1 port is a high-speed SATAII port that supports 3GB/s transfer rate.

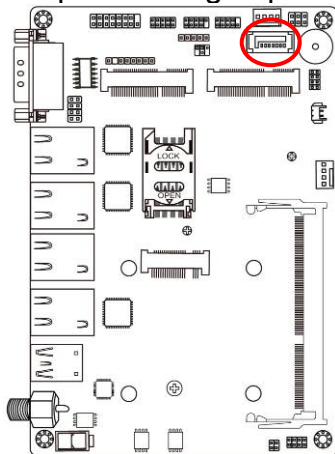



Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

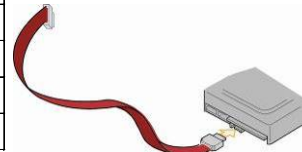

---



---

#### (4) SATAPW (4-pin): SATA Power Out Connector

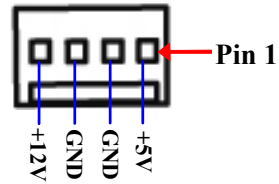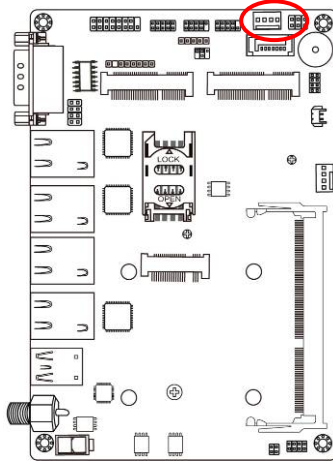

**Warning:** Make sure that Pin-1 of compatible SATA Power connector is inserted into corresponding Pin-1 of SATAPW to avoid possible damage to the board and hard disk driver!

#### (5) CPUFAN (4-pin): CPUFAN Connector

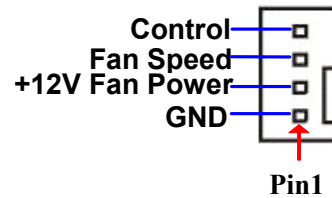
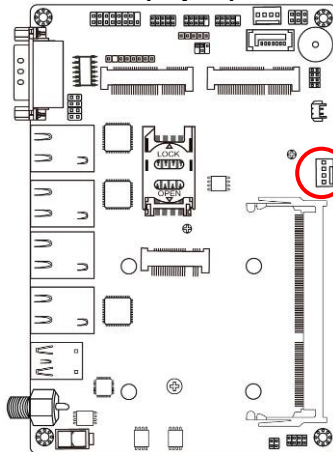


---



---

## 2-2-2 Headers

### (1) JW\_FP (8-pin): Front Panel Header

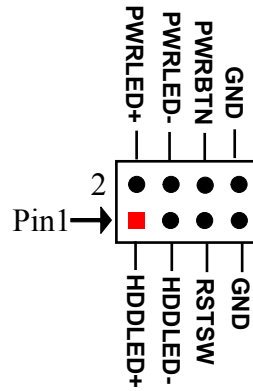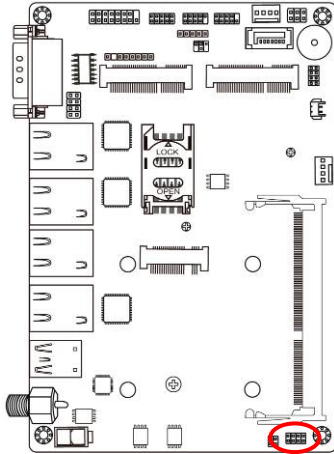



### (2) SPK-LED1 (8-pin): Speaker & Power LED Header

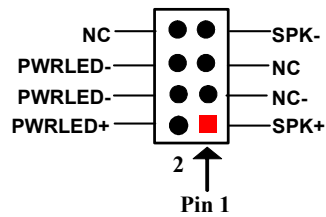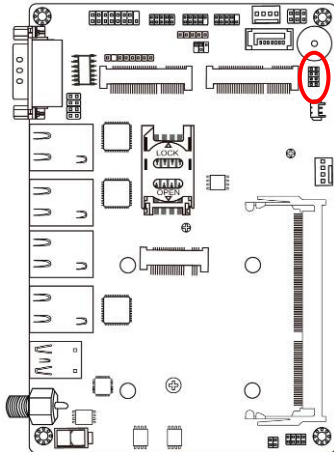



---

---

### (3) LAN\_LED (8-pin): LAN Activity LED Header

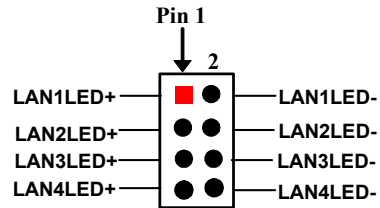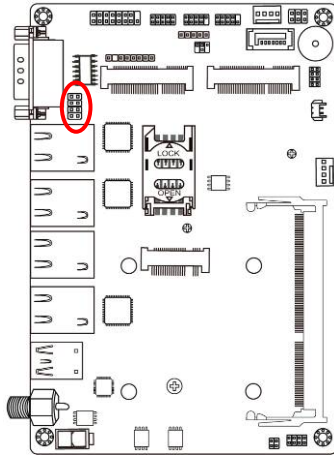



### (4) FP\_USB2 (9-pin): USB 2.0 Port Header

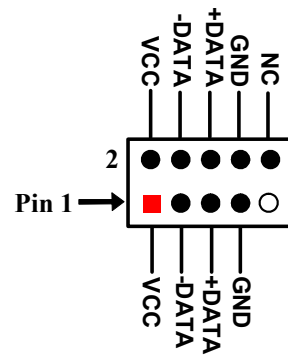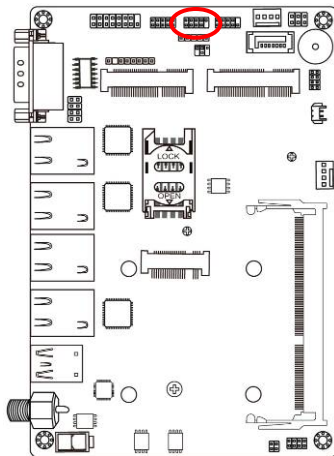

---

---

## (5) COM2 (9-pin): RS232(/422/485) Serial Port Header

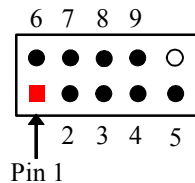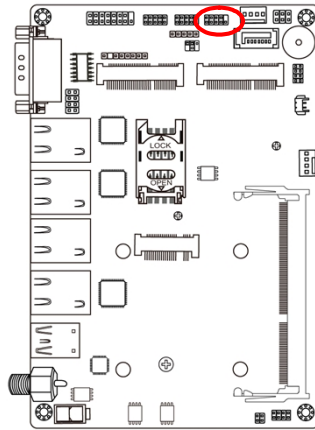



Pin NO.	RS232	*RS422 <i>(optional)</i>	*RS485 <i>(optional)</i>
Pin 1	DCD	TX-	DATA-
Pin 2	RXD	TX+	DATA+
Pin 3	TXD	RX+	NC
Pin 4	DTR	RX-	NC
Pin 5	GND	GND	GND
Pin 6	DSR	NC	NC
Pin 7	RTS	NC	NC
Pin 8	CTS	NC	NC
Pin 9	RI	NC	NC

**\*Notice:** COM2 servers as RS232 serial port header in most cases. RS422 & RS485 function is only optional to customized models. User also needs to go to BIOS to set 'Transmission Mode Select' for COM2 as [RS422] or [RS485] for boards that support RS422/485 function before connecting compatible COM cable to COM2 header.



---

---



**(6) PS2KBMS (6-pin): PS2 Keyboard & Mouse Header**

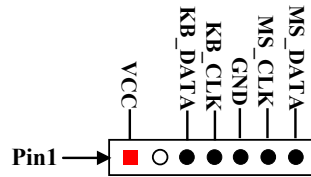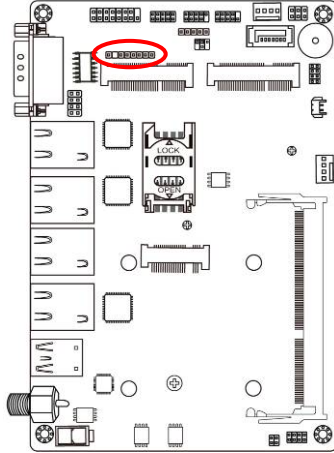



**(7) SMBUS (5-Pin): SM BUS Header**

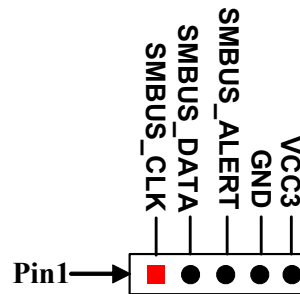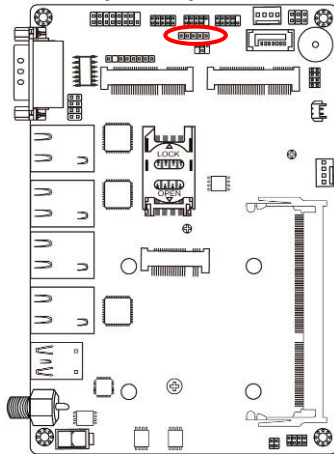

**(8) GPIO\_CON (10-pin): GPIO Header**

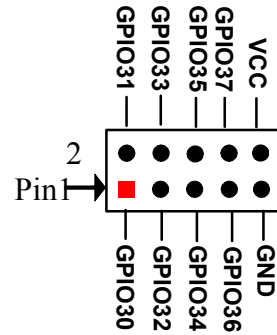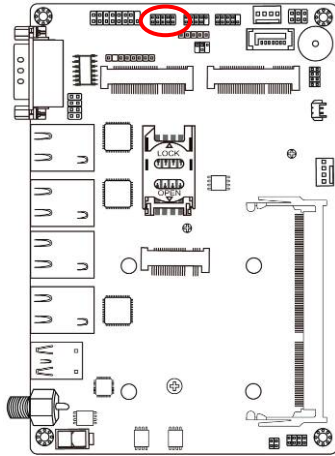

**(9) FP\_VGA(15-pin): VGA Port Header**

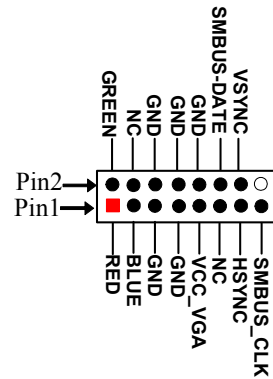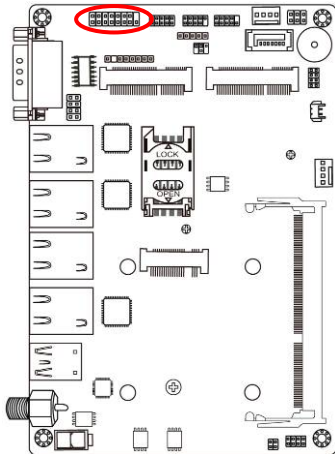

---

---

## Chapter 3

# Introducing BIOS

**Notice!** The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version form our official website.

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

### 3-1 Entering Setup

Power on the computer and by pressing <Del> immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press **<Del>** to enter Setup; press **< F7>** to enter pop-up Boot menu.




---

---

## 3-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen:

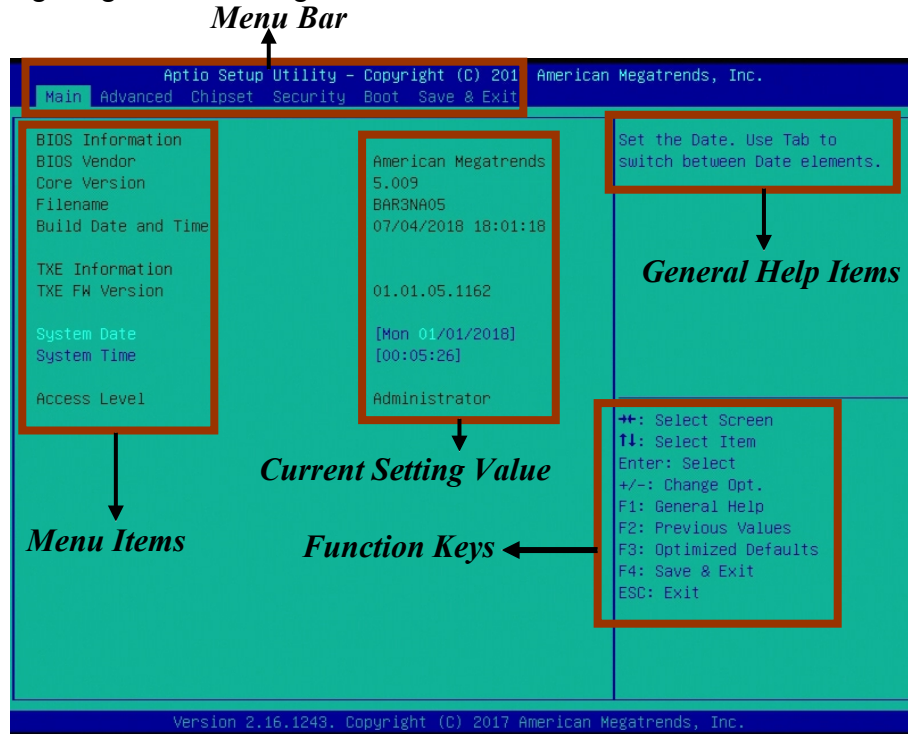

## 3-3 Function Keys

In the above BIOS Setup main menu of, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen;
  - Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
  - Press <Enter> to select.
-

- 
- 
- Press <+>/<-> keys when you want to modify the BIOS parameters for the active option.
  - [F1]: General help.
  - [F2]: Previous value.
  - [F3]: Optimized defaults.
  - [F4]: Save & Exit.
  - [F7]: To enter pop-up boot menu to select boot device.
  - Press <Esc> to quit the BIOS Setup.

## 3-4 Getting Help

### Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

### Status Page Setup Menu/Option Page Setup Menu

Press [F1] to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

## 3-5 Menu Bars

**There are six menu bars on top of BIOS screen:**

<b>Main</b>	To change system basic configuration
<b>Advanced</b>	To change system advanced configuration
<b>Chipset</b>	To change chipset configuration
<b>Security</b>	Password settings
<b>Boot</b>	To change boot settings
<b>Save &amp; Exit</b>	Save setting, loading and exit options.


User can press the right or left arrow key on the keyboard to switch from menu bar. The selected one is highlighted.

---

---

## 3-6 Main Menu

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.

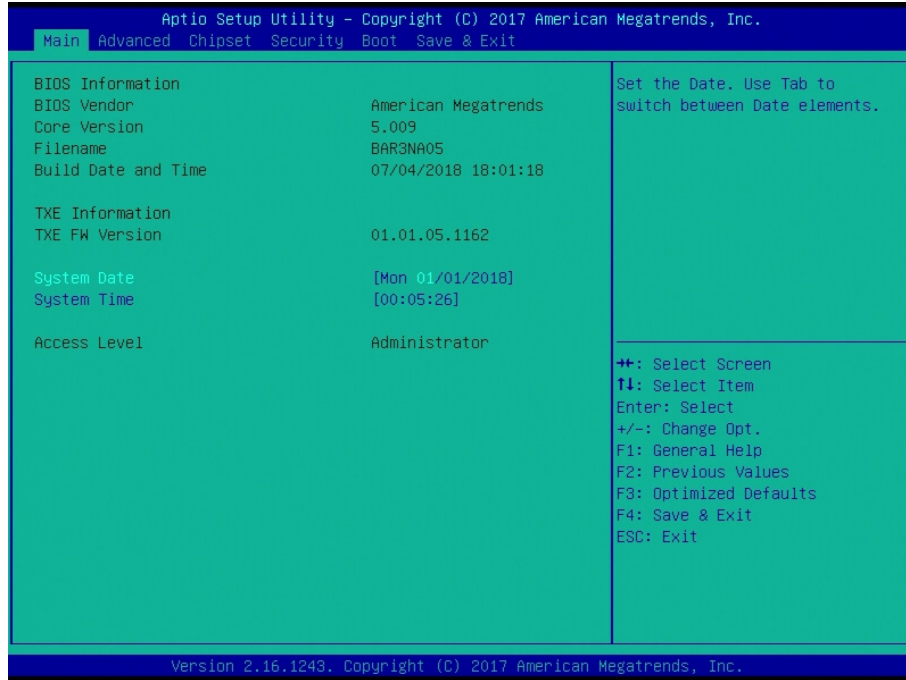

### System Date

Set the date. Please use [Tab] to switch between data elements.

### System Time

Set the time. Please use [Tab] to switch between time elements.


---

---

---

---

## 3-7 Advanced Menu

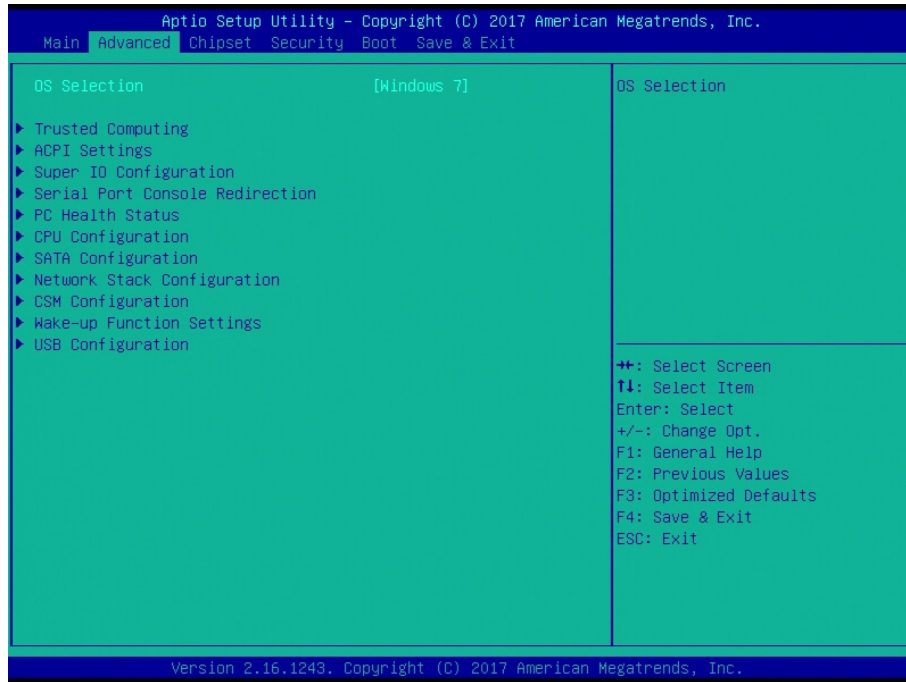

### OS Selection

The optional settings: [Windows 8.X]; [Android]; [Windows 7].

**\*Note:** User needs to go to this item to select OS before installing OS.

If Windows Embedded standard 8, please select [Windows 8x] and set “USB 3.0 Support” as [Disabled], “USB 2.0 Support” as [Enabled] (refer to Page 35).

#### ▶ Trusted Computing

Press [Enter] to view current status information, or make settings in ‘Security Device Support’.

#### Configuration

#### Security Device Support

Use this item to enable or disable BIOS support for security device. O.S. will not

---

---

---

show Security Device. TCG EFI protocol and INT1A interface will not be available.  
The optional settings: [Disabled]; [Enabled].

▶ **ACPI Settings**

Press [Enter] to make settings for the following sub-item:

**ACPI Settings**

**ACPI Sleep State**

Use this item to select the highest ACPI sleep state the system will enter when the suspend button is pressed.

The optional settings are: [Suspend Disabled]; [S3 (Suspend to RAM)].

▶ **Super I/O Configuration**

Press [Enter] to make settings for the following sub-items:

**Super IO Configuration**

▶ **Serial Port 1 Configuration/ Serial Port 2 Configuration**

Press [Enter] to make settings for the following items:

**Serial Port**

Use this item to enable or disable serial port (COM).

The optional settings are: [Disabled]; [Enabled].

**Change Settings**

Use this item to select an optimal setting for super IO device. Changing setting may conflict with system resources.

The optional settings are: [Auto]; [IO=3F8h; IRQ=4]; [IO=2F8h; IRQ=3]; [IO=3E8h; IRQ=4]; [IO=2E8h; IRQ=3].

**Serial Port FIFO Mode**

The optional settings are: [16-Byte FIFO]; [32-Byte FIFO]; [64-Byte FIFO]; [128-Byte FIFO].

**ERP Support**

The optional settings: [Disabled]; [Enabled].

This item should be set as [Disabled] if you wish to have all active wake-up functions.

---

---

### **Case Open Detect**

Use this item to detect case has already open or not, show message in POST.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], system will detect if COPEN has been short or not (refer to Page 9); if COPEN is short, system will show Case Open Message during POST.

### **WatchDog Reset Timer**

Use this item to enable or disable WDT reset function. When set as [Enabled], the following sub-items shall appear:

#### **WatchDog Reset Timer Value**

User can select a value in the range of [10] to [255] seconds when 'WatchDog Reset Timer Unit' set as [Sec]; or in the range of [1] to [255] minutes when 'WatchDog Reset Timer Unit' set as [Min].

#### **WatchDog Wake-up Timer**

This item support WDT wake-up while ERP function is set as [Enabled].

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], the following sub-items shall appear:

#### **WatchDog Wake-up Timer Value**

The setting range is [10] ~ [4095] seconds, or [1] ~ [4095] minutes.

#### **WatchDog Wake-up Timer Unit**

The optional settings are: [Sec.]; [Min.].

### **ATX Power Emulate AT Power**

This item displays current Emulate AT Power Status, motherboard power On/Off control by power supply. User needs to select 'ATX/AT Mode' on MB jumper at first (refer to **Page 9, Pin (1&2) of J1** for ATX Mode /AT Mode Select).

### **COM1/COM2**

#### **Console Redirection**

The optional settings: [Disabled]; [Enabled]. When set as [Enabled], the following sub-items shall appear:

##### **▶ Console Redirection Settings**

---

---

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following items:

### **Terminal Type**

The optional settings: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

Emulation: [ANSI]: Extended ASCII char set; [VT100]: ASCII char set; [VT100+]: Extends VT100 to support color, function keys, etc.; [VT-UTF8]: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.

### **Bits per second**

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings: [9600]; [19200]; [38400]; [57600]; [115200].

### **Data Bits**

The optional settings: [7]; [8].

### **Parity**

A parity bit can be sent with the data bits to detect some transmission errors.

The optional settings: [None]; [Even]; [Odd]; [Mark]; [Space].

[Even]: parity bit is 0 if the num of 1's in the data bits is even; [Odd]: parity bit is 0 if num of 1's in the data bits is odd; [Mark]: parity bit is always 1; [Space]: Parity bit is always 0; [Mark] and [Space] Parity do not allow for error detection.

### **Stop Bits**

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

The optional settings: [1]; [2].

### **Flow Control**

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

---

---

The optional settings: [None]; [Hardware RTS/CTS].

### **VT-UTF8 Combo Key Support**

Use this item to enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

The optional settings: [Disabled]; [Enabled].

### **Recorder Mode**

With this mode enable only text will be sent. This is to capture Terminal data.

The optional settings: [Disabled]; [Enabled].

### **Resolution 100x31**

Use this item to enable or disable extended terminal resolution.

The optional settings: [Disabled]; [Enabled].

### **Legacy OS Redirection Resolution**

On Legacy OS, the Number of Rows and Columns supported redirection.

The optional settings: [80x24]; [80x25].

### **Putty KeyPad**

Use this item to select FunctionKey and KeyPad on Putty.

The optional settings: [VT100]; [LINUX]; [XTERMR6]; [SCO]; [ESCN]; [VT400].

### **Redirection After BIOS POST**

The optional settings are: [Always Enable]; [BootLoader].

When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When Always Enable is selected, then Legacy Console is enabled for legacy OS. Default setting for this option is set to Always Enable.

### **Legacy Console Redirection**

#### **▶ Legacy Console Redirection Settings**

Press [Enter] to make settings in Legacy Console Redirection Settings.

### **Legacy Serial Redirection Port**

Use this item to select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

The optional settings: [COM1]; [COM2].



---

---

## **Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)**

### **Console Redirection**

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], user can make further settings in ‘Console Redirection Settings’:

#### ▶ **Console Redirection Settings**

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following sub-items.

#### **Out-of-Band Mgmt Port**

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

The optional settings: [COM1]; [COM2].

#### **Terminal Type**

The optional settings: [VT100]; [VT100+]; [VT-UTF8]; [ANSI].

[VT-UTF8] is the preferred terminal type for out-of-band management. The next best choice is [VT100+] and then [VT100]. See above, in Console Redirection Settings page, for more help with Terminal Type/Emulation.

#### **Bits per second**

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings are: [9600]; [19200]; [57600]; [115200].

#### **Flow Control**

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a “stop” signal can be sent to stop the data flow. Once the buffers are empty, a “start” signal can be sent to re-start the flow.

---

---

---

Hardware flow control uses two wires to send start/stop signals.  
The optional settings are: [None]; [Hardware RTS/CTS]; [Software Xon/Xoff].

**Data Bits**

The default setting is: [8].

*\*This item may or may not show up, depending on different configuration.*

**Parity**

The default setting is: [None].

*\*This item may or may not show up, depending on different configuration.*

**Stop Bits**

The default setting is: [1].

*\*This item may or may not show up, depending on different configuration.*

▶ **PC Health Status**

Press [Enter] to view current hardware health status, set shutdown temperature, or make further settings in '**Smart Fan Configuration**'.

▶ **SmartFAN Configuration**

Press [Enter] to make settings for '**SmartFAN Configuration**':

**CPUFAN Smart Mode**

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], the following sub-items shall appear:

**CPUFAN Full-Speed Temperature**

Use this item to set CPUFAN full speed temperature. Fan will run at full speed when above the preset temperature.

**CPUFAN Full-Speed Duty**

Use this item to set CPUFAN full speed duty. Fan will run at full speed when above the pre-set duty.

**CPUFAN Idle-Speed Temperature**

Use this item to set CPUFAN idle speed temperature. Fan will run at idle speed when below the pre-set temperature.

**CPUFAN Idle-Speed Duty**

Use this item to set CPUFAN idle speed duty. Fan will run at idle speed when below the pre-set duty.

---

---

## Shutdown Temperature Configuration

Use this item to select system shutdown temperature.

The optional settings are: [Disabled]; [70°C/158°F]; [75°C/167°F]; [80°C/176°F]; [85°C/185°F]; [90°C/194°F].

### ▶ CPU Configuration

Press [Enter] to view current CPU configuration and make settings for the following sub-items:

#### Limit CPUID Maximum

The optional settings: [Disabled]; [Enabled].

This item should be set as [Disabled] for Windows XP.

#### Execute Disable Bit

The optional settings: [Disabled]; [Enabled].

#### Hardware Prefetcher

The optional settings are: [Disabled]; [Enabled].

Use this item to turn on/off the Mid Level Cache (L2) streamer prefetcher.

#### Adjacent Cache Line Prefetch

The optional settings are: [Disabled]; [Enabled].

Use this item to turn on/off prefetching of adjacent cache lines.

#### EIST

The optional settings: [Disabled]; [Enabled].

Use this item to enable or disable Intel SpeedStep.

#### CPU C State Report

Use this item to enable or disable CPU C state report to OS.

The optional settings: [Disabled]; [Enabled].

*When set as [Enabled], the following item shall appear:*

#### Enhanced C State

Use this item to enable or disable Enhanced CPU State.

The optional settings: [Disabled]; [Enabled].

#### Max CPU C State

This item controls Max C state that the processor will support.

The optional settings: [C7]; [C6]; [C1].

---

---

---

▶ **SATA Configuration**

Press [Enter] to make settings for the following sub-items:

**SATA Configuration**

**SATA Controller**

The optional settings are: [Enabled]; [Disabled].

*When set as [Enabled], the following items shall appear:*

**SATA Speed Support**

The item is for user to set the maximum speed the SATA controller can support.

The optional settings are: [Gen1]; [Gen2].

**SATA Mode**

The optional settings are: [IDE Mode]; [AHCI Mode].

**SATA Port/ m-SATA/M.2 SATA**

The optional settings are: [Enabled]; [Disabled].

▶ **Network Stack Configuration**

Press [Enter] to go to 'Network Stack' screen to make further settings.

**Network Stack**

The optional settings are: [Enabled]; [Disabled].

When set as [Enabled], the following sub-items shall appear:

**Ipv4 PXE Support**

The optional settings are: [Disabled]; [Enabled].

Use this item to enable Ipv4 PXE Boot Support. When set as [Disabled], Ipv4 boot optional will not be created.

**Ipv6 PXE Support**

The optional settings are: [Disabled]; [Enabled].

Use this item to enable Ipv6 PXE Boot Support. When set as [Disabled], Ipv6 boot optional will not be created.

**PXE boot wait time**

Use this item to set wait time to press [ESC] key to abort the PXE boot.

▶ **CSM Configuration**

Press [Enter] to make settings for the following sub-items:

**Compatibility Support Module Configuration**

---

---

---

---

### **Boot Option Filter**

This item controls Legacy/UEFI ROMs priority.

The optional settings are: [UEFI and Legacy]; [Legacy only]; [UEFI only].

### **Network**

This item controls the execution of UEFI and legacy PXE OpROM.

The optional settings are: [Do not launch]; [UEFI only]; [Legacy only].

### **Storage**

This item controls the execution of UEFI and Legacy Storage OpROM.

The optional settings are: [Do not launch]; [UEFI only]; [Legacy only].

### **Other PCI devices**

This item determines OpROM execution policy for devices other than Network, storage or video.

The optional settings are: [UEFI first]; [Legacy first].

### ▶ **Wake-up Function Settings**

Press [Enter] to make settings for the following sub-items:

#### **Wake-up System with Fixed Time**

Use this item to enable or disable system wake-up by RTC alarm.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the hour/min/sec specified.

#### **Wake-up System with Dynamic Time**

Use this item to enable or disable system wake-up by RTC alarm.

The optional settings: [Disabled]; [Enabled].

When set as [Enabled], system will wake on the current time + increased minute(s). The settings range is from [1] ~ [60] minute(s).

#### **USB(S3-S4)/PS2(S3-S5) Wake-up**

Use this item to enable or disable USB Wake-up from S3-S4/PS/2 device wake up from S3-S5.

The optional settings: [Disabled]; [Enabled].

*\*USB Wake-up is affected by ERP function in S4. Please set 'ERP Support' as [Disabled] before activating this function in S4.*

---

---

▶ **USB Configuration**

Press [Enter] to make settings for the following sub-items:

**USB Configuration**

**Legacy USB Support**

The optional settings are: [Enabled]; [Disabled]; [Auto].

**[Enabled]:** To enable legacy USB support.

**[Disabled]:** To keep USB devices available only for EFI specification,

**[Auto]:** To disable legacy support if no USB devices are connected.

**XHCI Hand-off**

This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

The optional settings are: [Enabled]; [Disabled].

**EHCI Hand-off**

This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

The optional settings are: [Disabled]; [Enabled].

**USB Mass Storage Driver Support**

The optional settings are: [Disabled]; [Enabled].

**USB Hardware Delays and Time-outs:**

**USB Transfer Time-out**

Use this item to set the time-out value for control, bulk, and interrupt transfers.

The optional settings are: [1 sec]; [5 sec]; [10 sec]; [20 sec].

**Device Reset Time-out**

Use this item to set USB mass storage device start unit command time-out.

The optional settings are: [10 sec]; [20 sec]; [30 sec]; [40 sec].

**Device Power-up Delay**

Use this item to set maximum time the device will take before it properly reports itself to the host controller.

The optional settings are: [Auto]; [Manual].

**[Auto]:** uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor.

---


---

Select **[Manual]** you can set value for the following sub-item: '**Device Power-up Delay in Seconds**'.

### **Device Power-up Delay in Seconds**

The delay range is from [1] to [40] seconds, in one second increments.

## **3-8 Chipset Menu**

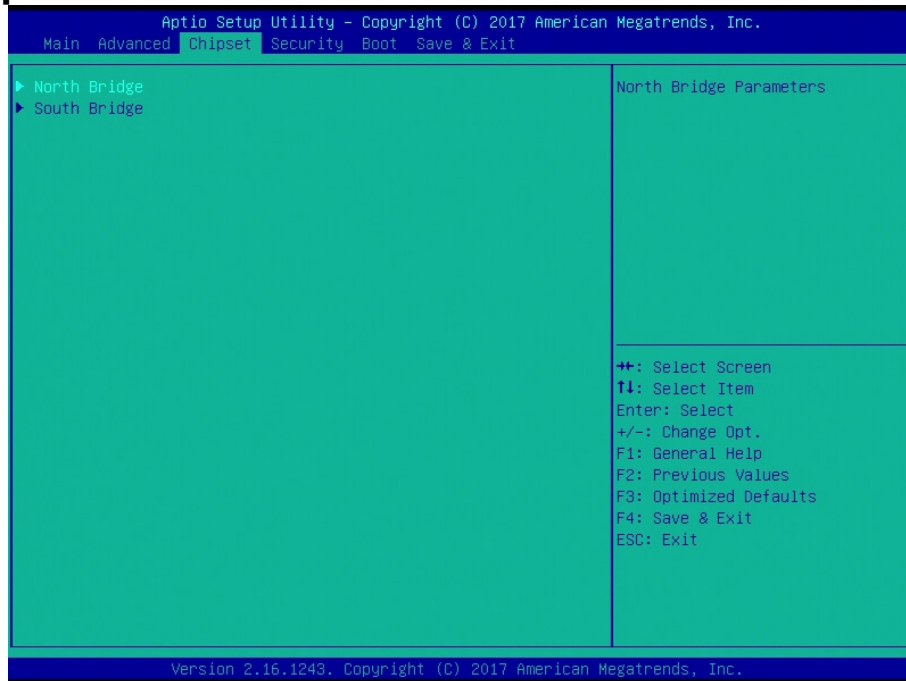

### ▶ **North Bridge**

Press [Enter] to make settings for the following sub-items:

#### **PAVC**

Use this item to enable or disable protected audio video control.

The optional settings are: [Disabled]; [LITE Mode]; [SERPENT Mode].

#### **DVMT Pre-Allocated**

Use this item to select DVMT 5.0 pre-allocated (fixed) graphics memory size used

---

---

by the internal graphics device.

The optional settings are: [64M]; [96M]; [128M]; [160M]; [192M]; [224M]; [256M]; [288M]; [320M]; [352M]; [384M]; [416M]; [448M]; [480M]; [512M].

#### **DVMT Total Gfx Mem**

Use this item to select DVMT 5.0 total graphics memory size used by the internal graphics device.

The optional settings are: [128M]; [256M]; [MAX].

#### **Aperture Size**

The optional settings are: [128MB]; [256MB]; [512MB].

#### **GTT Size**

The optional settings are: [1MB]; [2MB].

### ▶ **South Bridge**

Press [Enter] to make further settings in south bridge parameters.

#### **Mini PCIE1/Mini PCIE2**

The optional settings are: [Enabled]; [Disabled].

#### **Onboard PCIE LAN1/ Onboard PCIE LAN2/ Onboard PCIE LAN3/ Onboard PCIE LAN4**

The optional settings are: [Enabled]; [Disabled].

### ▶ **USB Configuration**

Press [Enter] to make settings for the following sub-items:

#### **USB Configuration**

##### **USB 3.0 Support**

Use this item to select mode of operation of XHCI controller.

The optional settings are: [Enabled]; [Auto]; [Disabled].

\* **Note:** When set as [Disabled] or [Auto], user can make further settings in '**USB 2.0 Support**'.

##### **USB 2.0 Support**

Use this item to control the USB 2.0 functions.

The optional settings are: [Enable]; [Disabled].

#### **System State after Power Failure**

Use this item to select AC power state when power is re-applied after a power

---



---


---

failure.

The optional settings are: [Always Off]; [Always On]; [Former State].

\* *The option [Always On] and [Former State] are affected by ERP function. Please disable ERP to support [Always On] and [Former State] function.*

## 3-9 Security Menu

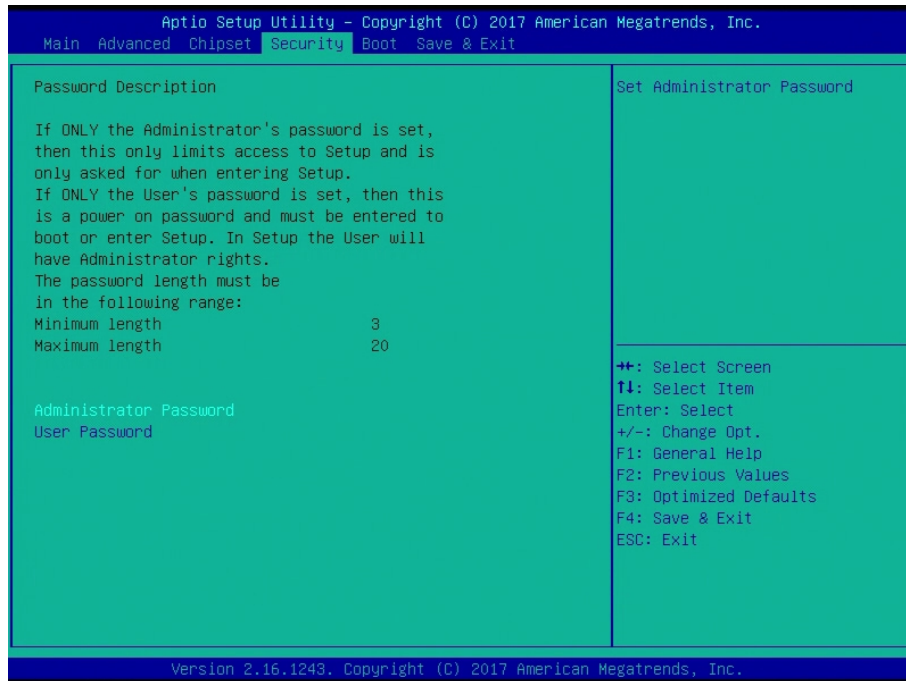

Security menu allow users to change administrator password and user password settings.

### **Administrator Password**

Press [Enter] to create new administrator password. Press again to confirm the new administrator password.

### **User Password**

Press [Enter] to create new user password. Press again to confirm the new user


---

---

---

password.

## 3-10 Boot Menu

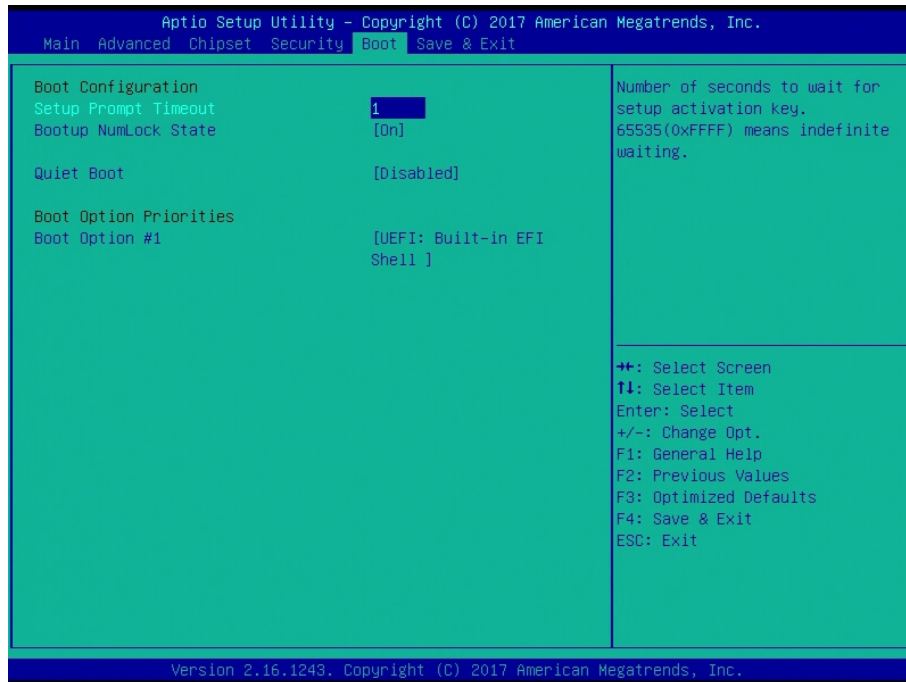

### **Boot Configuration**

#### **Setup Prompt Timeout**

Use this item to set number of seconds to wait for setup activation key.

#### **Bootup Numlock State**

Use this item to select keyboard numlock state.

The optional settings are: [On]; [Off].

#### **Quiet Boot**

The optional settings are: [Disabled]; [Enabled].


### **Boot Option Priorities**

---

## Boot Option #1/ Boot Option #2...

Use this item to decide system boot order from available options.

## 3-11 Save & Exit Menu

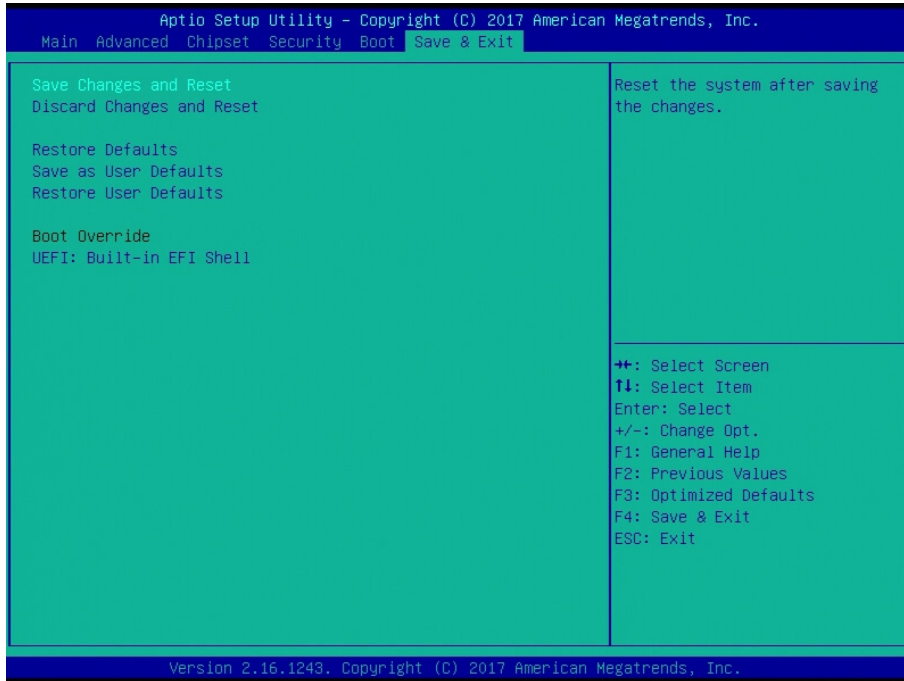

### Save Changes and Reset

This item allows user to reset the system after saving the changes.

### Discard Changes and Reset

This item allows user to reset the system without saving any changes.

### Restore Defaults

Use this item to restore /load default values for all the setup options.

### Save as User Defaults

Use this item to save the changes done so far as user defaults.

---

---

---

### **Restore User Defaults**

Use this item to restore the user defaults to all the setup options.

### **Boot Override**

#### **Boot Override**

**UEFI:xx/...**

Press this item to select the device as boot disk after save configuration and reset.