

TECHNICAL MANUAL
Of
Intel Cedar Trail-D & NM10 Chipset
Based
Mini-ITX M/B for ATOM Processor

NO. G03-NF9D-F

Revision: 2.0

Release date: March 20, 2012

Trademark:

* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

Environmental Protection Announcement

Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.

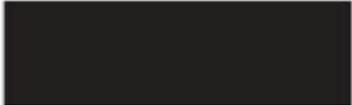


TABLE OF CONTENT

ENVIRONMENTAL SAFETY INSTRUCTION.....	iii
USER'S NOTICE	iv
MANUAL REVISION INFORMATION.....	iv
ITEM CHECKLIST	iv
CHAPTER 1 INTRODUCTION OF THE MOTHERBOARD	
1-1 FEATURE OF MOTHERBOARD.....	1
1-2 SPECIFICATION	2
1-3 LAYOUT DIAGRAM.....	3
CHAPTER 2 HARDWARE INSTALLATION	
2-1 JUMPER SETTING	6
2-2 CONNECTORS AND HEADERS.....	11
2-2-1 CONNECTORS	11
2-2-2 HEADERS	12
CHAPTER 3 INTRODUCING BIOS	
3-1 ENTERING SETUP.....	20
3-2 BIOS MENU SCREEN	20
3-3 FUNCTION KEYS	21
3-4 GETTING HELP	22
3-5 MENU BAR.....	22
3-6 MAIN MENU	23
3-7 ADVANCED MENU.....	24
3-8 CHIPSET MENU.....	30
3-9 BOOT MENU	32
3-10 SECURITY MENU	33
3-11 SAVE & EXIT MENU.....	34



Environmental Safety Instruction

- Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- 0 to 60 centigrade is the suitable temperature. (The figure comes from the request of the main chipset)
- Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.
- Attention to the heat sink when you over-clocking. The higher temperature may decrease the life of the device and burned the capacitor.

USER'S NOTICE

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

Reversion	Revision History	Date
1.0	First Edition	January 12, 2012

Item Checklist

- Motherboard
- User's Manual
- DVD for motherboard utilities
- Cable(s)
- I/O Back panel shield

Chapter 1

Introduction of the Motherboard

1-1 Feature of Motherboard


- Intel Cedar Trail-D and NM10 chipset, with low power consumption never denies high performance
- Support two DDRIII 800/1066MHz SO-DIMM up to 4GB
- Support 2 * Serial ATAII (3Gb/s) Devices and 2 * Serial ATAIII (6Gb/s) Devices
- Onboard dual Realtek RTL 8111EVL Gigabit Ethernet LAN chip
- Integrated ALC662-GR 6-channel HD audio CODEC
- Support USB 2.0 data transport demands
- Support PCI slot and mini-PCIE slot
- Support daughter board expansion
- Support Watchdog function
- Support Smart Fan function
- Compliance with ErP standard


1-2 Specification

Spec	Description
Design	<ul style="list-style-type: none"> ● Mini-ITX form factor; PCB size: 17.0x17.0cm
Chipset	<ul style="list-style-type: none"> ● Intel® NM10 Express chipset
Embedded CPU	<ul style="list-style-type: none"> ● Intel Cedar Trail-D Processor
Memory Slot	<ul style="list-style-type: none"> ● DDRIII SO-DIMM slot x 2 ● Support two DDRIII 800/1066 MHz SO-DIMM with memory capacity expandable to 4GB
Expansion Slot	<ul style="list-style-type: none"> ● 32-bit PCI slot x 1 ● Mini-PCIE slot x1
Dual LAN Chip	<ul style="list-style-type: none"> ● Integrated with two Realtek RTL8111EVL PCI-E Gigabit LAN chips ● Support Fast Ethernet LAN function of providing 10/100/1000Mbps Ethernet data transfer rate
Audio Chip	<ul style="list-style-type: none"> ● Realtek ALC662-GR 6-channel Audio Codec integrated ● Audio driver and utility included
BIOS	<ul style="list-style-type: none"> ● AMI 16MB DIP Flash ROM
Multi I/O	<ul style="list-style-type: none"> ● PS/2 keyboard/ mouse combo connector x1 ● VGA port connector x1 ● Serial port connector x 1 ● USB 2.0 port connector x4 ● RJ-45 LAN connector x2 ● HDMI port connector x1 ● Audio connector x3 (Line-in, Line-out, MIC) ● SATAII port connector x2 ● SATAIII port connector x2 ● Front panel audio header x1 ● CDIN header x 1 ● HDMI_SPDIF header x1 ● Serial port header x1 ● RS232/422/RS485 header x1 ● 4-pin USB 2.0 header x1

	<ul style="list-style-type: none"> ● 9-pin USB 2.0 header x1 ● GPIO header x1 ● LVDS inverter x1 ● 24-bit single channel LVDS header x1 ● PWRLED header x1 ● Speaker header x1 ● Front panel header x1 ● Parallel header x1 ● Jetway daughter board header x 2
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1-3 Layout Diagram

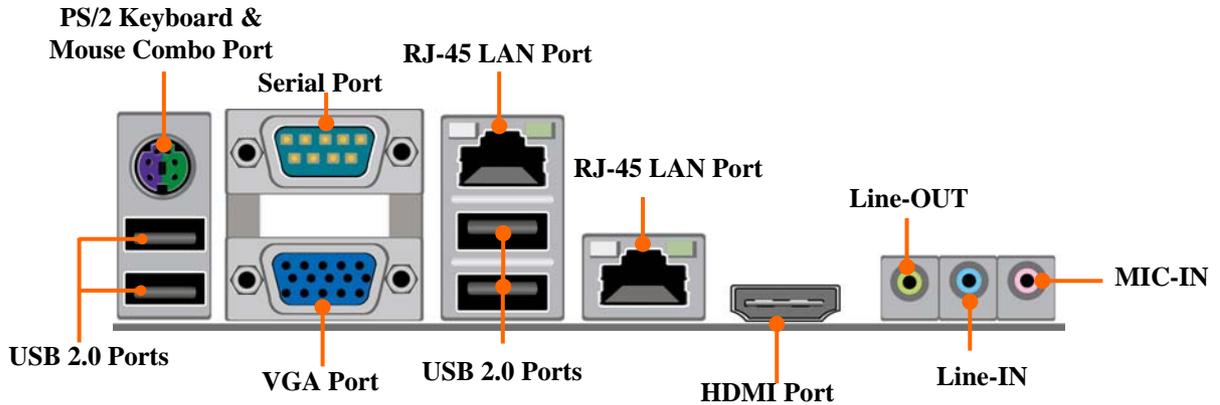

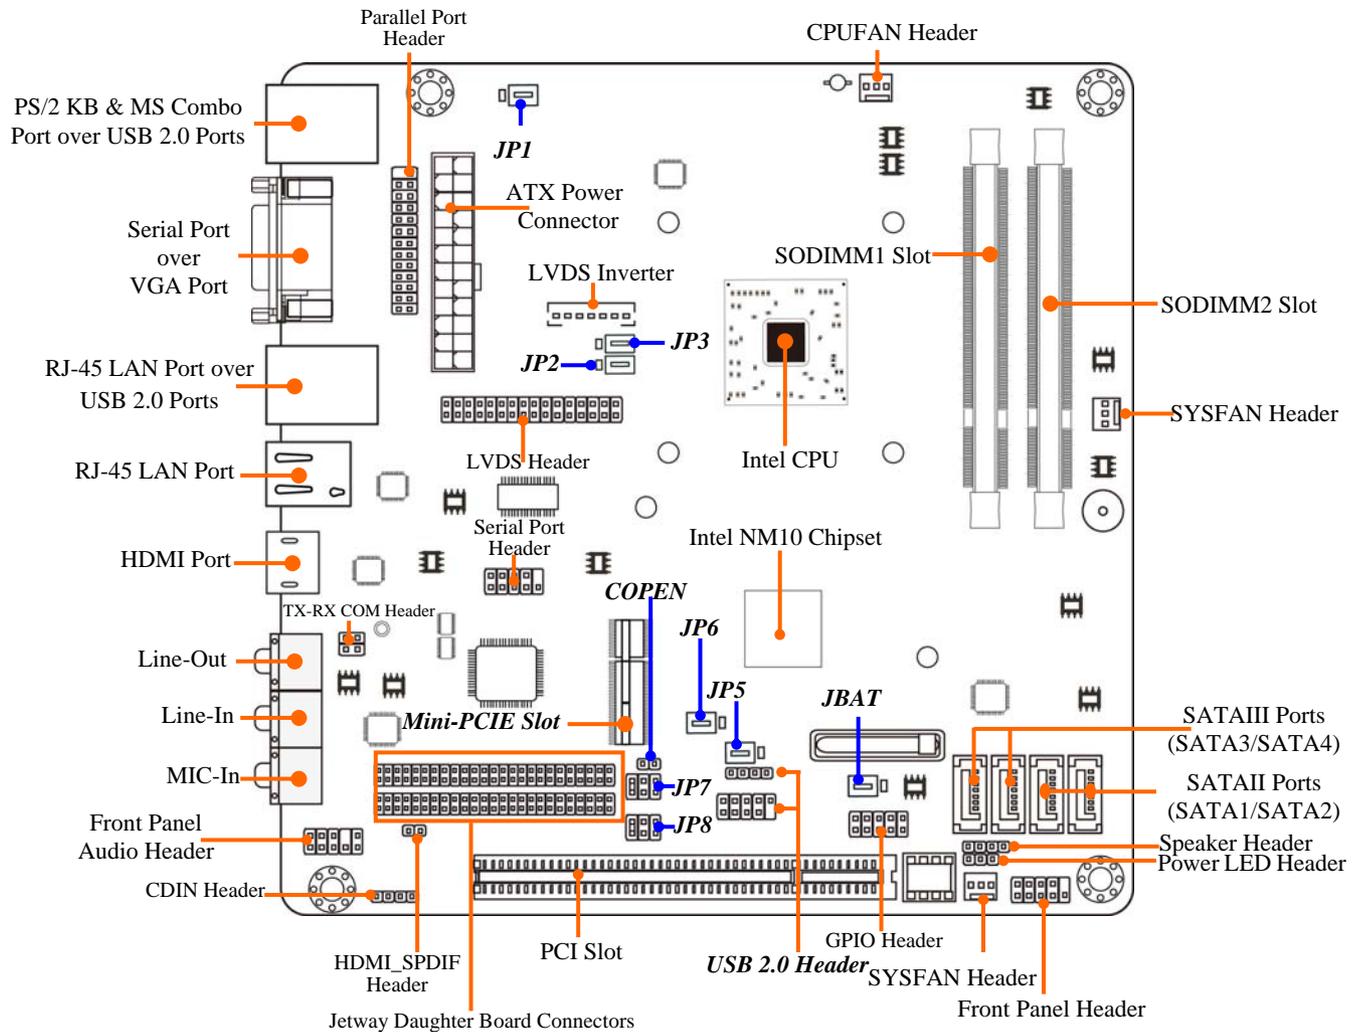

Jumper

Jumper	Name	Description
JBAT	CMOS RAM Clear Function Setting	3-pin Block
JP1	K/B, USB Power On Function Setting	3-pin Block
JP2	LVDS PVCC 5V/3.3V Select	3-pin Block
JP3	Inverter12V/5V Select	3-pin Block
JP5	USB 2/3 Header Power On Function Setting	3-pin Block
JP6	MINIPCIE Power SB 3.3V/3.3V Select	3-pin Block
JP7	COM2 RS232 Power Select	6-pin Block
JP8	COM2 RS232/422/485 Function Select	6-pin Block

Connectors

Connector	Name	Description
ATXPWR1	ATX Power Connector	24-pin Connector
KB & MS combined connector from UK1	PS2 Keyboard & Mouse Connector	6-pin Female
VGA	Video Graphic Attach Connector	15-pin Female
COM1	Serial Port Connector	9-pin Connector
HDMI	High-Definition Multimedia Interface	10-pin Connector
USB from UK1, UL1	USB Port Connector	4-pin Connector
LAN from LAN1, UL1	RJ-45 LAN Connector	8-pin Connector
AUDIO	Line-in/Line-out/MIC	3-phone Jack
SATA1,2	Serial ATAII Connector	7-pin Connector
SATA3/SATA4	Serial ATAIII Connector	7-Pin Connector

Headers

Header	Name	Description
FP-AUDIO1	Front Panel Audio Header	9-pin block
CDIN1	CD Audio-In Header	4-pin block
SPDIF	SPDIF Out header	2-pin block
USB2	USB 2.0 Header	4-pin Block
USB3	USB 2.0 Header	9-pin Block
GPIO_CON	GPIO Header	10-pin Block


COM2	Serial Port Header	9-pin Block
TX_RX COM	RS 232/422/485 port headers	4-pin block
PWR LED	Power LED	3-pin Block
SPEAK	Speaker Header	4-pin Block
JW_FP	Front Panel Header(PWR LED/ HD LED/ /Power Button /Reset)	9-pin Block
LVDS	LVDS Header	32-pin Block
INVERTER	LVDS Inverter Connector	7-pin Block
CPUFAN,SYSFAN1/2	FAN Speed Headers	3-pin Block
PARALLEL	Parallel Port Header	25-pin Block
CN1; CN2	Jetway Daughter Card Connector	50-pin *2 Block

Chapter 2

Hardware Installation

2-1 Jumper Setting

(1) JBAT (3-pin): Clear CMOS

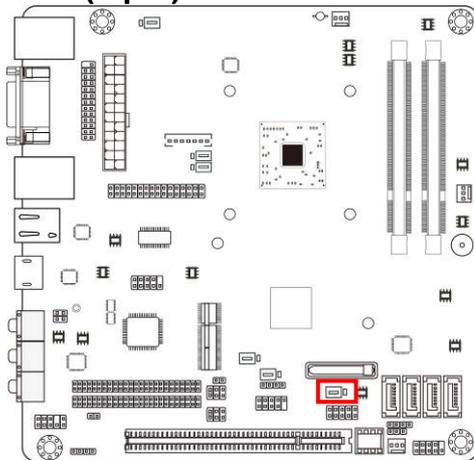

JBAT




1-2 closed: Normal;

JBAT



2-3 closed : Clear CMOS

(2) JP1 (3-pin): K/B, USB Power on Function Setting

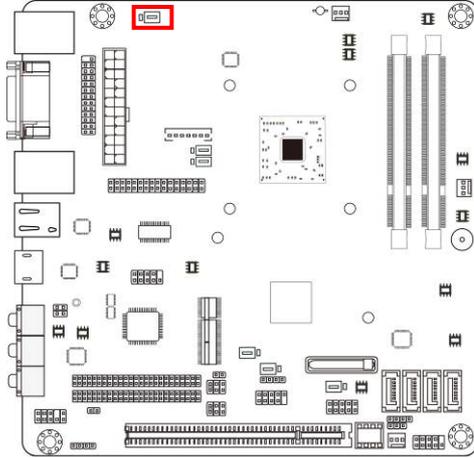

JP1




1-2 Closed: K/B, USB Power-On Disabled(default)

JP1



2-3 closed:K/B, USB Power-On Enabled

(3) JP2 (3-pin): LVDS PVCC 5V/3.3V Select

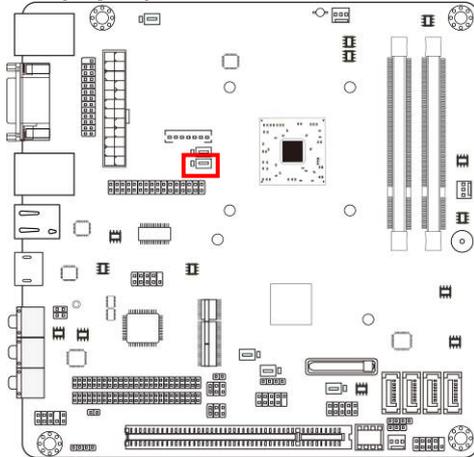

JP2




1-2 Closed: LVDS VCC= 5V;

JP2



2-3 Closed : LVDS VCC=3.3V

(4) JP3 (3-pin): Inverter VCC 5V/12V select

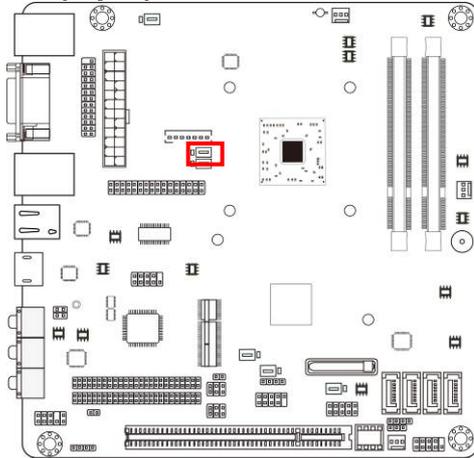

JP3




JP3



1-2 Closed: Inverter 12V Select; 2-3 Closed : Inverter 5V Select

(5) JP5 (3-pin): USB2/3 Header Power on Function Setting

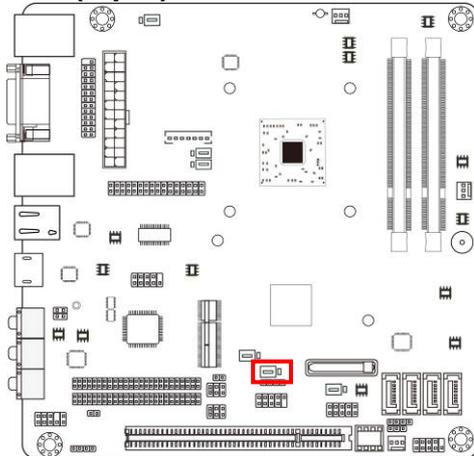

JP5




1-2 Closed : USB 2/3 Header Power-On Disabled(default)

JP5



2-3 Closed: USB 2/3 Header Power-On Enabled

(6) JP6(3-pin): Mini PCI-E Power VCC3.3V/ 3.3 V SB Select

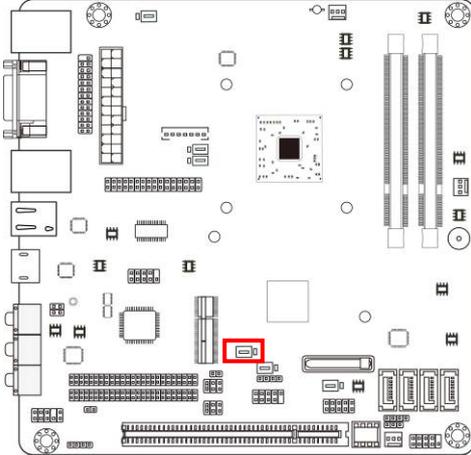

JP6




1-2 Closed : MINI PCI-E VCC= 3.3V Select;

JP6




2-3 Closed : MINI PCI-E VCC= 3.3VSB Select

(7) JP7 (6-pin): COM2 Pin9 Function Select

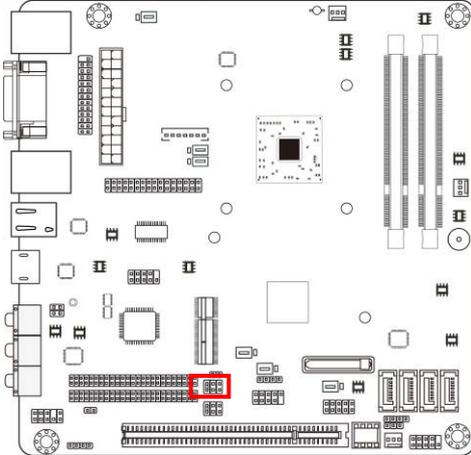


JP7

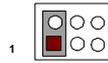

1-2 Closed: RS232;




3-4 Closed : +12V;

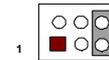


5-6 Closed : +5V

(8) JP8 (6-pin): COM2 Port RS232/485/422 Function Select


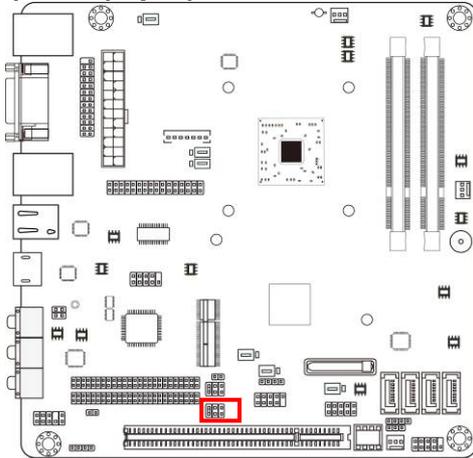


JP8

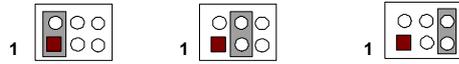

1-2 Closed : RS232; 3-4 Closed : RS485; 5-6 Closed : RS422

(9) COPEN (2-pin): Case Open Message Display Function Select

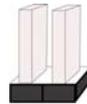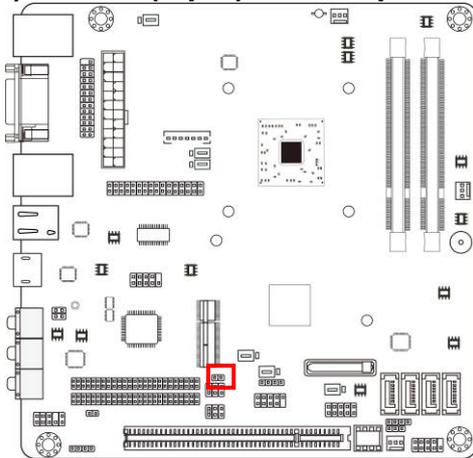

1 2
Pin 1-2:open



1 2
Pin 1-2:short

COPEN

1-2 Open: Normal

1-2 Short: Case Open


Case Open Display Function

Pin 1-2 shorted: Case open display function enabled. In this case if you case is removed, next time when you restart your computer a message will be displayed onscreen to inform you of this.

2-2 Connectors and Headers


2-2-1 Connectors

(1) I/O Panel Connector:

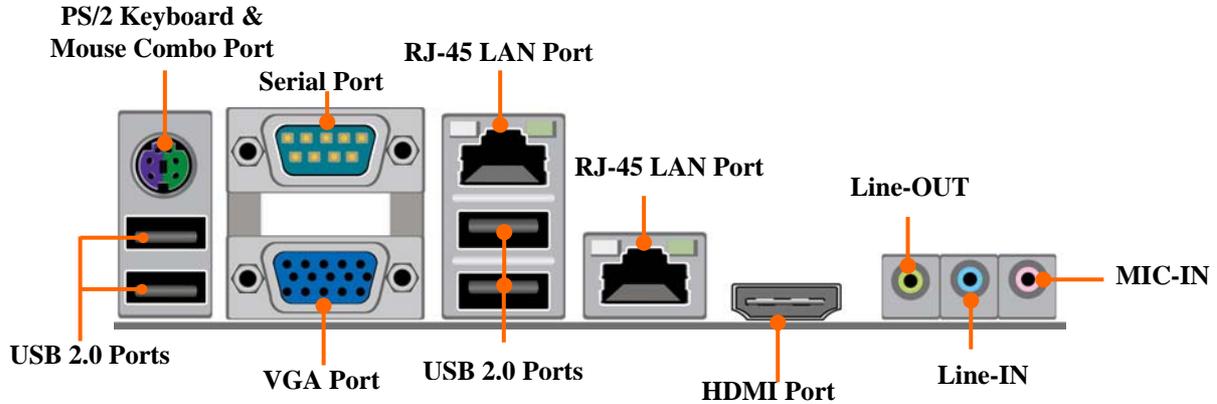


(2) Serial-ATA Port connector: SATA1, SATA2, SATA3, SATA4


SATA1 and SATA2 connectors are SATAII connectors that support SATA 3Gb/s specification. SATA3 and SATA4 connectors are SATAIII connectors that support SATA 6Gb/s specification.

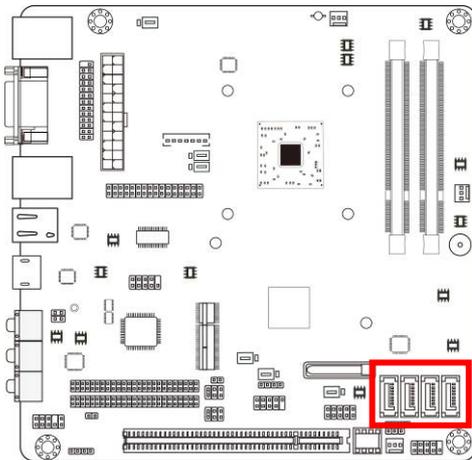

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

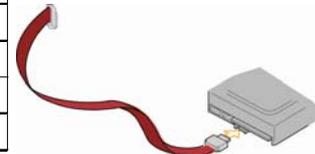


(3) Power Connector (24-pin block): ATXPWR

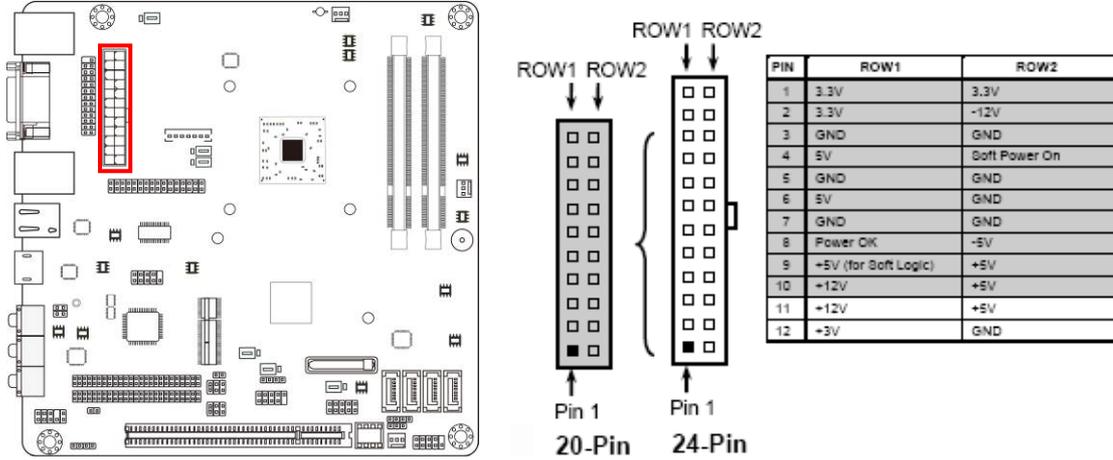



2-2-2 Headers

(1) Front Panel Audio Header (9-pin): FP_AUDIO1



This header connects to front panel Line-out, MIC-In connector with cable.

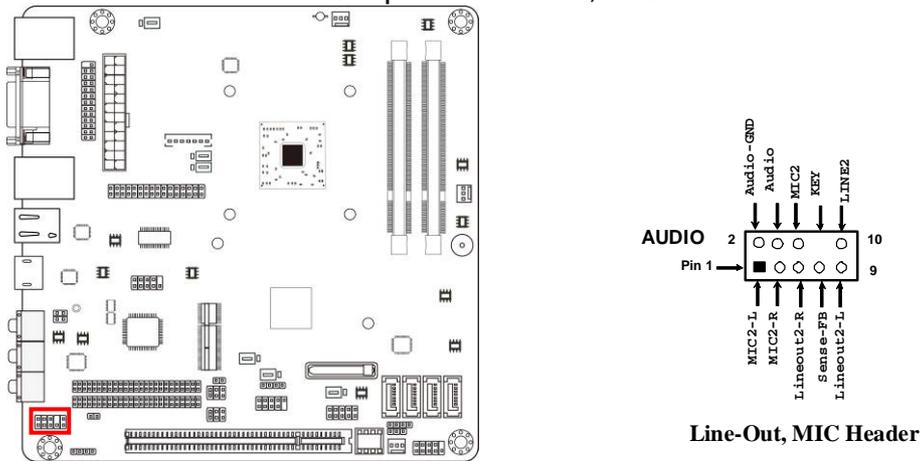

(2) CD AUDIO-In Header (4-pin): CDIN

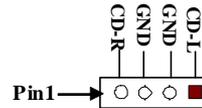
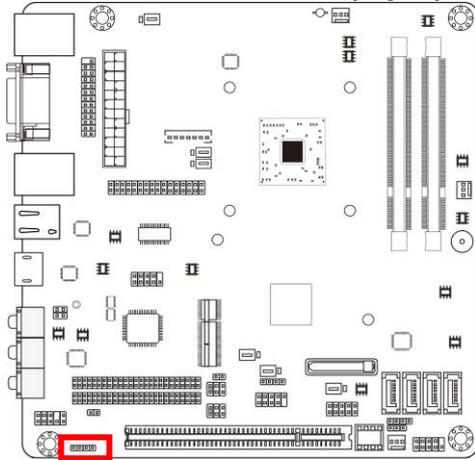


(3) HDMI-SPDIF Out header (2-pin): SPDIF

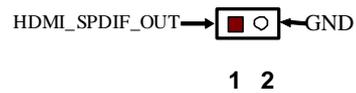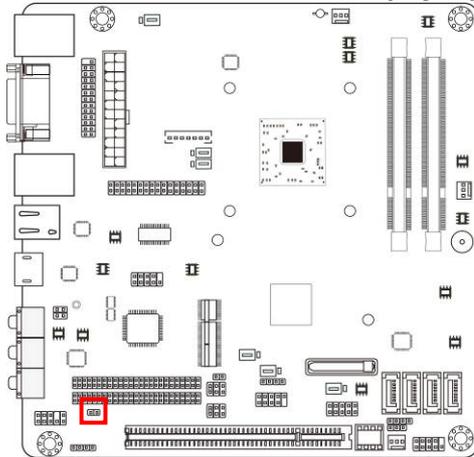



HDMI_SPDIF Header

(4) USB 2.0 Port Header (4-pin): USB2

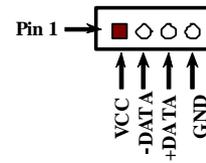
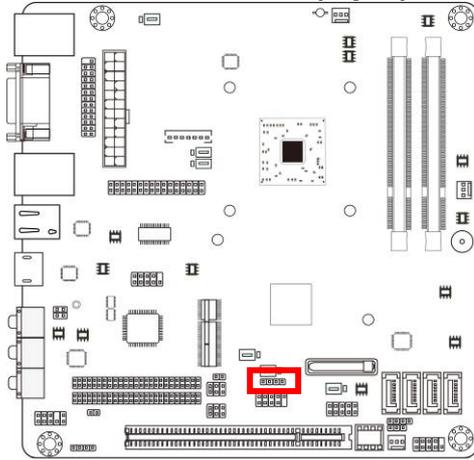


USB2 Header

(5) USB 2.0 Port Header (9-pin): USB3

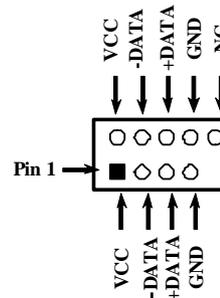
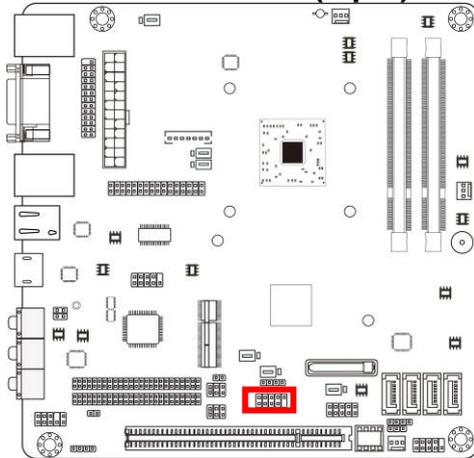


(6) COM2 (9-pin): RS232 Header

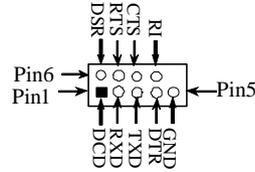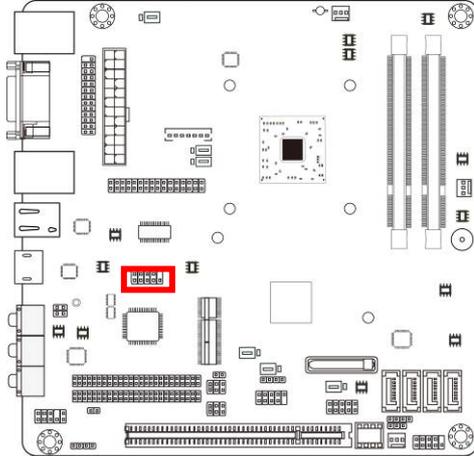

Serial COM Port 9-pin Block

(7) TX-RXCOM (4-pin): RS422/485 Header

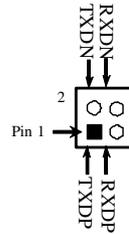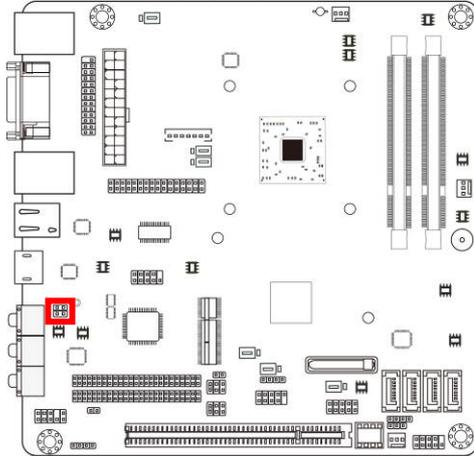



TX-RXCOM Header

(8) Speaker Header (4-pin): SPEAK



This 4-pin connector connects to the case-mounted speaker. See the figure below.

(9) Power LED (3-pin): PWR LED

The Power LED is light on while the system power is on. Connect the Power LED from the system case to this pin header.

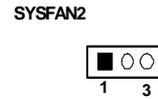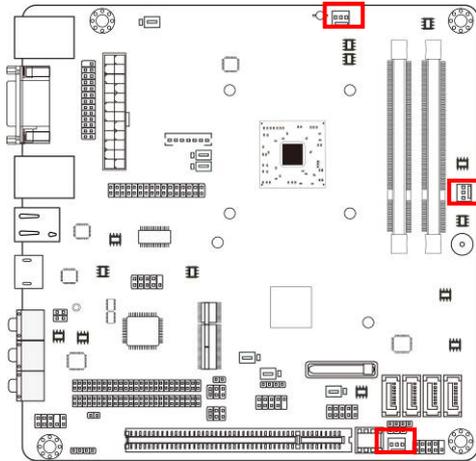



(12) LVDS Inverter (7-Pin): INVERTER

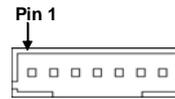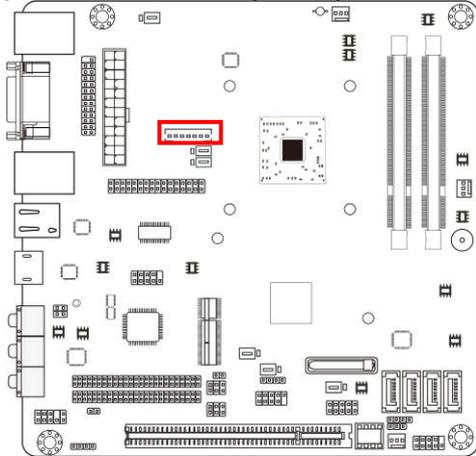

INVERTER



Pin No.	Definition
1	VCC
2	VCC
3	GND
4	GND
5	Backlight
6	GND
7	Brightness

(13)24-bit LVDS Header (32-pin): LVDS

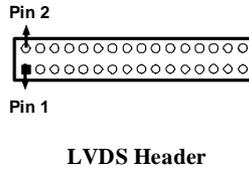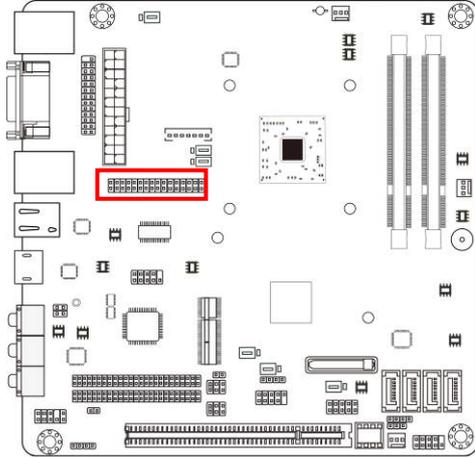

Pin NO.	Pin Definition	Pin NO.	Pin Definition
Pin 1	NC	Pin 2	NC
Pin 3	NC	Pin 4	NC
Pin 5	NC	Pin 6	NC
Pin 7	NC	Pin 8	NC
Pin 9	NC	Pin 10	NC
Pin 11	LVDS_DDC_DATA	Pin 12	LVDS_DDC_CLK
Pin 13	GND	Pin 14	GND
Pin 15	GND	Pin 16	GND
Pin 17	LVDSA_DATAP3	Pin 18	LVDSA_DATAN3
Pin 19	LVDS_CLKAP	Pin 20	LVDS_CLKAN
Pin 21	LVDSA_DATAP2	Pin 22	LVDSA_DATAN2
Pin 23	LVDSA_DATAP1	Pin 24	LVDSA_DATAN1
Pin 25	LVDSA_DATAP0	Pin 26	LVDSA_DATANO
Pin 27	PVDD	Pin 28	PVDD
Pin 29	PVDD	Pin 30	PVDD
Pin 31	GND	Pin 32	GND

(14) GPIO Header (10-pin): GPIO_CON

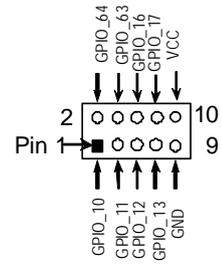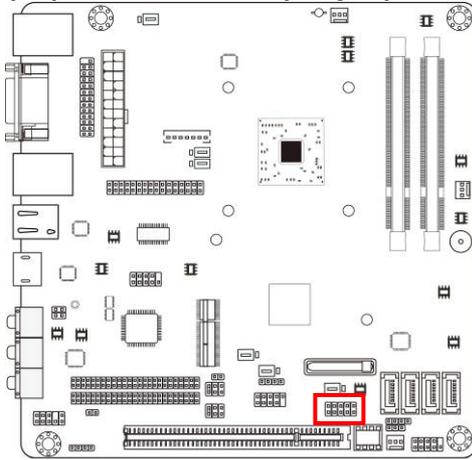

GPIO_CON Header

Chapter 3

Introducing BIOS

Notice! The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version form our official website.

The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.


3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup. If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to

Press to enter Setup

3-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen:

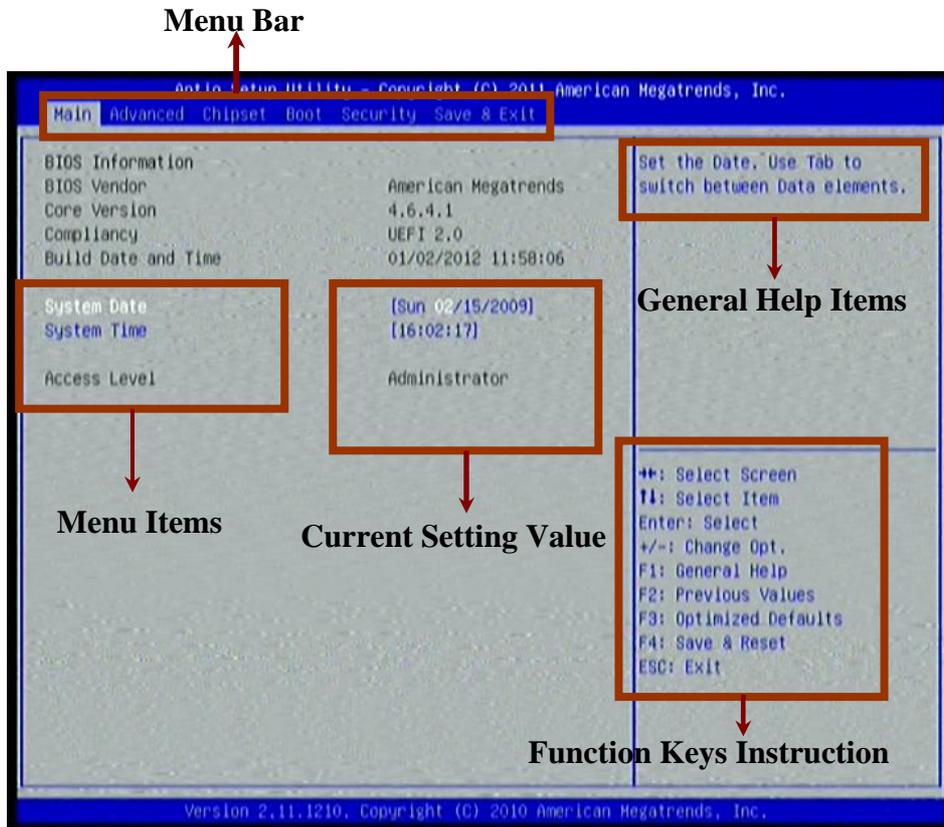

3-3 Function Keys

In the above BIOS Setup main menu, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen;
- Press ↑↓ (up, down) to choose the item you want to confirm or to modify in the main menu.
- Press <Enter> to select.

- Press <+>/<-> key when you want to modify the BIOS parameters for the active option.
- [F1]: Press to general help information.
- [F2]: Press to load previous value.
- [F3]: Press to load optimized defaults.
- [F4]: Save and Reset.
- Press <Esc> to quit the BIOS Setup.

3-4 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

Status Page Setup Menu/Option Page Setup Menu

Press [F1] to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>.

3-5 Menu Bar


There are six menu bars on top of BIOS screen:

Main	To change system basic configuration
Advanced	To change system advanced configuration
Chipset	To change chipset configuration
Boot	To change boot settings
Security	Password settings
Save & Exit	Save setting, loading and exit options.

User can press the ←/→ (left, right) arrow key on the keyboard to switch from menu bar. The selected one is highlighted.

3-6 Main Menu

Main menu screen includes some basic system information. Highlight the item and then use the <+> / <-> key or numerical keyboard keys to select the value you want in each item.

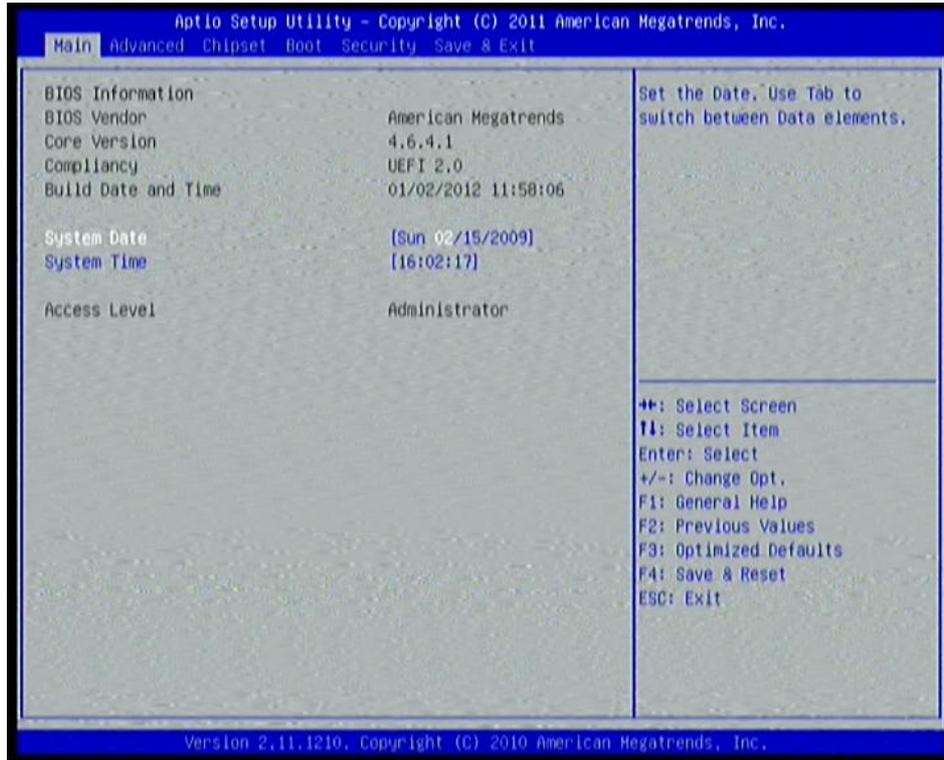


System Date

Set the date. Please use [TAB] to switch between data elements.


System Time

Set the time. Please use [TAB] to switch between time elements.

3-7 Advanced Menu

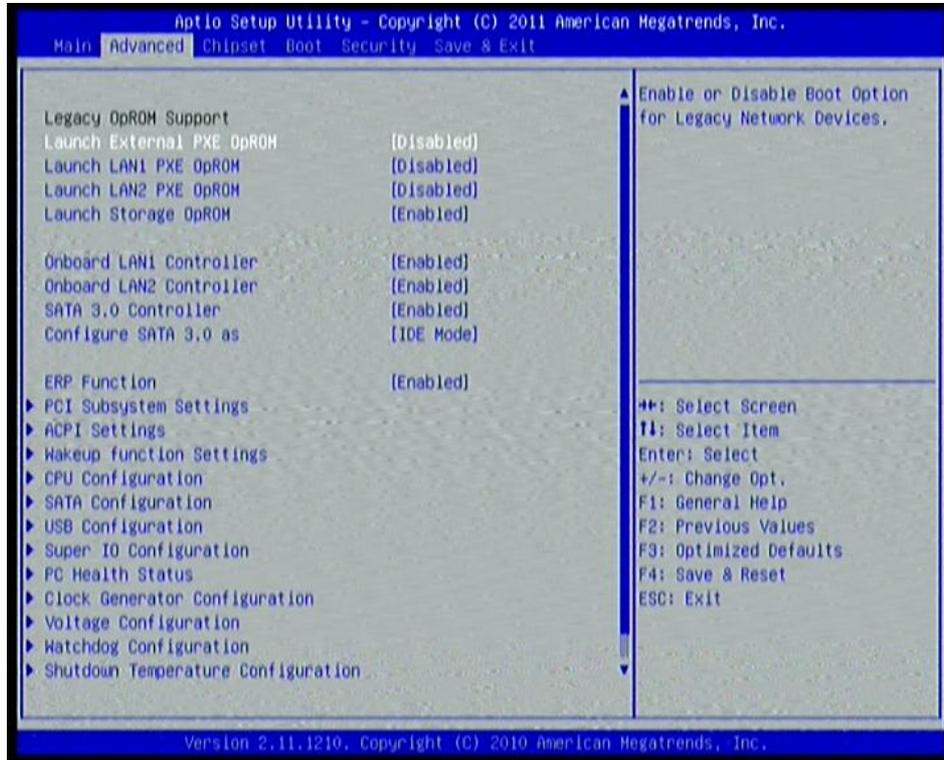

Slide down to view more setting items:

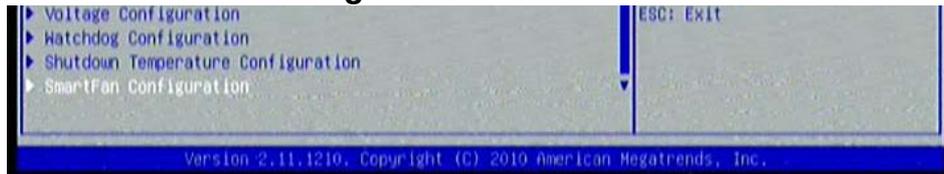

Launch External PxE OpROM/Launch LAN1 PXE OpROM/Launch LAN2 PXE OpROM

Use this item to enable or disable boot option for legacy network devices.

Launch Storage OpROM

Use this item to enable or disable boot option for legacy mass storage devices with

option ROM.

Onboard LAN 1 Controller

Use the above items to enable or disable PCI Express root port 1.

Onboard LAN 2 Controller

Use the above items to enable or disable Mini-PCIE control.

SATA 3.0 Controller

Use the above items to enable or disable SATA 3.0 controller.

Configure SATA 3.0 as

Use this item to select an operative mode for SATA 3.0 controller.

ERP Function

Use this item to enable or disable ERP function for this board. This item should be set as [Disabled] if you wish to have Active All Wakeup Function.

PCI Subsystem Settings

Press [Enter] to enter and make settings for the following sub-items:

PCI ROM Priority

In the case of multiple option ROMs(Legacy and EFI compatible), specifies what PCI option ROM to launch. The optional settings: [Legacy ROM]; [EFI Compatible ROM].

PCI Common Settings:

PCI Latency Timer

Use this item to set value to be programmed into PCI latency timer register.

VGA Palette Snoop

Use this item to enable or disable VGA palette register snooping.

PERR# Generation

Use this item to enable or disable PCI device to generate PERR#.

SERR# Generation

Use this item to enable or disable PCI device to generate SERR#.

ACPI Settings

ACPI Sleep State

Use this item to select the highest ACPI sleep state the system will enter when the suspend button is pressed. The optional settings are: [S1(CPU Stop Clock)]; [S3(Suspend to RAM)].

Wakeup Function Settings

Wake System with Fixed Time

Use this item to enable or disable system wake on alarm event. When set as [Enabled], system will wake on the hour/min/sec specified.

PS2 KB/MS Wakeup

Use this item to enable or disable PS2 KB/MS wakeup function.

PCI PME Wakeup

Use this item to enable or disable S3/S4/S5 PCI PME wakeup. This function is only supported when ERP function is set as [Disabled].

CPU Configuration

Hyper-Threading

The optional settings are: [Disabled]; [Enabled]. Set as [Enabled] for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and [Disabled] for other OS (OS not optimized for Hyper-Threading Technology).

Execute Disable Bit

The optional settings are: [Disabled]; [Enabled].

Limit CPUID Maximum

The optional settings are: [Disabled]; [Enabled].

This item should be set as [Disabled] for Windows XP.

SATA Configuration

SATA Controller(s)

The optional settings are: [Disabled]; [Enabled].

Configure SATA as

The optional settings are: [IDE Mode]; [AHCI].

USB Configuration

Legacy USB Support

The optional settings are: [Auto]; [Disabled]; [Enabled].

EHCI Hand-off

The optional settings are: [Disabled]; [Enabled].

USB Transfer time-out

Use this item to set the time-out value for control, bulk, and interrupt transfers.

Device reset time-out

Use this item to set USB mass storage device start unit command time-out.

Device power-up delay

Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor. The optional settings: [Auto]; [Manual]. Select [Manual] you can set value for the following sub-item:

Device Power-up delay in seconds, the delay range in from 1 to 40 seconds in one second increments.

Super I/O Configuration

COM1 Port Configuration

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM1).

Change Settings

Use this item to select an optimal setting for super IO device.

COM2 Port Configuration

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM2).

Change Settings

Use this item to select an optimal setting for super IO device.

Serial Port Mode Select

Use this item to set COM2 port mode. The optional settings are: [RS232]; [RS422/485].

Parallel Port Configuration

Press [enter] to make settings for the following items:

Parallel Port

Use this item to enable or disable parallel port (LPT/LPTE).

Change Settings

Use this item to select an optimal setting for super IO device.

Device Mode

Use this item to change the printer port mode.

PS2 KB/MS Connect

The optional settings are: [Keyboard First]; [Mouse First].

Case Open Select

This item is for system to detect if the case has already been opened or not. The optional settings are: [Disabled]; [Enabled].

PC Health Status

Press [Enter] to view hardware health status.

Clock Generator Configuration

Clockgen Spread Spectrum

Use this item to enable or disable spread spectrum function.

IO Output Voltage

Use this item to set IO output voltage.

Voltage Configuration

DIMM Voltage

The optional settings are: [Default]; [+50mV]; [+100mV]; [+150mV].

WatchDog Configuration

WatchDog Timer Control

Use this item to enable or disable WatchDog Timer Control. When set as [Enabled], the following sub-items shall appear:

WatchDog Timer Value

User can set a value in the range of 4 to 255.

WatchDog Timer Unit

The optional settings are: [Second];[Minute].

Shutdown Temperature Configuration

Use this item to select system shutdown temperature.

SmartFan Configuration

CPUFAN1 / SYSFAN1/ SYSFAN2 Smart Mode

When set as [Enabled], the following sub-items shall appear:

CPUFAN1 / SYSFAN1/ SYSFAN2 Full Speed Temp

Use this item to set a degree for CPUFAN/SYSFAN1/SYSFAN2. FAN will run at full speed when above this temperature.


CPUFAN1 / SYSFAN1/ SYSFAN2 Idle Temp

Use this item to set a degree for CPUFAN/SYSFAN1/SYSFAN2. FAN will idle speed when below this temperature.

CPUFAN1 / SYSFAN1/ SYSFAN2 Stop Temp

Use this item to set a degree for CPUFAN/SYSFAN1/SYSFAN2. CPU FAN will stop when below this temperature.

3-8 Chipset Menu

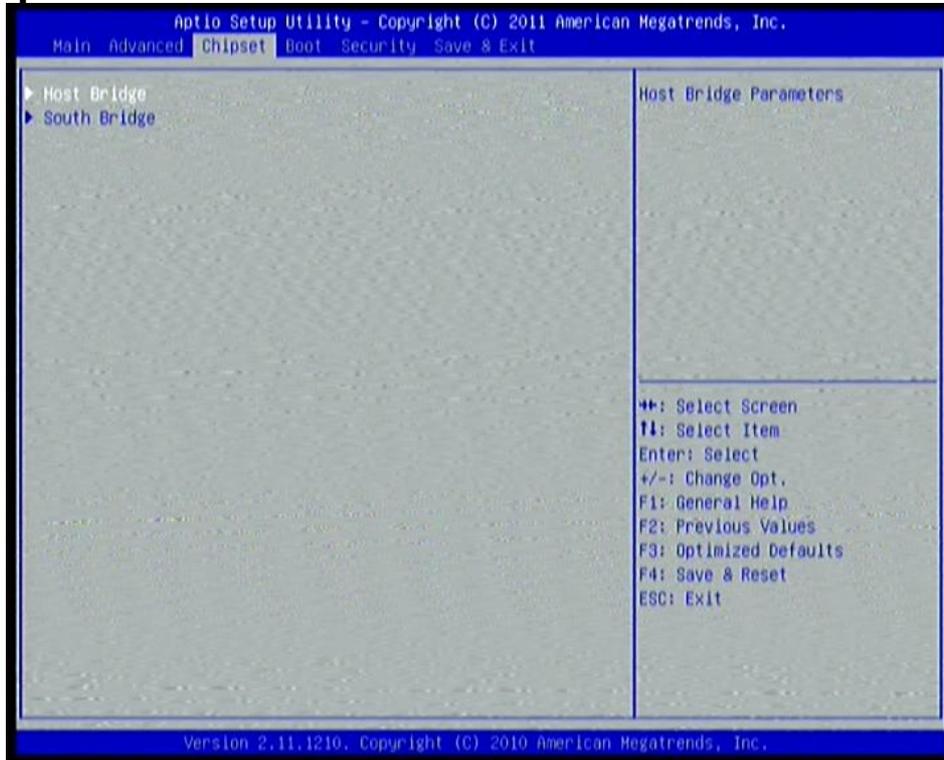

Host Bridge

Press [Enter] to make settings for Intel IGD Configuration:

Internal Graphics:

Use this item to keep IGD enabled based on the setup options. The optional settings are: [Disabled]; [Auto].

IGFX-Boot Type

Use this item to set the video device which will be activated during POST. This has no effect if external graphics presents. The optional settings are: [VBIOS Default]; [CRT]; [LVDS]; [HDMI+LVDS]; [CRT+LVDS].

In the case **IGFX-Boot Type** is set as **[LVDS]**, **[HDMI+LVDS]**, **[CRT+LVDS]**, the following setting item shall appear:

LCD Panel Type:

Use this item to select LCD panel resolution.

Active LFP

The optional settings are: **[Disable LVDS]**; **[Enable LVDS]**.

South Bridge

Azalia Controller

The optional settings are: **[Enabled]**; **[Disabled]**.

UHCI #1 (Ports 0 and 1)/ UHCI #2 (Ports 2 and 3)/UHCI #3 (Ports 4 and 5)/UHCI #4 (Ports 6 and 7)

Use this item to control the USB UHCI (USB 1.1) functions. The optional settings are: **[Enabled]**; **[Disabled]**.

USB 2.0 (EHCI) Support

Use this item to enable or disable USB 2.0 (EHCI) support. The optional settings are: **[Enabled]**; **[Disabled]**.

High Precision Event Timer Configuration:

High Precision Timer

The optional settings are: **[Enabled]**; **[Disabled]**.


SLP_S4 Assertion Width

Use this item to select a minimum assertion width of the SLP_S4# signal.

Restore AC Power Loss

Use this item to select AC power state when power is re-applied after a power failure. The optional settings are: **[Power Off]**; **[Power On]**; **[Last State]**.

3-9 Boot Menu

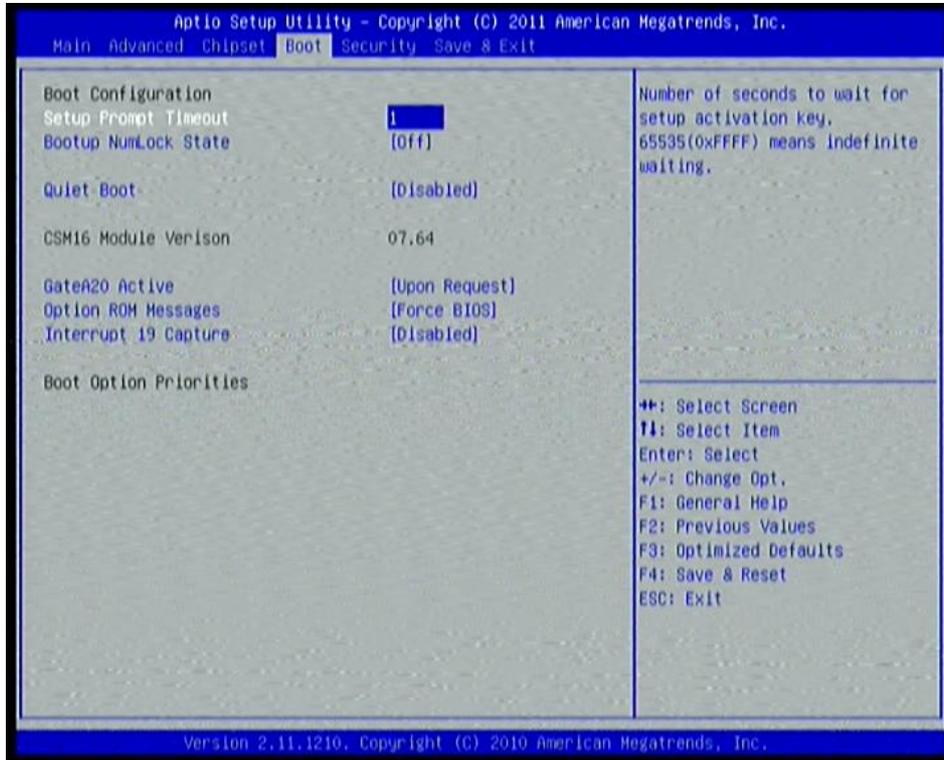

Setup Prompt Timeout

Use this item to set number of seconds to wait for setup activation key.

Bootup Numlock State

Use this item to select keyboard numlock state. The optional settings are: [On]; [Off].

Quiet Boot

The optional settings are: [Enabled]; [Disabled].

Gate A20 Active

The optional settings are: [Upon Request]; [Always].


Option ROM Message

Use this item to set display mode for option ROM. The optional settings are: [Force BIOS]; [Keep Current].

Interrupt 19 Capture


The optional settings are: [Enabled]; [Disabled].

3-10 Security Menu

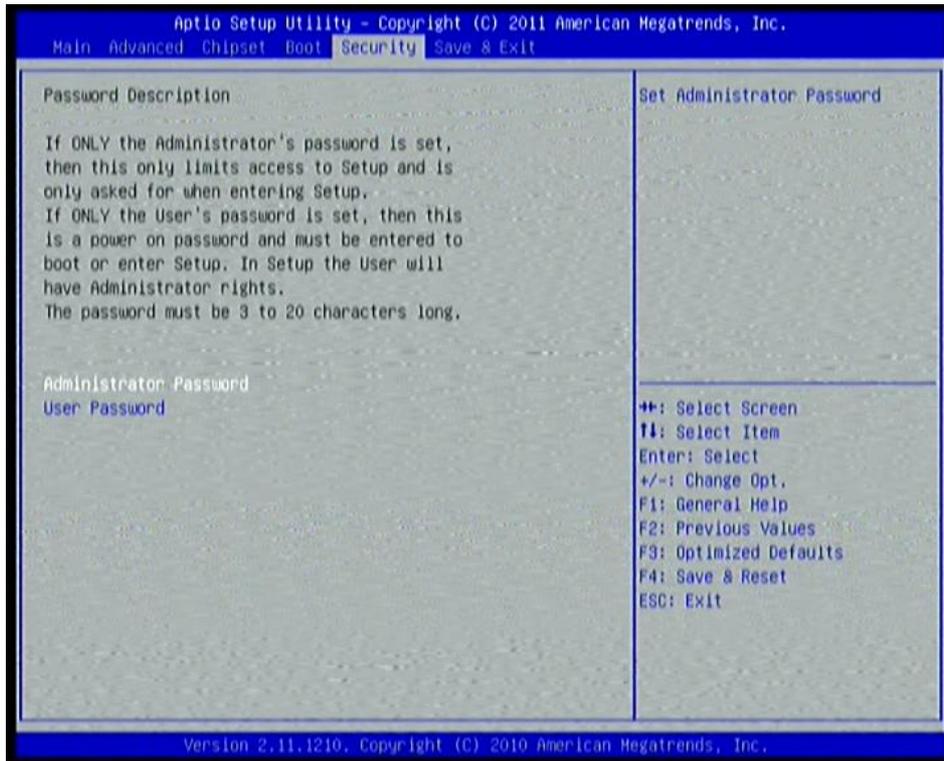

Security menu allow users to change administrator password and user password settings.

3-11 Save & Exit Menu

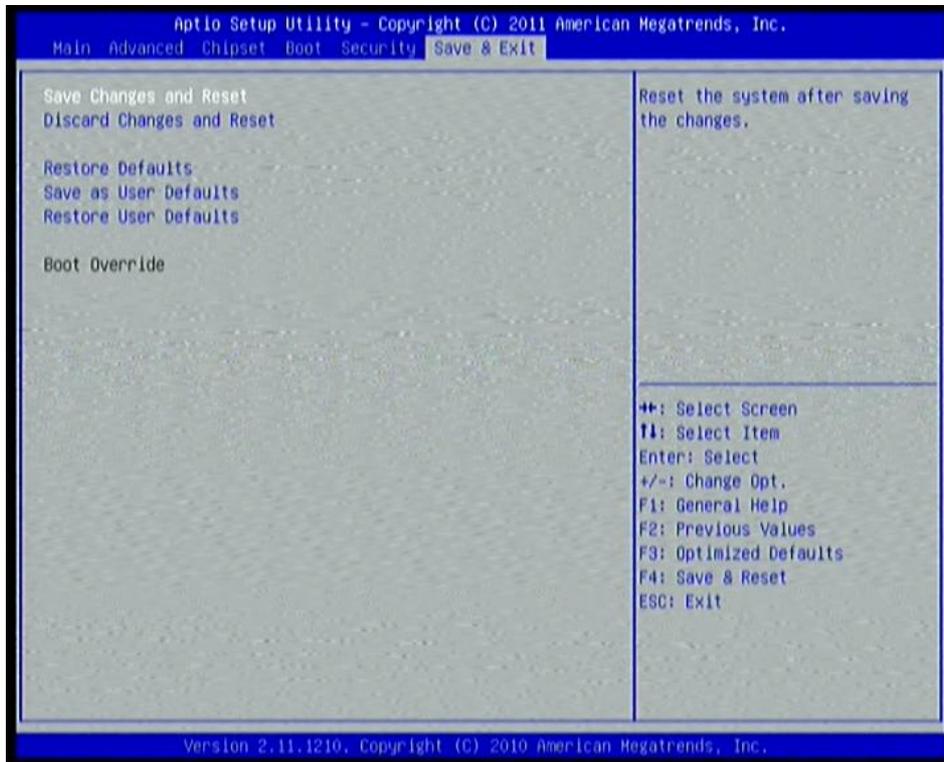

Save Changes and Reset

This item allows user to reset the system after saving the changes.

Discard changes and Reset

This item allows user to reset the system without saving any changes.

Restore Defaults

Use this item to restore /Load default values for all the setup options.

Save as User Defaults

Use this item to save the changes done so far as user defaults.

Restore User Defaults

Use this item to restore defaults to all the setup options.