Quick Installation Guide

NO. G03-JC501QIG03-F


Rev: 3.0

Release date: 2023-3-20

Notice:

The photos in this file are for illustration purpose only. The model may not be the latest version. Please refer to the product you purchased for actual specification.

1. To Open the Chassis

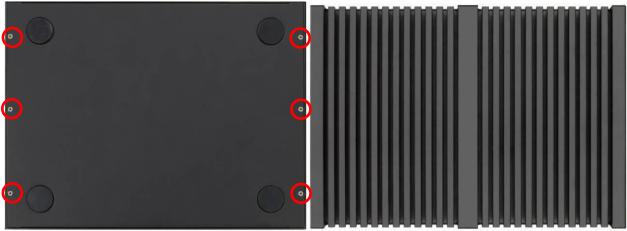

1. Locate the screws in the spots marked on the top cover of the system and unscrew them one by one.



2. Turn over the barebone system with the heatsink upwards, as the photo shows.



3. Remove the screws in the marked spots on 4. the front panel.

Remove the screws in the marked spots on the rear panel.





5. Remove the IO panels and lift the cover up to 6. open the chassis. For user to have a clear view of layout, we may unplug some of the cables during installation.


For CPU installation, user needs to remove the screws on the marked spots to dissemble the motherboard form chassis cover.

Notice: 1. If the system is pre-installed with CPU heatsink, user needs to remove the screws on the backside of the board to dissemble the heatsink before CPU installation; **2.**Make sure that the cables are plugged into their original places when necessary installation finished for the system to function normally.

2. To Install CPU




 Find CPU socket on the board. Please make 2. sure that CPU socket is facing towards you and the level is on you right hand side.

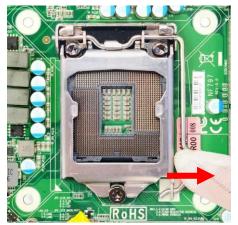

3. Press down the level and move it towards the 4. right side to free it from the hook.



Remove the plastic protective cover from the socket (Put it to the original place if CPU is not installed. Do not touch the metal contact point of the CPU socket).

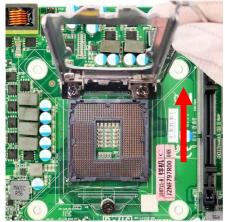

Open the level upwards about 135 degree and the metal protection plate will be pulled up at the same time.



5. Make sure that Pin-1 Golden Finger Indicator in the place as shown in the above photo and match the two alignment keys on the CPU with two points of the socket. CPU can only be correctly installed in this direction. Incorrect installation might cause damage to CPU.




6. Put down the load plate in the direction shown 7. above.



Press down the load level and move it leftwards to make sure it is locked under the notch.

3. To Install Heatsink Thermal pads

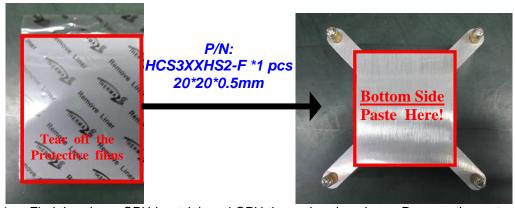


 Find the above CPU heatsink and CPU thermal pad package. Remove the protective films on the both sides of the pad and apply it upon the bottom side of the heatsink for better heat conduction.

P/N: HCS310HS1-F*1pcs 60*52*1.0mm




 Place the CPU heatsink upon the installed CPU. The screw holes of the heatsink should match corresponding screw holes of the board. And then apply corresponding thermal pad to the top side of the heatsink as the photo shows.

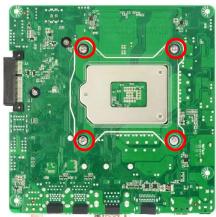


P/N: LCSC306M02-F*4pcs (M3 Phillips round-head brass screw, Screw length 6mm, Screw tooth length 4.5mm)

2. Place the CPU heatsink upon the 3. Turn the board over and lock the heatsink to the installed CPU. The screw holes of the board by tightening the screws (P/N: heatsink should match corresponding LCSC306M02-F*4) on the marked spots.

P/N: HCS501HS2-F *1 pcs, 25*25*1 mm

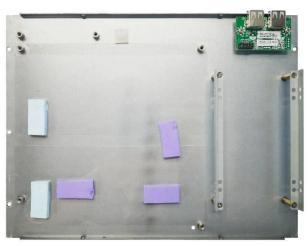

4. See to it that the silicone gel bars are in their original places for better heat dispassion and shockproof before installing the board to the system cover.

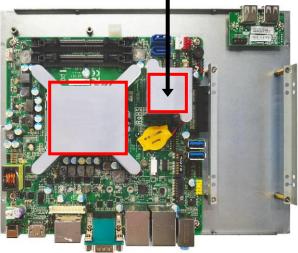

5. Apply corresponding thermal pads to chipset heat sink. When installation finished, tear off the protective film from the pads before assembling the back cover to the chassis.


*Note: There should be one more HCS310HS1-F / HCS3XXHS2-F / HCS501HS2-F left as spare parts after normal assembly. User can use them to replace corresponding damaged thermal conductive pads.

Notice: Please restore the screws that lock the motherboard to the chassis cover when CPU & heatsink installation completed. The cables unplugged during this process should be plugged to their original places after heatsink installation.

4. To Install SO-DIMM to the board




1. Find the SO-DIMM slot on the board for further installation. Open the 2* ejects tabs before SO-DIMM installation.

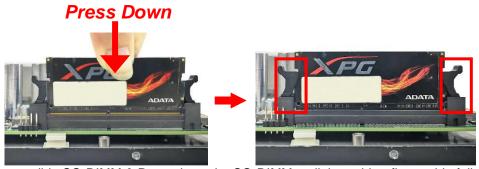

2. Adjust compatible SO-DIMM & Press down the SO-DIMM until the golden-finger side fully inserted into the slot. The eject tabs will lock automatically if installed correctly.

5. To Install WI-FI Card

Please refer to the following instructions for the installation of the Wi-FI card into M.2 PCIe slot.

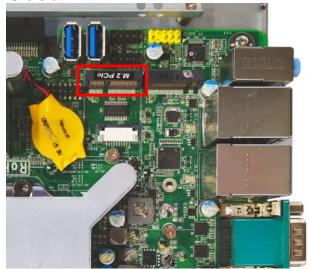


 Locate the M.2. PCIe, type-2230 slot on the board.



Remove the marked screw nut reserved for M.2 SATA card installation first.




 Insert the gold-figure side of compatible card into M.2. PCIe slot. See to it that the golden-figure side is fully inserted into the slot.

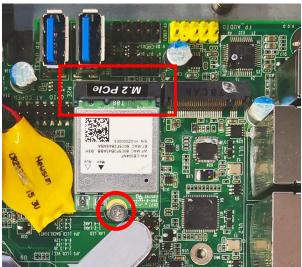

4. Lock the card to the board by tightening up the screw nut to the marked spot.



5. Locate the reserved Wi-Fi antenna holes on the back panel. Remove the dust-proof plugs on the marked spots from the panel to install the antenna, as the following details show.

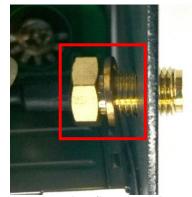



a) **Back-side View:** Put the metal ring into the antenna head at first, and then push this antenna head into antenna hole of the rear panel.



b) Front-side View: Put the other washer① into the antenna head, and then lock the antenna head to the front side of the back panel with the with hexagonal bolt②and tighten it up.




6. The metal hats on the end of the antenna 7. string are sealed by acetate tape to avoid

possible damage to the system.



8. Press the metal hat on the end of the antenna string to the antenna slot on the card as shown.

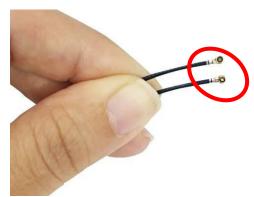


Tear off the tape to find metal hats of Wi-Fi antenna string.




Connect the external Wi-Fi receiver antenna to the antenna connector on the rear panel.

9.

6. To Install M.2 SATA Card

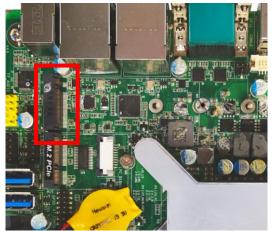

 Locate the M.2 SATA slot on the board. Prepare compatible M.2 SATA or M.2 SSD card. Deferent types of cards come of different length. Find corresponding nut location for further installation.

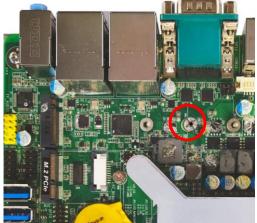

3. Remove the screw post fixed at default 4. location (Skip step 2 & 3 and go straight to Step 4 if you are going to use the default position).



Remove the screw and nut fixed at default location (Skip step 2 & 3 and go straight to Step 4 if you are going to use the default position).



Lock the screw post into the location corresponding to the length of the module.

2.




 Align and insert the gold-figure side of the compatible M.2 SATA card into the slot. Make sure that the golden-figure side is fully inserted into the slot.



6. Lock the card to the board by tightening up the previously-removed screw nut to the marked spot.

7. To Install Hard Disk

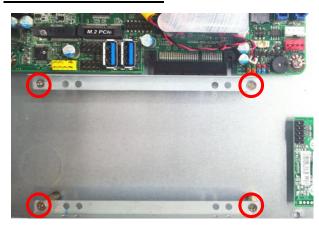

 Remove the HDD racks from the cover by unscrewing the screws in the marked places.




Adjust the HDD and the racks in the directions as the above photo shows.

2.





- 3. Lock the SATA hard disk to one of the racks by tightening the screws in the marked spots.
- Lock the SATA hard disk to the other rack by tightening the screws in the marked spots.

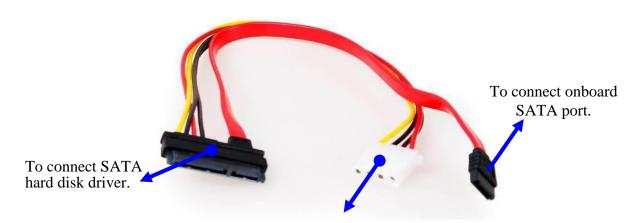

To connect onboard SATA power connector.

5. Find the compatible SATA cable for the system in the accessories package.



6. Plug this side of the cable to SATA 7. power-in connector and SATA connector of the hard disk.



Lock the racks with SATA HDD installed to its original places by tightening the screws in the marked spots.




8. Plug the other sides of the cables into the SATA power connector and SATA port connector on the board.


Notice:

When all necessary installations are finished, please make sure that all cables unplugged before installations are connected to their original places before restoring the back cover to the chassis and screws on the front panel/back panel/top cover locked to its original places (Refer to Part I). See to it that the cables inside are not blocked or pressed.

8. To Wall Mount the System

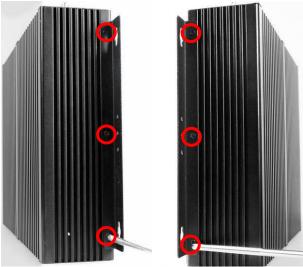

1. Install wall mount rack to the system by tightening the screws in the marked positions. Then lock the other three screws on the other side in the same way.

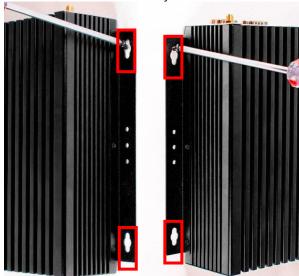

2. Wall mount the system by tightening two screws in the marked positions. Then tighten up the other two screws in the marked positions on the other rack.

Regulatory Compliance:

Declaimer

This QIG is intended to be used as a practical and informative guide only and is subject to change without prior notice. It does not represent commitment from Jetway Information Co., Ltd. Jetway shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of the product or documentation, nor for any infringements upon the rights of third parties, which may result from such use.

Declaration of Conformity

FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at user's own expense.

*Note: 1.Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 2. Shielded interface cables must be used in order to comply with the emission limits.

CE Notice

The product described in this QIG complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

