

JPIC-ADN1

User's Manual

Revision: 3.0
Release Date: January 7, 2025

Trademark:

* Specifications and Information contained in this documentation are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by manufacturer.

TABLE OF CONTENT

Environmental Protection and Safety Announcement.....	4
China RoHS Requirements (CN)	5
China RoHS Requirements (EN).....	6
User's Notice	7
Manual Revision Information	7
Packing List	7
Chapter 1 Introduction of the Motherboard.....	8
1-1 Specifications	8
Ordering Information.....	9
1-2 Block Diagram.....	11
1-3 Dimension	12
1-4 I/O Placement.....	13
1-5 Motherboard Placement.....	14
1-6 Jumper Positions.....	16
1-7 Heatsink Installation	17
Chapter 2 Hardware Information	18
2-1 List of Jumpers	18
2-2 Jumper Settings.....	18
2-3 List of Connectors	22
2-4 Connector Settings	23
2-5 Maximum Voltage & Current Limit.....	35
Chapter 3 Introducing BIOS	36
3-1 Entering Setup.....	36
3-2 BIOS Menu Screen	37
3-3 Function Keys	37
3-4 Getting Help.....	38
3-5 Menu Bars.....	38
3-6 Main Menu	39
3-7 Advanced Menu	40

3-8 Chipset Menu.....	61
3-9 Security Menu	68
3-10 Boot Menu	71
3-11 Save & Exit Menu	73
Appendix A	74
Mating Connectors	74
Appendix B	75
I/O Address Map	75
Memory Address Map.....	78
IRQ Mapping Chart.....	81

Environmental Protection and Safety Announcement

- Do not dispose this electronic device into the trash while discarding. To minimize pollution and ensure environment protection of mother earth, please recycle.
- Avoid the dusty, humidity and temperature extremes. Do not place the product in any area where it may become wet.
- Generally speaking, dramatic changes in temperature may lead to contact malfunction and crackles due to constant thermal expansion and contraction from the welding spots' that connect components and PCB. Computer should go through an adaptive phase before it boots when it is moved from a cold environment to a warmer one to avoid condensation phenomenon. These water drops attached on PCB or the surface of the components can bring about phenomena as minor as computer instability resulted from corrosion and oxidation from components and PCB or as major as short circuit that can burn the components. Suggest starting the computer until the temperature goes up.
- The increasing temperature of the capacitor may decrease the life of computer. Using the close case may decrease the life of other device because the higher temperature in the inner of the case.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	X	X	O	O	O	O
外部信号 连接器及线材	X	X	O	O	O	O
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限,系指在一般正常使用状况下。</p>						

China RoHS Requirements (EN)

Poisonous or Hazardous Substances or Elements in Products

Main Board/ Daughter Board/ Backplane

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	X	X	O	O	O	O
Wires & Connectors for External Connections	X	X	O	O	O	O
<p>O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.</p> <p>X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.</p> <p>Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only</p>						

User's Notice

COPYRIGHT OF THIS MANUAL BELONGS TO THE MANUFACTURER. NO PART OF THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT MAY BE REPRODUCED, TRANSMITTED OR TRANSLATED INTO ANY LANGUAGE IN ANY FORM OR BY ANY MEANS WITHOUT WRITTEN PERMISSION OF THE MANUFACTURER.

THIS MANUAL CONTAINS ALL INFORMATION REQUIRED TO USE THIS MOTHER-BOARD SERIES AND WE DO ASSURE THIS MANUAL MEETS USER'S REQUIREMENT BUT WILL CHANGE, CORRECT ANY TIME WITHOUT NOTICE. MANUFACTURER PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, AND WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFIT, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS AND THE LIKE).

PRODUCTS AND CORPORATE NAMES APPEARING IN THIS MANUAL MAY OR MAY NOT BE REGISTERED TRADEMARKS OR COPYRIGHTS OF THEIR RESPECTIVE COMPANIES, AND THEY ARE USED ONLY FOR IDENTIFICATION OR EXPLANATION AND TO THE OWNER'S BENEFIT, WITHOUT INTENT TO INFRINGE.

Manual Revision Information

Reversion	Revision History	Date
3.0	Third Edition	January 7, 2025

Packing List

Part Number	Description	QTY per Board
JPIC-ADN1	JPIC-ADN1 Mother Board	1
F05-PICO-01-F	Heatsink	1
G01-COM-H2M22-1F	COM Cable, Length = 220mm	1
G01-PWDCJK-2P20-F	Phoenix DC Cable, Length = 200mm	1

Chapter 1 Introduction of the Motherboard

1-1 Specifications

SYSTEM	
MB FORM FACTOR	Pico-ITX
CPU	Onboard Intel® Processor N97 (Formerly Alder Lake-N, TDP 12W) Onboard Intel® Processor N200 (Formerly Alder Lake-N, TDP 6W) For additional compatible CPUs, please contact regional sales
CHIPSET	Intel® SoC
MEMORY	1 x DDR5 4800MHz, Single Channel SO-DIMM, up to 32GB
BIOS	UEFI
WAKE ON LAN	Yes
WATCHDOG TIMER	255 Levels
SECURITY	Intel® PTT (Integrated fTPM)
RTC BATTERY	Lithium Battery
DIMENSION (W X D)	100.0 (W) x 72.0 (D) mm (3.9" x 2.8")
OS SUPPORT	Windows® 11 (64bit) Windows® 10 (64bit) Linux
POWER	
POWER REQUIREMENT	DC-in 12V
POWER ON MODE	AT / ATX (Default) Mode
CONNECTOR	Internal 2-pin Header
DISPLAY	
GPU	Intel® UHD Graphics
LVDS	1 x 24-bit Dual Channel LVDS (Max. Resolution: 1920 x 1080 @60Hz / Co-Lay eDP)
HDMI	1 x HDMI 2.0b (Max Resolution: 4096x2160@60Hz)
MULTIPLE DISPLAY	Support 2 Displays
AUDIO	
CODEC	Realtek ALC897
Line-out	Internal Header for Line-Out
MIC-in	Internal Header for MIC-In
LAN	
ETHERNET	1 x RJ45 for Realtek® RTL8111H GbE
USB PORT	


USB	2 x USB 3.2 Gen 2x1 (10Gbps, Formerly USB 3.1 Gen 2) Internal Header for 4 x USB 2.0
SERIAL PORT	
COM	Internal Header for 2 x RS-232/422/485
INTERNAL I/O	
GPIO	8-Bit
SMBUS	Yes
FAN	1 x 4-pin Connector for CPU Fan (PWM Mode)
FRONT PANEL	HDD Active LED Power LED Power On/Off Reset
ADDITIONAL	1 x Chassis Intrusion 1 x AT/ATX Mode Selection
STORAGE	
SATA	1 x SATA3 1 x SATA Power Connector
EXPANSION	
M.2	1 x B+M-Key 2242/3042/3052 (USB3/SATA/PCIe Gen3 x2) 1 x E-Key 2230 (USB 2.0/PCIe 3.0 x1)
SIM	1 x Nano SIM Card Slot
ENVIRONMENT & CERTIFICATION	
OPERATING TEMPERATURE	-20°C ~ 60°C (-4°F ~ 140°F)
STORAGE TEMPERATURE	-20°C ~ 85°C (-4°F ~ 185°F)

Ordering Information


PART NUMBER	JPIC-ADN1-N20000	JPIC-ADN1-N97000
CPU	Intel® Processor N200	Intel® Processor N97
MEMORY	1 x DDR5 SO-DIMM, up to 32GB	1 x DDR5 SO-DIMM, up to 32GB
SECURITY	Intel® PTT (fTPM)	Intel® PTT (fTPM)
POWER REQUIREMENT	DC-in 12V	DC-in 12V
GPU	Intel® UHD Graphics	Intel® UHD Graphics
LVDS	1 x LVDS/eDP	1 x LVDS/eDP

HDMI	1 x HDMI	1 x HDMI
MULTIPLE DISPLAY	Support 2 Displays	Support 2 Displays
ETHERNET	1 x GbE	1 x GbE
USB	2 x USB 3.2	2 x USB 3.2
USB	4 x USB 2.0	4 x USB 2.0
COM	2 x RS-232/422/485	2 x RS-232/422/485
SATA	1 x SATA3	1 x SATA3
TYPE	1 x B+M-Key 2242/3042/3052	1 x B+M-Key 2242/3042/3052
TYPE	1 x E-Key 2230	1 x E-Key 2230
OPERATING TEMPERATURE	-20°C ~ 60°C (-4°F ~ 140°F)	-20°C ~ 60°C (-4°F ~ 140°F)


1-2 Block Diagram

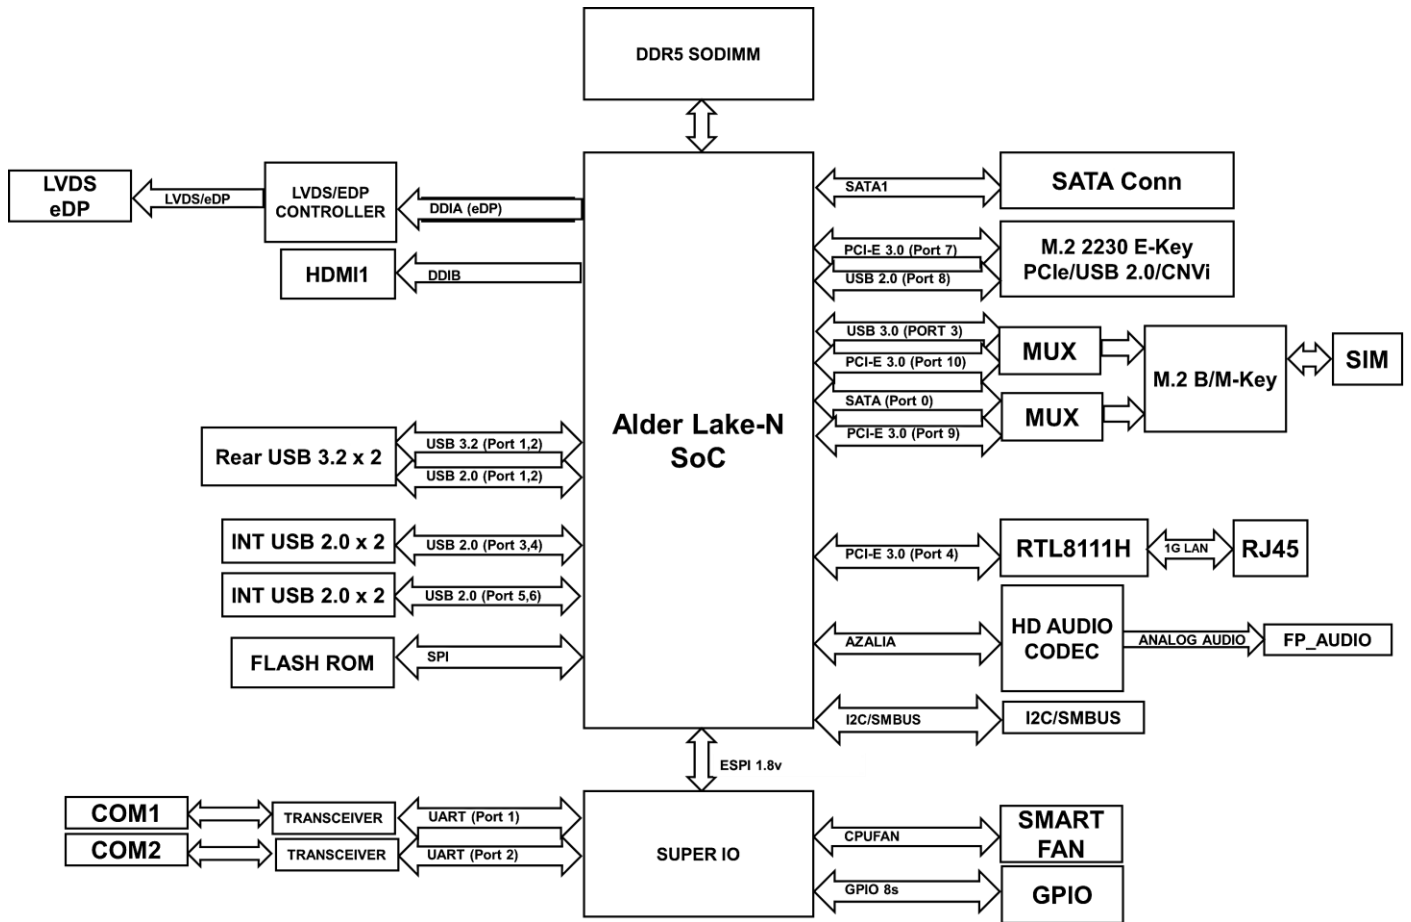


1-3 Dimension

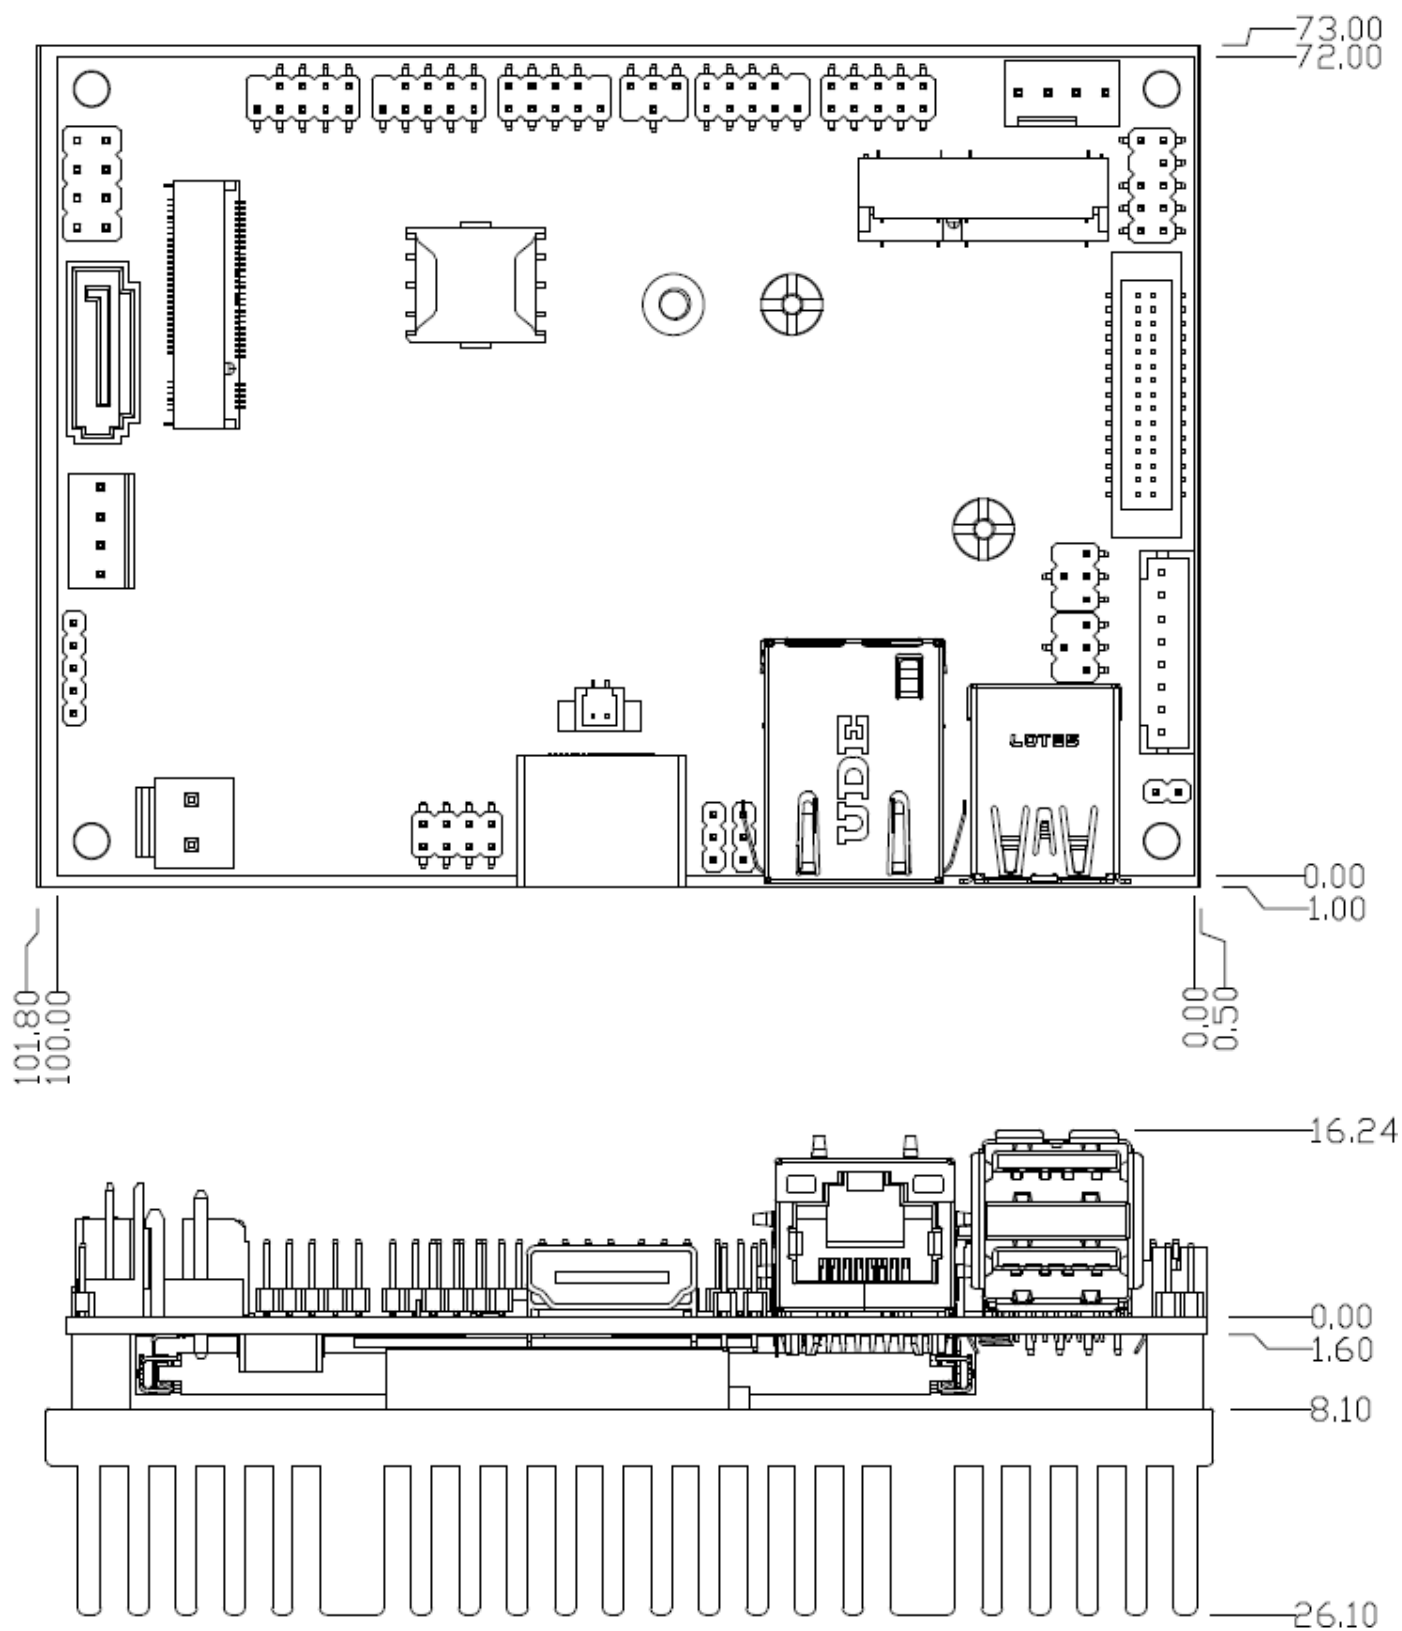


1-4 I/O Placement

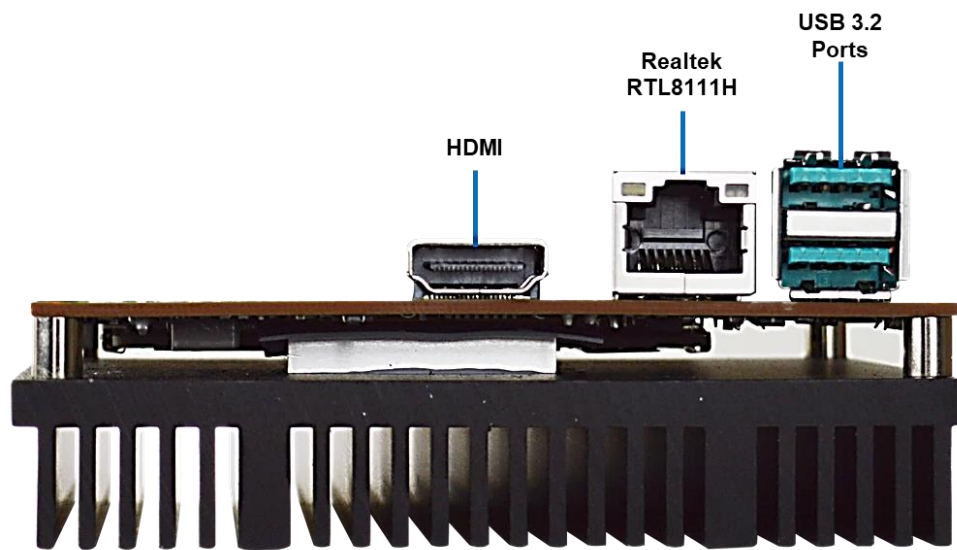


1-5 Motherboard Placement

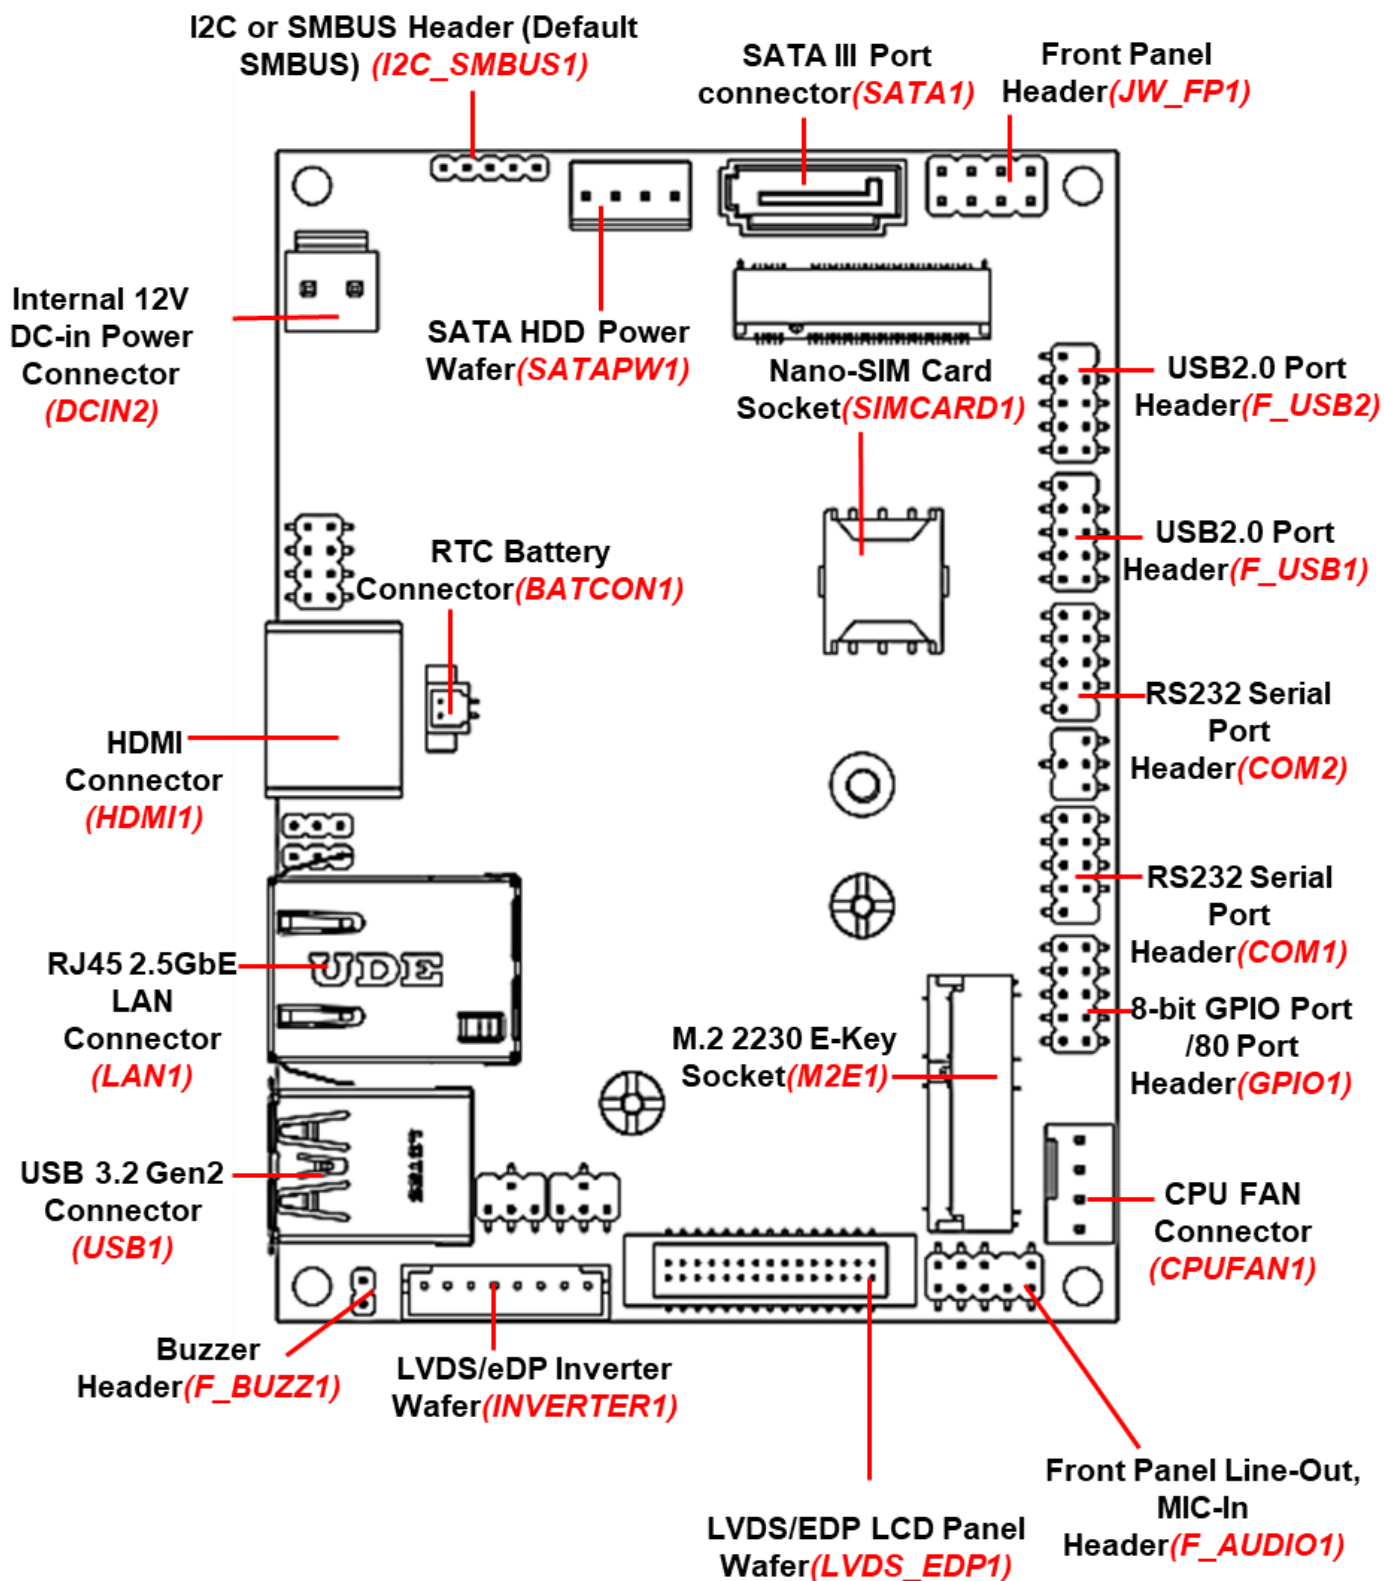

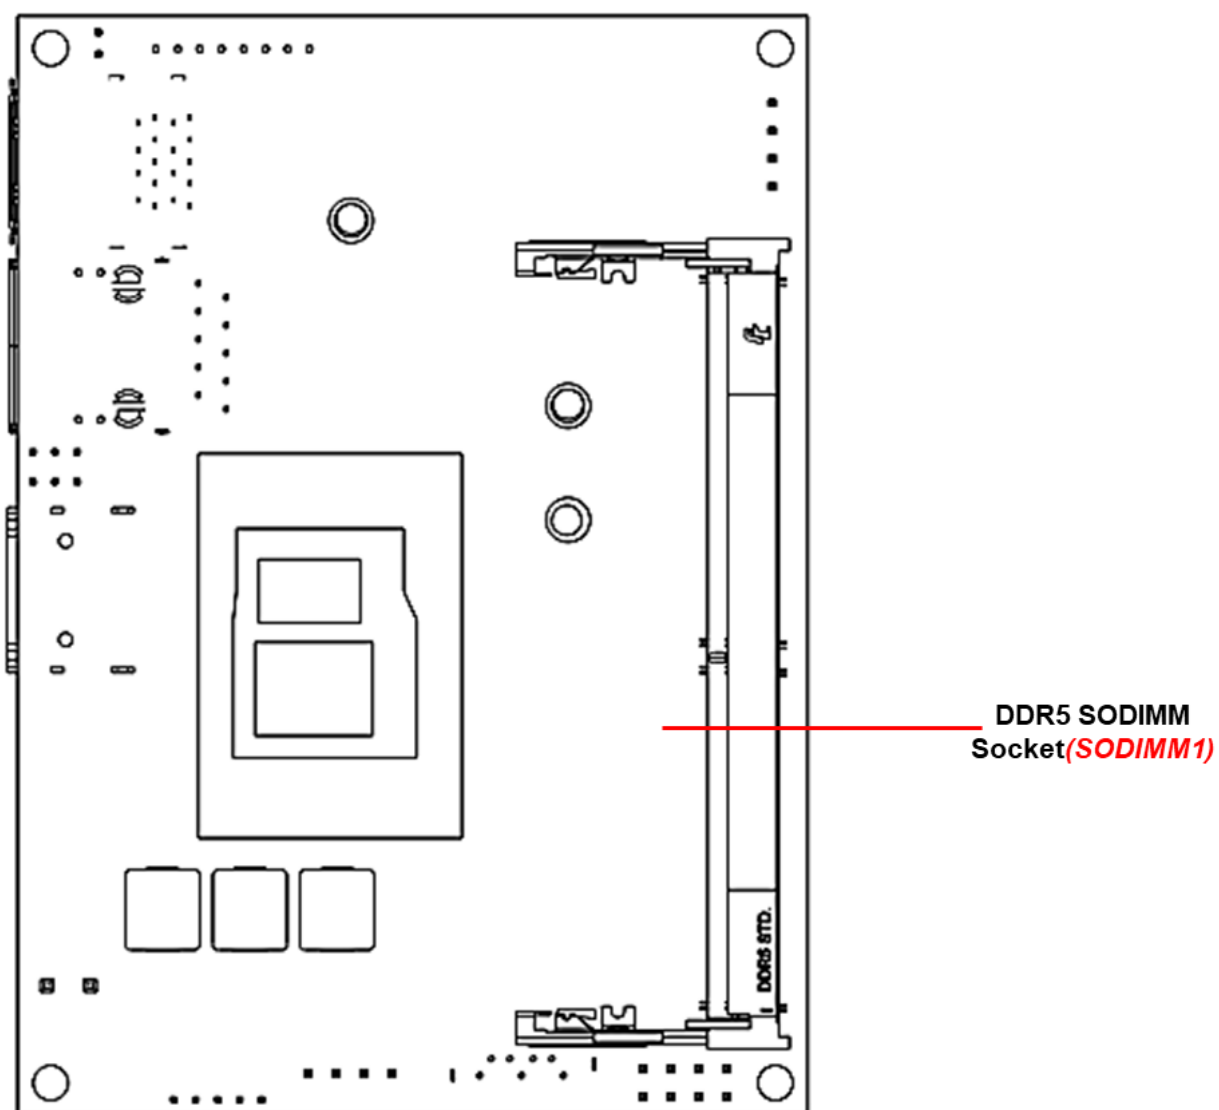


1-6 Jumper Positions

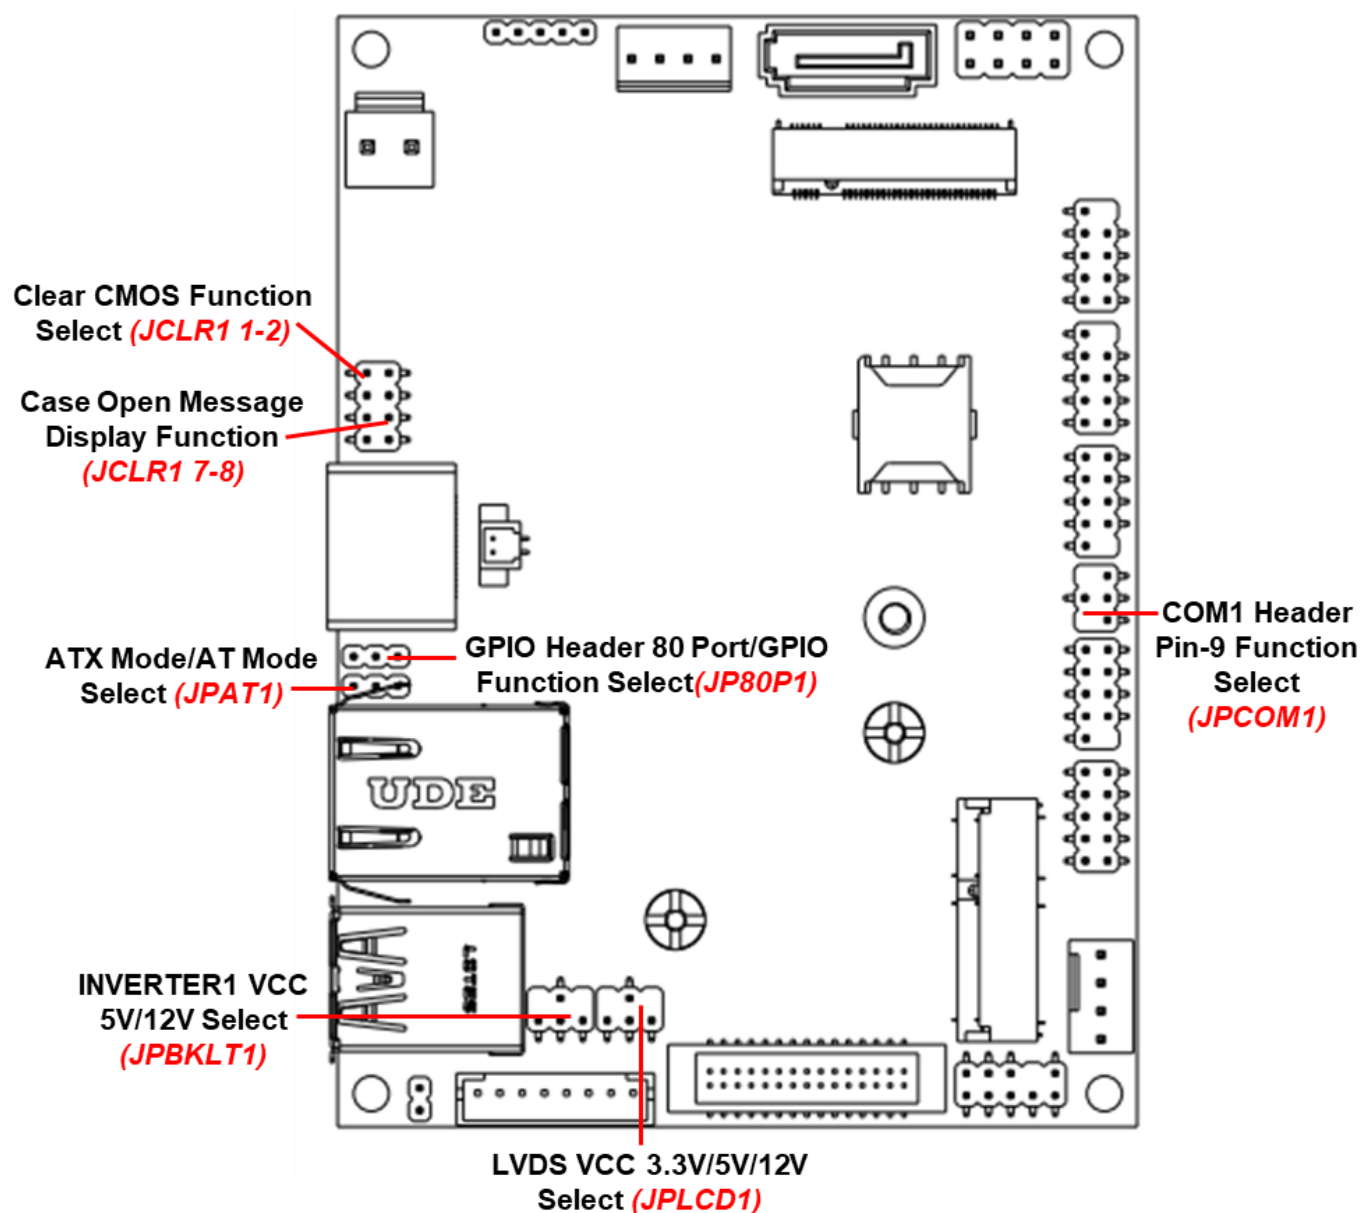


1-7 Heatsink Installation


1. Apply the thermal pad to the designated area as shown below. Ensure proper alignment and coverage for optimal heat dissipation.

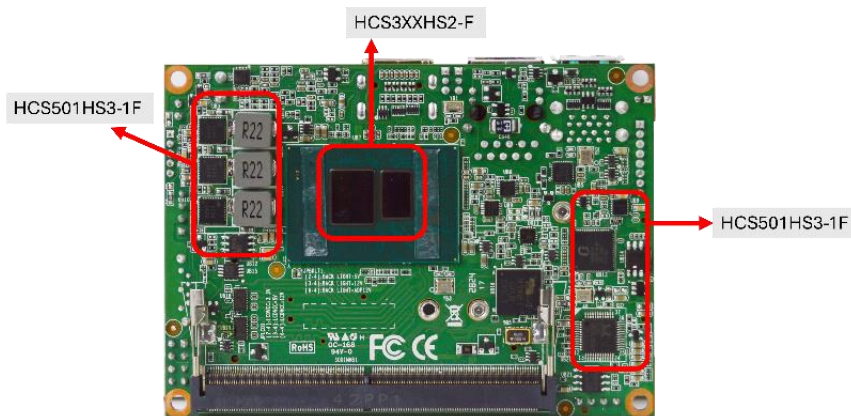

After

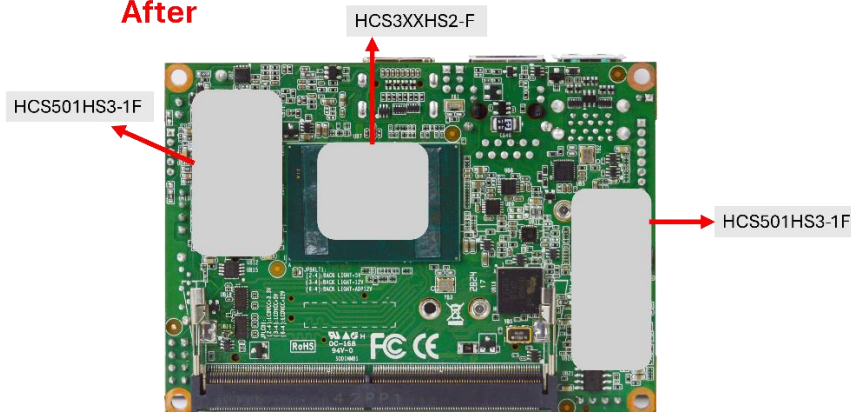

2. Place the motherboard with the side containing the thermal pad facing upward. Align the screw holes on the motherboard with those on the heatsink, then fasten screws properly using a screwdriver.

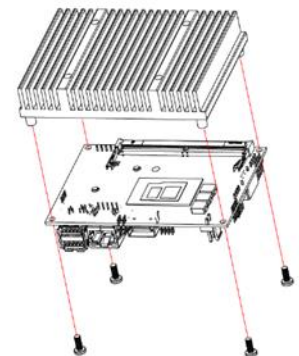

Chapter 2 Hardware Information



2-1 List of Jumpers

Please refer to the table below for all of the board's jumpers that you can configure for your application.

Location Printing	Function
JPAT1	ATX Mode/AT Mode Select
JP80P1	GPIO/80 Port Function Select
JPBKLT1	Inverter Power Function Select
JPLCD1	LVDS PVCC 3.3V/5V/12V Function Select
JPCOM1	COM1 Port Pin-9 Function Select
JCLR1 1-2	Clear CMOS Function Select
JCLR1 7-8	Case Open Message Display Function

2-2 Jumper Settings

(1) ATX Mode/AT Mode Select (JPAT1)


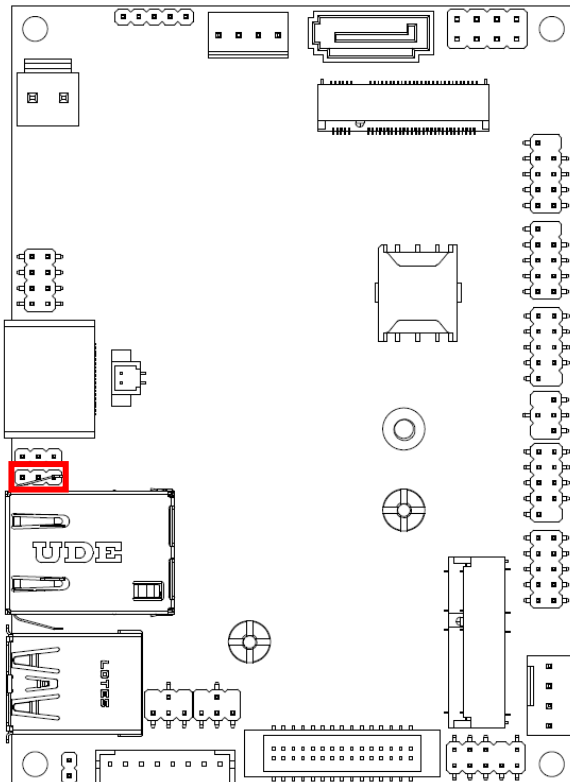


1-2 Closed:ATX Mode Selected



2-3 Closed:AT Mode Selected

(2) GPIO/80 Port Function Select (JP80P1)


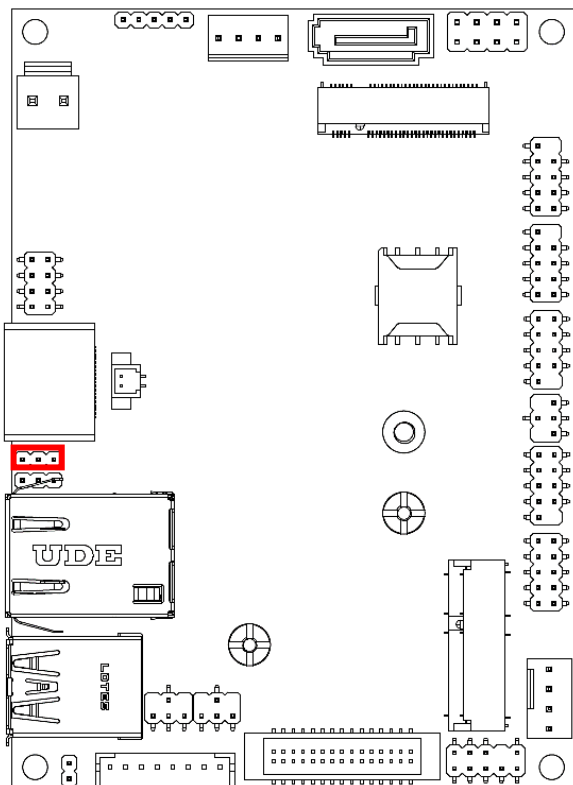


1-2 Closed:80 Port Selected




2-3 Closed:GPIO Port Selected


(3) Inverter Power Function Select (JPBKLT1)

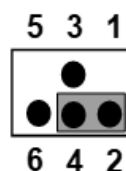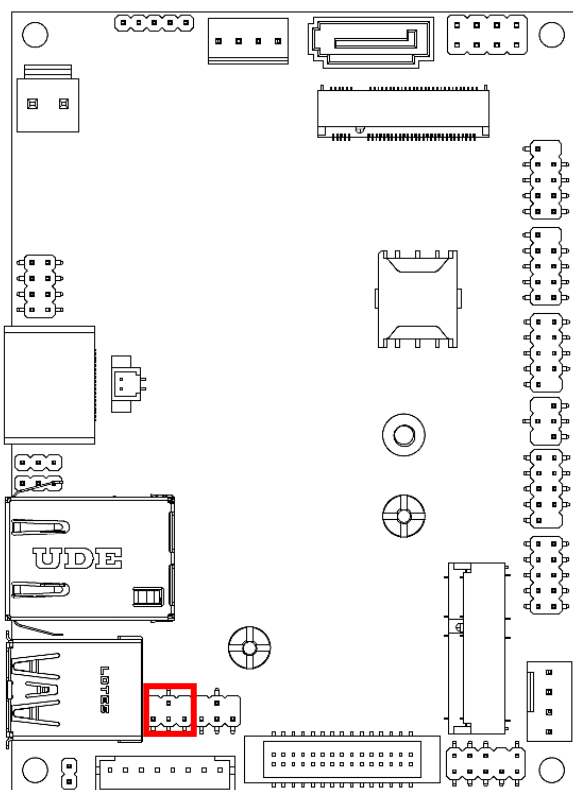

2-4 Closed:
Power=5V;


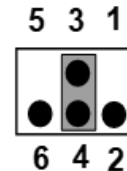


3-4 Closed:
Power=12V;

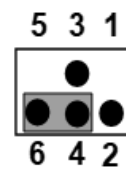


4-6 Closed:
Power=ADP12V


(4) LVDS VCC 3.3V/5V/12V Function Select (JPLCD1)

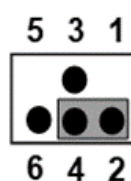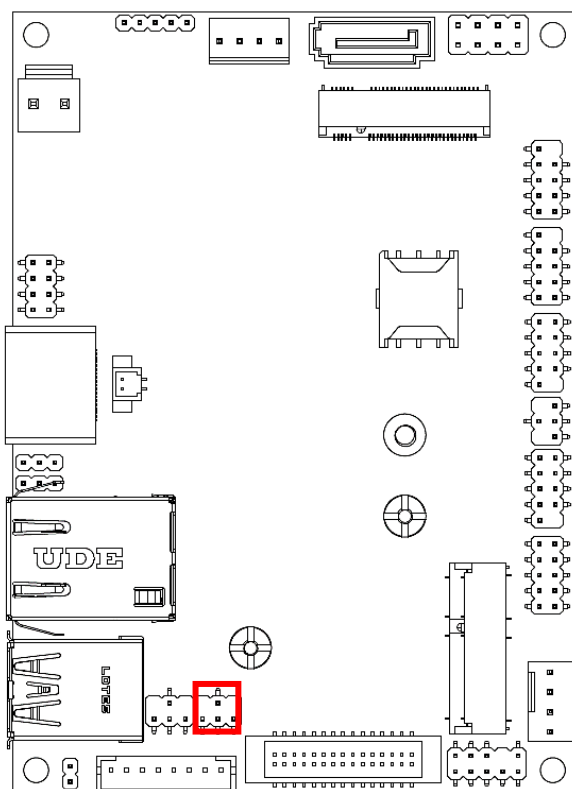

2-4 Closed:
VCC=3.3V;


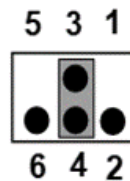


3-4 Closed:
VCC=5V;

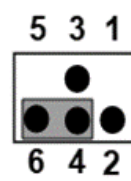


4-6 Closed:
VCC=12V


(5) COM1 Port Pin-9 Function Select (JPCOM1)

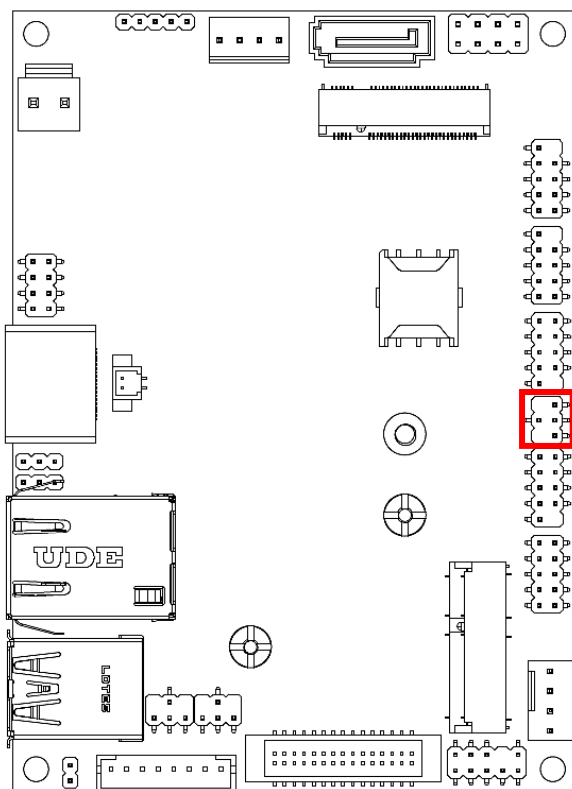

2-4 Closed:
RI=RS232;






3-4 Closed:
RI= 5V;






4-6 Closed:
RI= 12V;

(6) Clear CMOS Function Select (JCLR1 1-2)

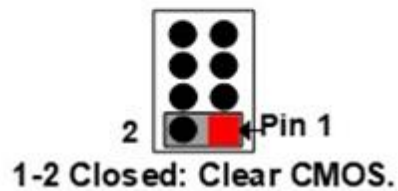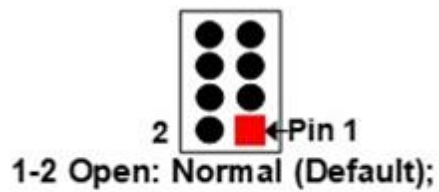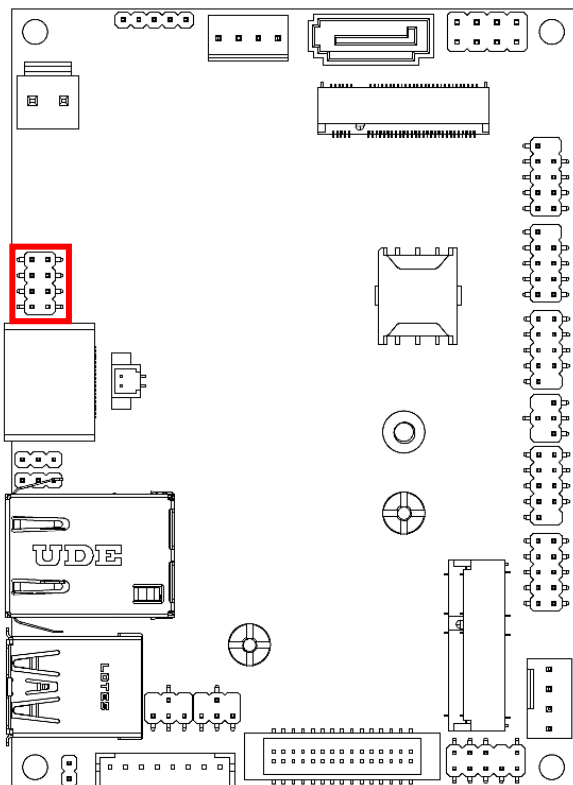

(7) Case Open Message Display Function (JCLR1 7-8)

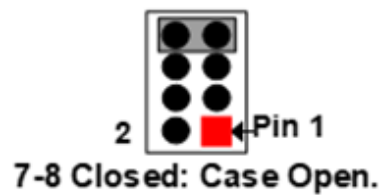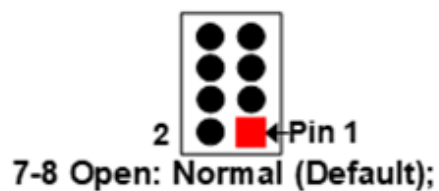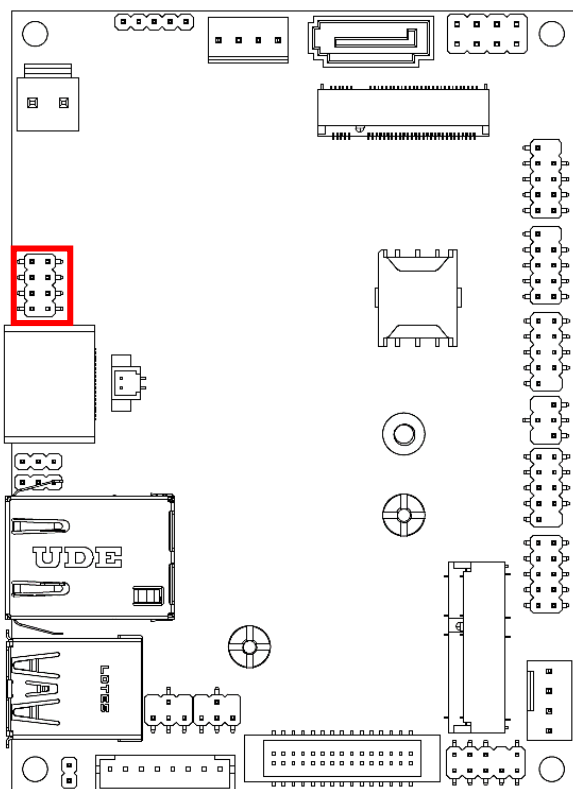


2-3 List of Connectors

Please refer to the table below for all of the board's jumpers that you can configure for your application.

Location Printing	Function
DCIN2	Internal 12V DC-in Power Connector
HDMI	HDMI Connector
BATCON1	RTC Battery Connector
LAN1	RJ-45 2.5GbE LAN Connector
USB1	USB 3.2 Gen2 Connector
INVERTER1	LVDS/eDP Inverter Wafer
LVDS_EDP1	LVDS/EDP LCD Panel Wafer
F_AUDIO1	Front Panel Line-Out, MIC-In Header
CPUFAN1	CPU FAN Connector
M2E1	M.2 2230 E-Key Slot
GPIO1	8-Bit GPIO Port/80 Port Header
COM1	RS-232 Serial Port Header
COM2	RS-232 Serial Port Header
SIMCARD1	Nano SIM Card Slot
F_USB1	USB 2.0 Port Header
F_USB2	USB 2.0 Port Header
JW_FP1	Front Panel Header
M2B1	M.2 2242/3052 B-Key Slot
SATA1	SATA 3 Port Connector
SATAPW1	SATA HDD Power Wafer
I2C_SMBUS1	I2C or SMBus Header (Default SMBus)
F_BUZZ1	Buzzer Header
SODIMM1	DDR5 SODIMM Socket


2-4 Connector Settings

(1) Internal 12V DC-in Power Connector (DCIN2)

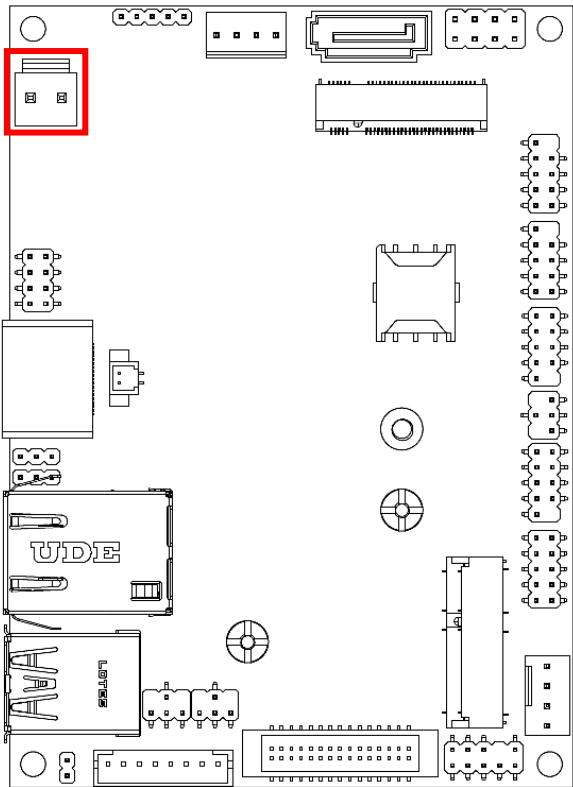



Pin No.	Definition
1	+12V DC-In
2	GND

(2) HDMI Connector (HDMI1)


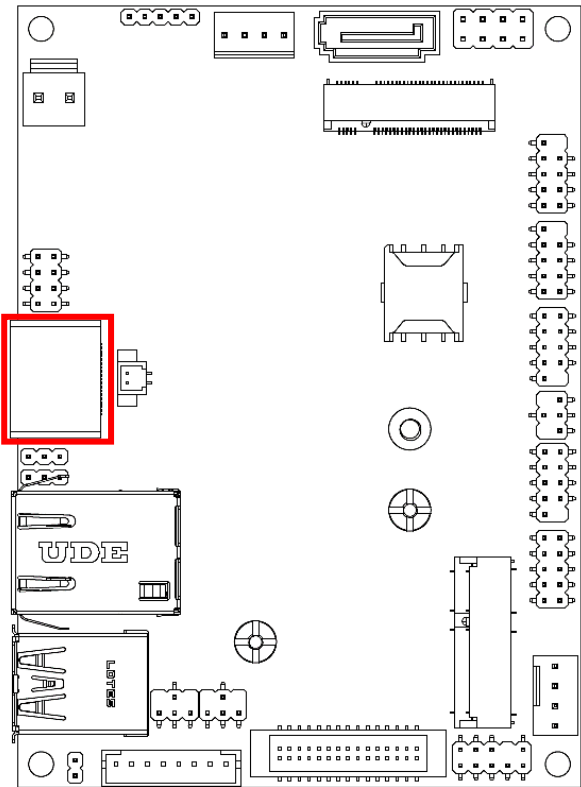


Note: Standard specifications.

(3) RTC Battery Connector (BATCON1)

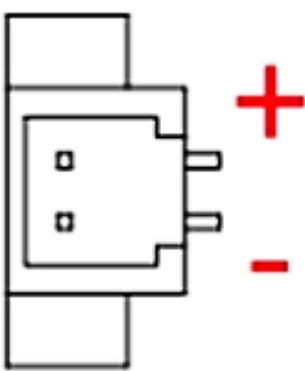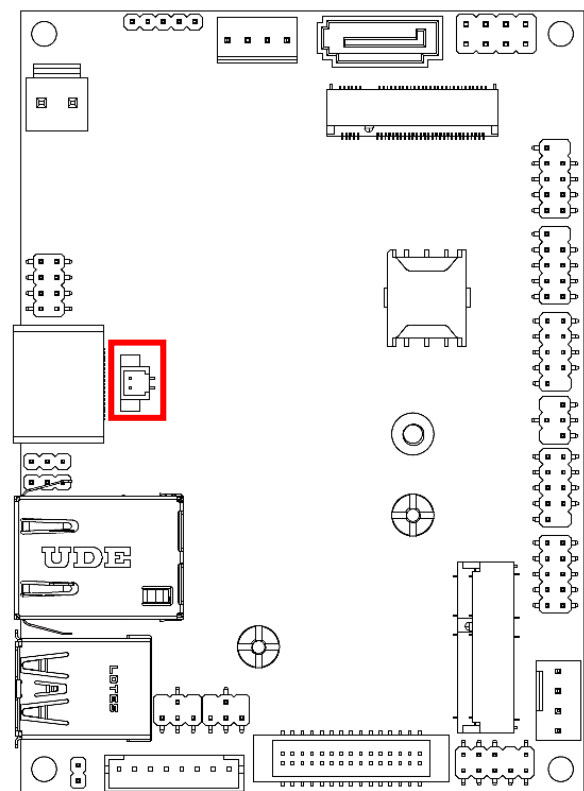

(4) RJ45 2.5GbE Lan Connector (LAN1)

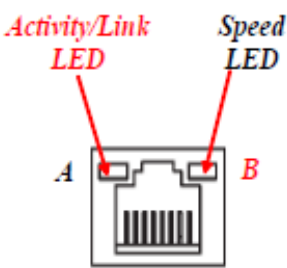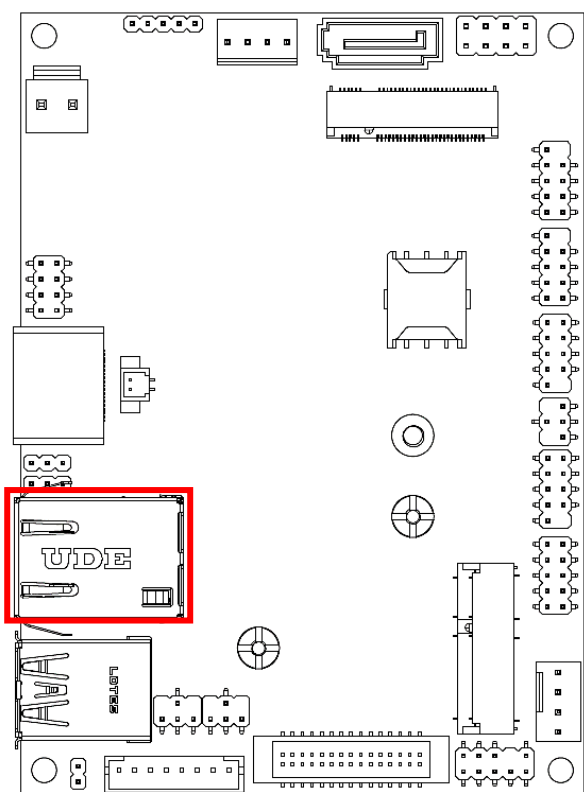


A: Activity/Link LED		B: Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10/100Mbps connection
Blinking	Data Activity	Orange	1000Mbps connection
On	Link	Green	2.5Gbps connection

Note: 2.5Gbps high-speed transmission rate is **only** supported over CAT 5e UTP cable.



Note: Standard specifications.

(5) USB 3.2 Gen2 Connector (USB1)

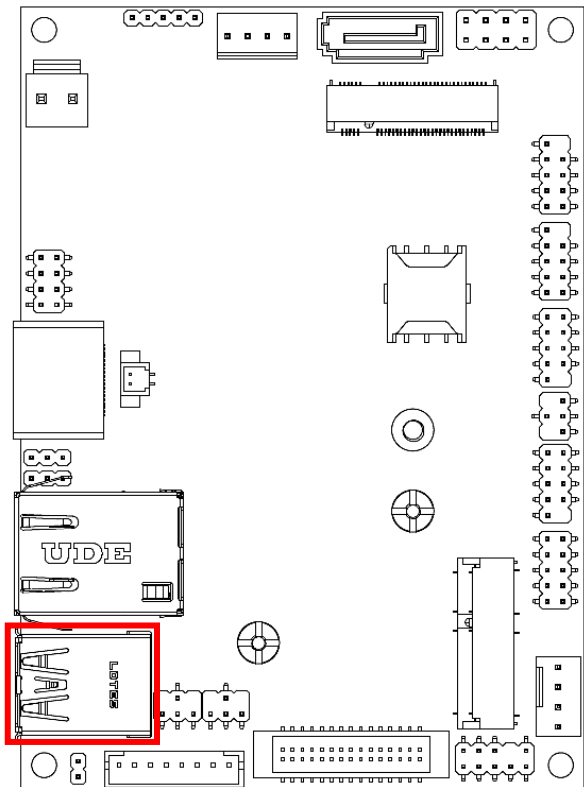



Note: Standard specifications.

(6) LVDS/eDP Inverter Wafer (INVERTER1)

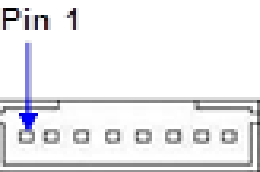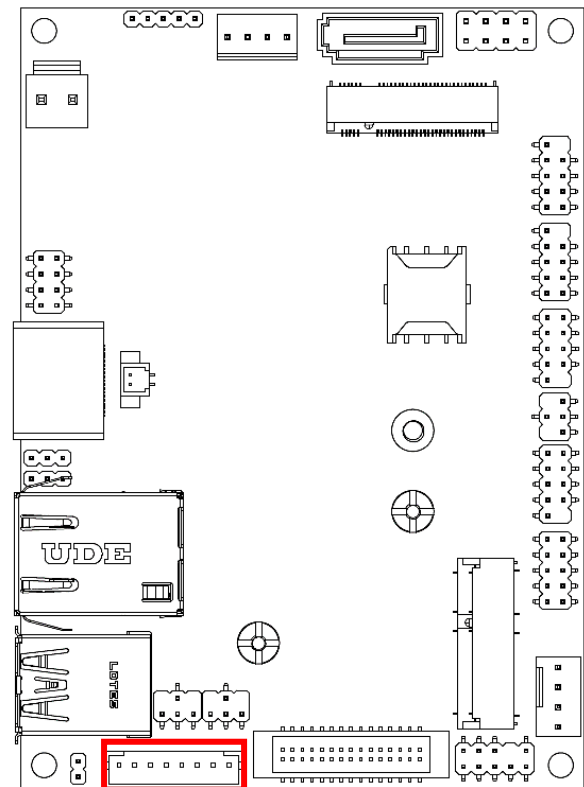



Pin No.	Definition
1	Backlight Enable
2	Backlight PWM
3	PVCC
4	PVCC
5	GND
6	GND
7	Backlight Up SW
8	Backlight Down SW

(7) LVDS/EDP LCD Panel Wafer (LVDS_EDP1)

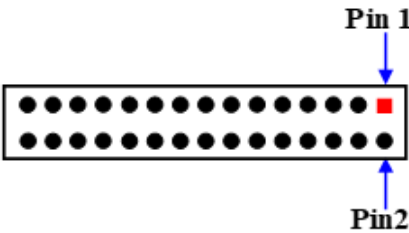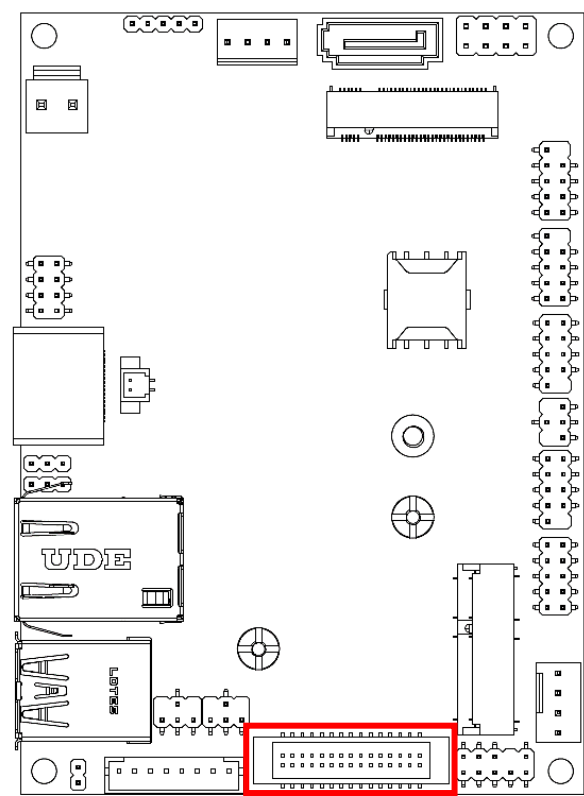



Pin Define	Pin NO.	Pin NO.	Pin Define
LCD_VCC	Pin 30	Pin 29	LCD_VCC
LCD_VCC	Pin 28	Pin 27	LCD_VCC
LVDSA_DATAN0	Pin 26	Pin 25	LVDSA_DATAP0
LVDSA_DATAN1_eDP_TX1N	Pin 24	Pin 23	LVDSA_DATAP1_eDP_TX1P
LVDSA_DATAN2_eDP_TX0N	Pin 22	Pin 21	LVDSA_DATAP2_eDP_TX0P
LVDS_CLKAN_eDP_AUXN	Pin 20	Pin 19	LVDS_CLKAP_eDP_AUXP
LVDSA_DATAN3	Pin 18	Pin 17	LVDSA_DATAP3
GND	Pin 16	Pin 15	GND
GND	Pin 14	Pin 13	GND
LVDS_DDC_SCL	Pin 12	Pin 11	LVDS_DDC_SDA
LVDSB_DATAP0	Pin 10	Pin 9	LVDSB_DATAN0
LVDSB_DATAP1	Pin 8	Pin 7	LVDSB_DATAN1
LVDSB_DATAP2	Pin 6	Pin 5	LVDSB_DATAN2
LVDS_CLKBP	Pin 4	Pin 3	LVDS_CLKBN
LVDSB_DATAP3	Pin 2	Pin 1	LVDSB_DATAN3

(8) Front Panel Line-Out, MIC-In Header (F_AUDIO1)

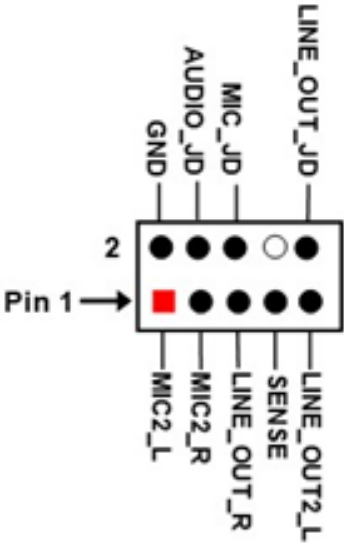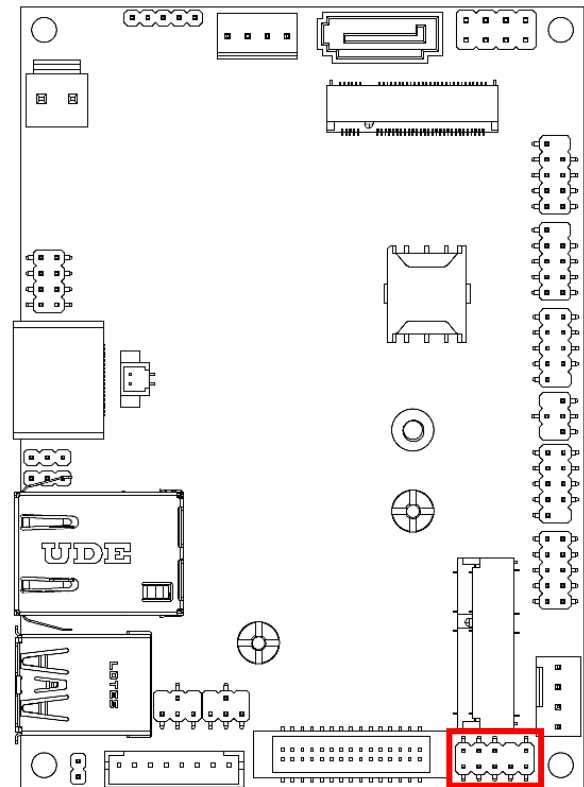



Note: Standard specifications.

(9) CPU FAN Connector (CPUFAN1)

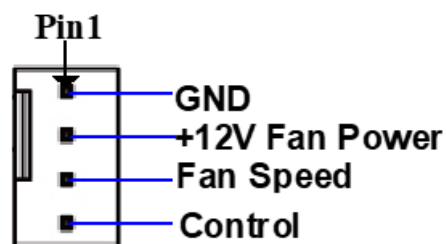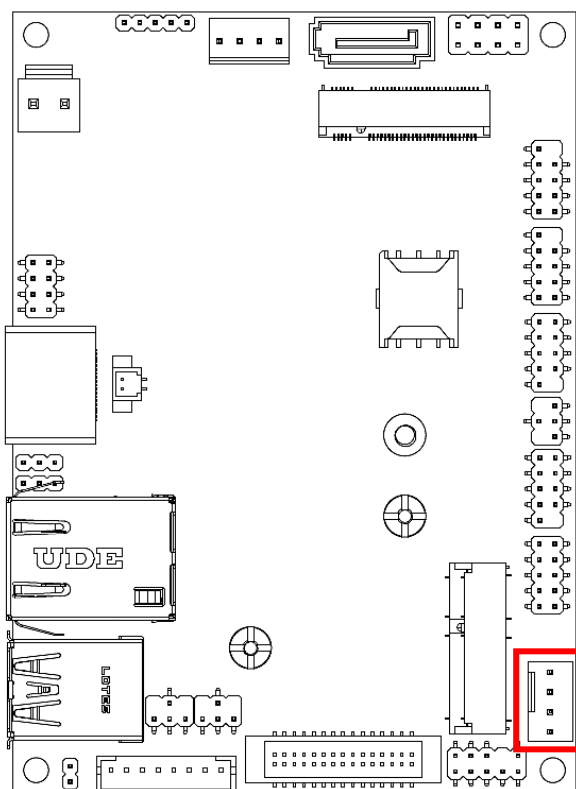



Note: Standard specifications.

(10) M.2 2230 KEY E Socket (M2E1)

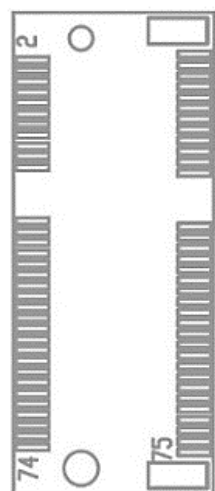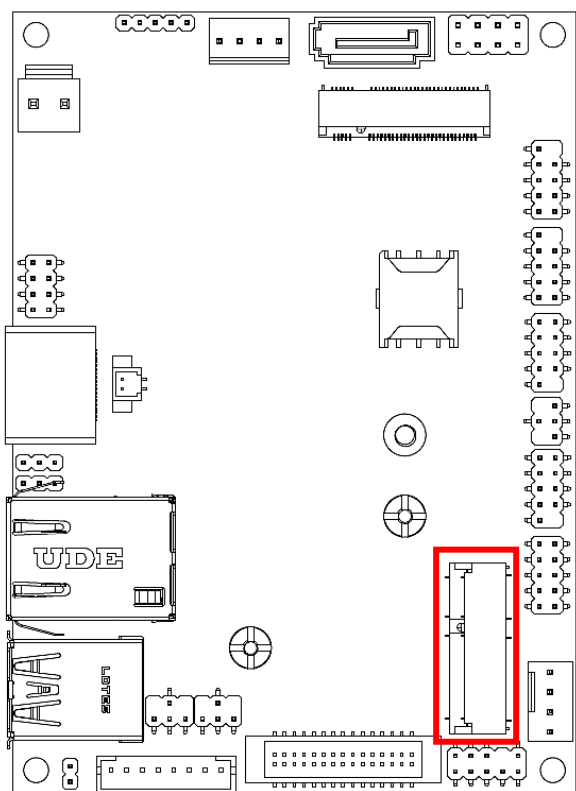


Note: Standard specifications.

(11) 8 Bit GPIO Port /80 Port Header (GPIO1)

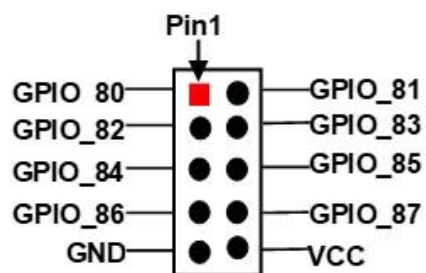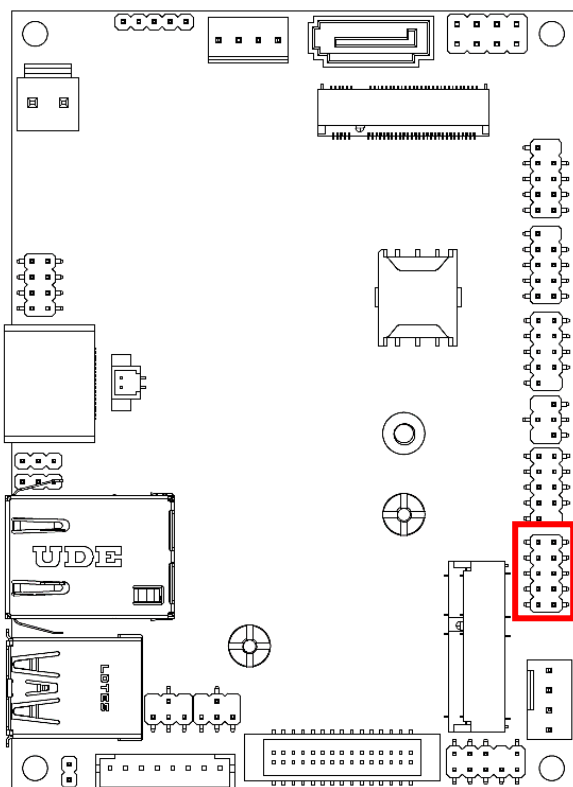


(12) RS232 Serial Port Header (COM1)

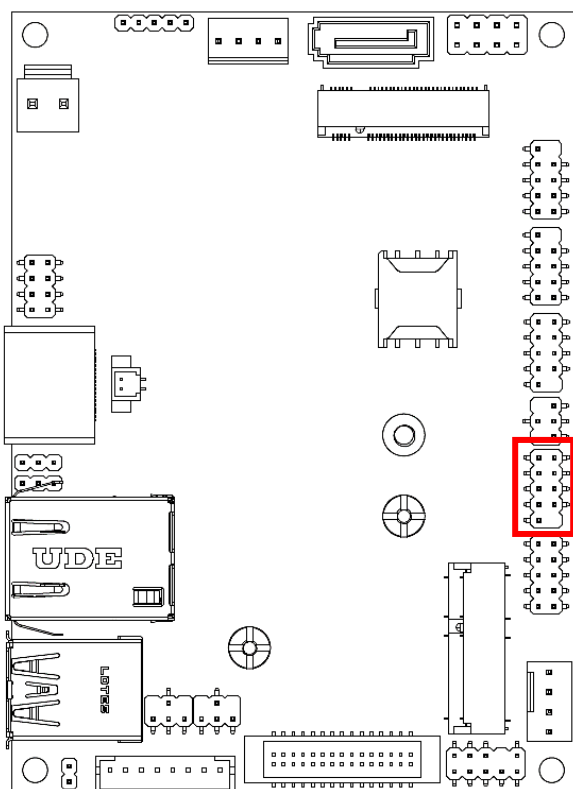



Pin NO.	RS232	*RS422 (optional)	*RS485 (optional)
Pin 1	DCD	TX-	DATA-
Pin 2	RXD	TX+	DATA+
Pin 3	TXD	RX+	NC
Pin 4	DTR	RX-	NC
Pin 5	GND	GND	GND
Pin 6	DSR	NC	NC
Pin 7	RTS	NC	NC
Pin 8	CTS	NC	NC
Pin 9	RI	NC	NC

(13) RS232 Serial Port Header (COM2)

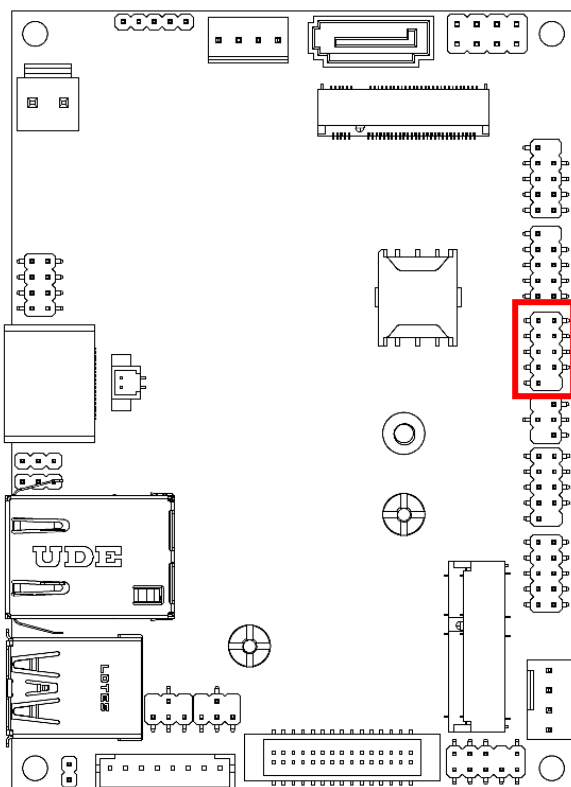



Pin NO.	RS232	*RS422 (optional)	*RS485 (optional)
Pin 1	DCD	TX-	DATA-
Pin 2	RXD	TX+	DATA+
Pin 3	TXD	RX+	NC
Pin 4	DTR	RX-	NC
Pin 5	GND	GND	GND
Pin 6	DSR	NC	NC
Pin 7	RTS	NC	NC
Pin 8	CTS	NC	NC
Pin 9	RI	NC	NC

(14) Nano-SIM Card Socket (SIMCARD1)

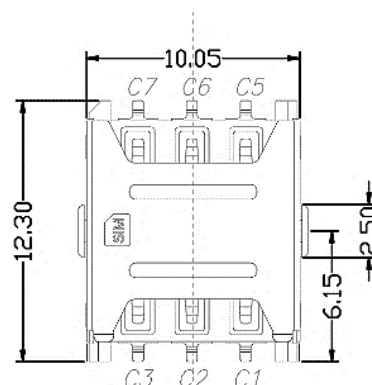
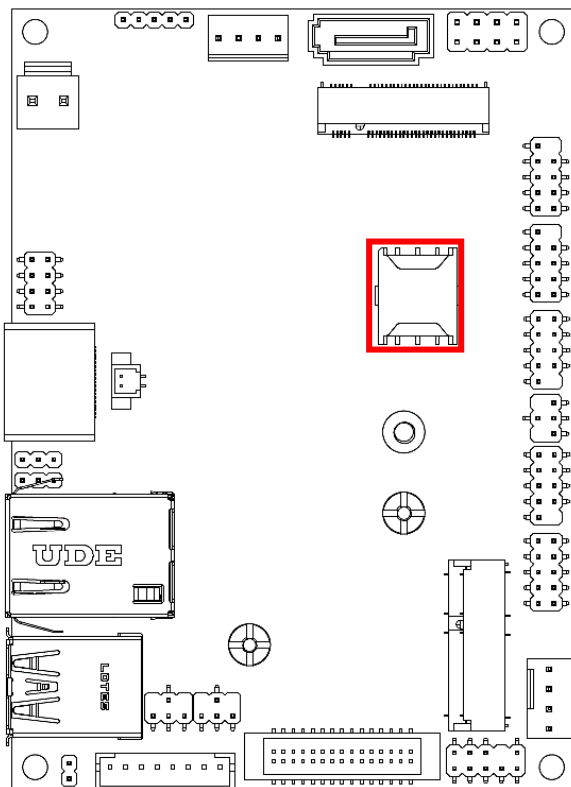


Note: Standard specifications.



(15) USB2.0 Port Header (F_USB1)

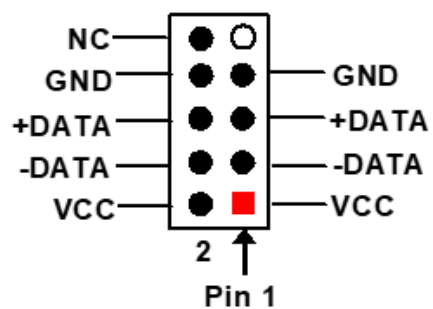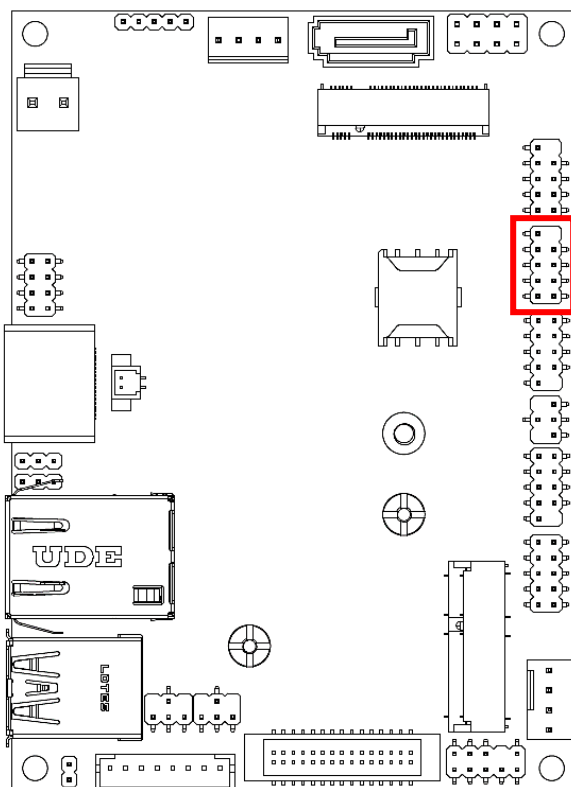



(16) USB2.0 Port Header (F_USB2)

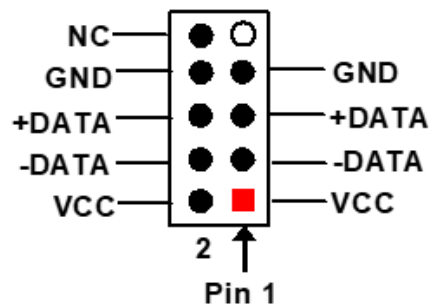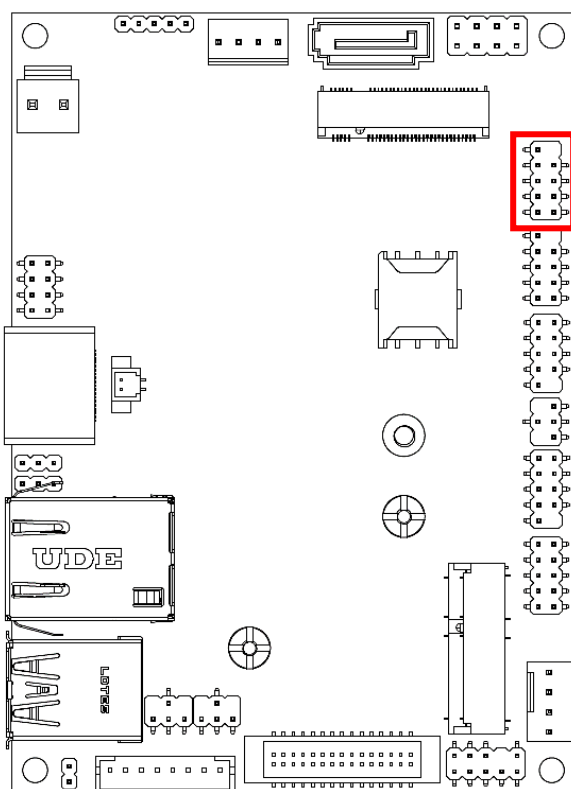

(17) Front Panel Header (JW_FP1)

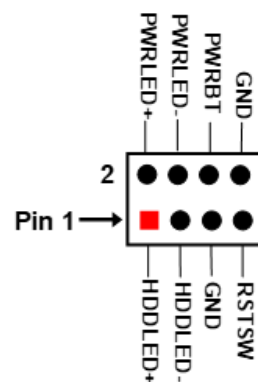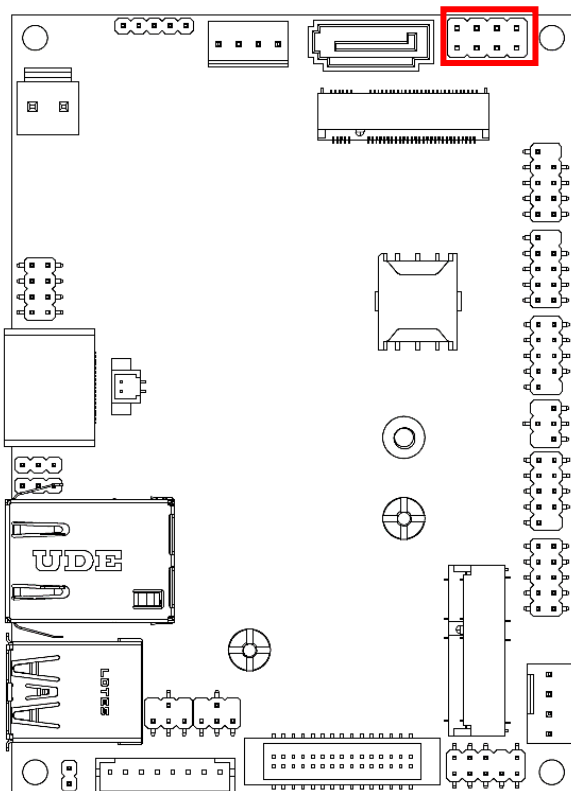


(18) M.2 2242/3052 B-Key Slot (M2B1)

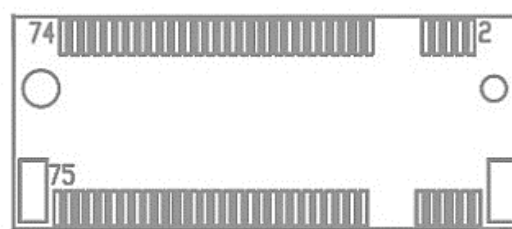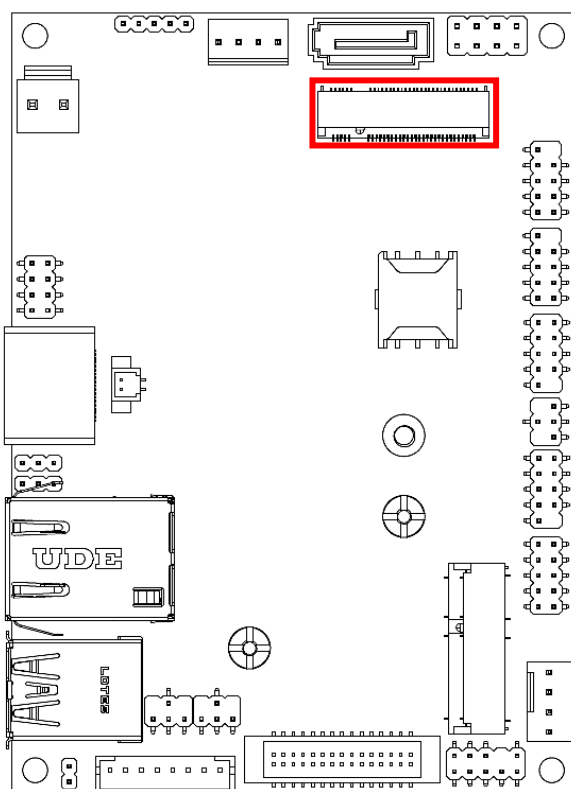

Note: Standard specifications.



(19) SATA 3 Port connector (SATA1)

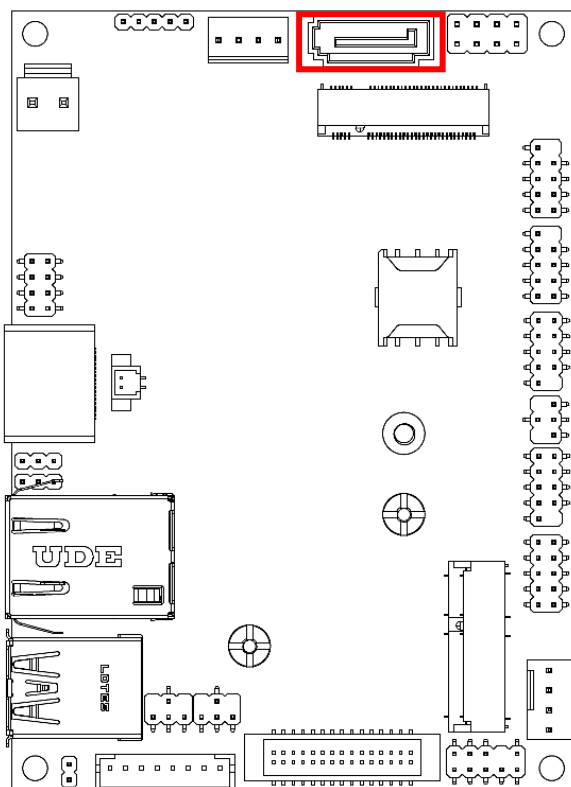



Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

Note: Standard specifications.



(20) SATA HDD Power Wafer (SATAPW1)

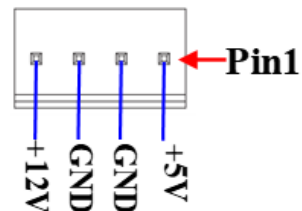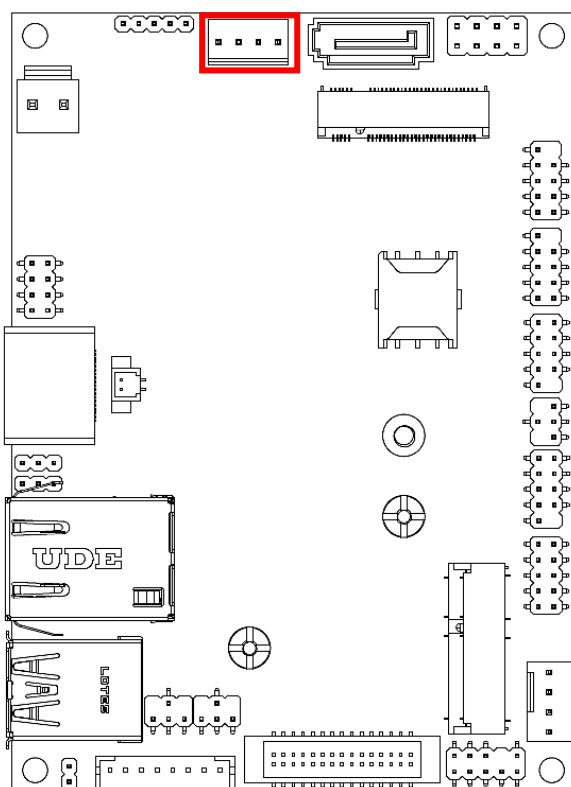


(21) I2C or SMBUS Header (Default SMBUS) (I2C_SMBUS1)

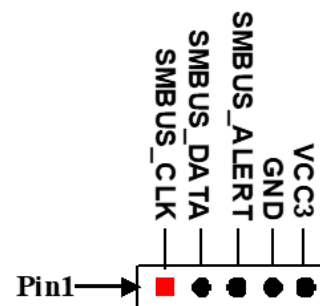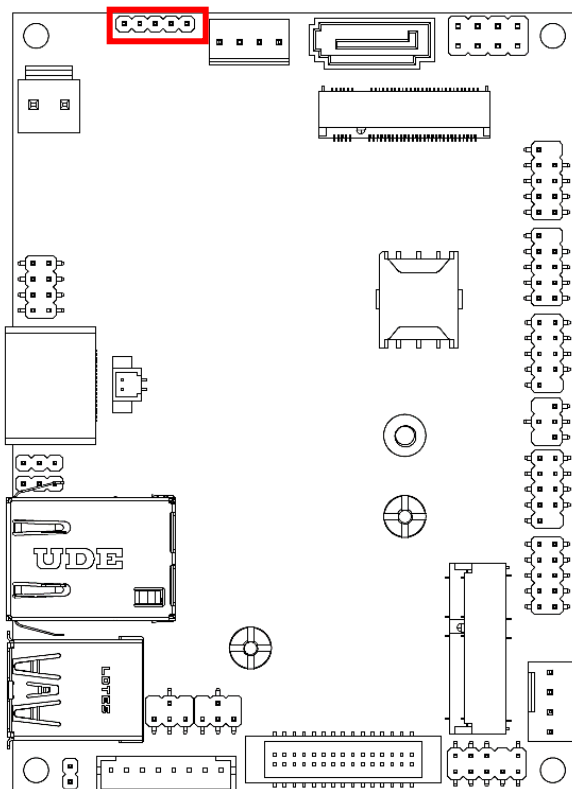

(22) Buzzer Header (F_BUZZ1)

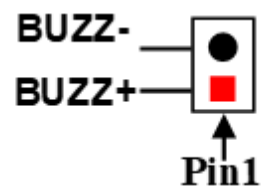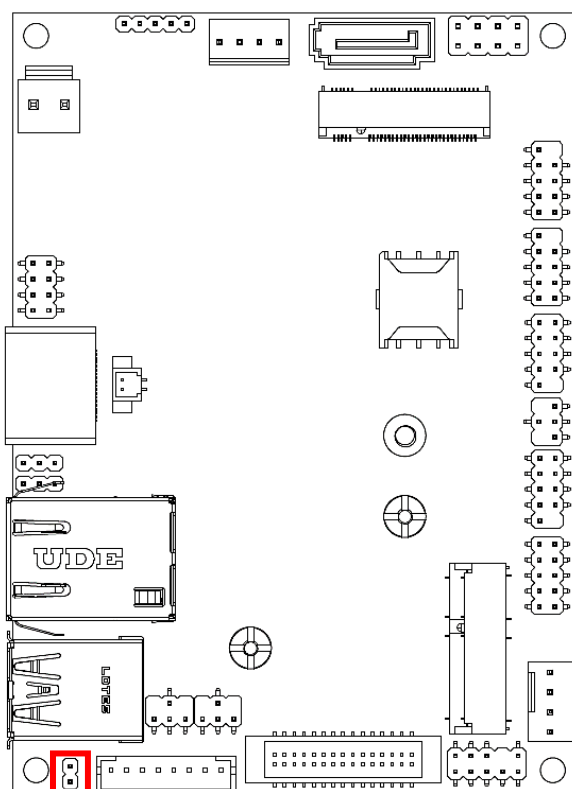

(23) DDR5 SODIMM Slot (SODIMM1)

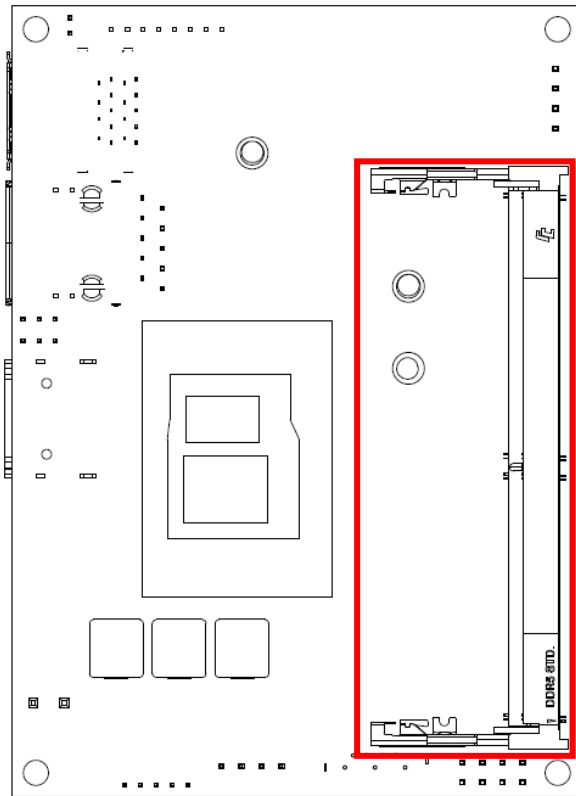

Note: Standard specifications.

2-5 Maximum Voltage & Current Limit

Below is a list of maximum voltage & Current Limit specification for motherboard interface (including but not limited to slots, connectors and headers) for setup reference:

Parts		Working Voltage	Current Support
USB Port From	USB1	5V	2A
	FP_USB1	5V	1.5A
	FP_USB2	5V	1.5A
JW_FP1		5V	1A
LVDS/EDP1		3.3V/5V/12V (via jumper setting)	2A
LVDS/EDP1		5V/12V/Adapter VCC (via jumper setting)	2A
CPUFAN1		12V	1.5A
SATAPWR1		5V/12V	1A
GPIO1		5V	1A
I2C_SMBUS1		5V	0.3A

Chapter 3 Introducing BIOS

Notice! The BIOS options in this manual are for reference only. Different configurations may lead to difference in BIOS screen and BIOS screens in manuals are usually the first BIOS version when the board is released and may be different from your purchased motherboard. Users are welcome to download the latest BIOS version from our official website.


The BIOS is a program located on a Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program will gain control. The BIOS first operates an auto-diagnostic test called POST (power on self-test) for all the necessary hardware, it detects the entire hardware device and configures the parameters of the hardware synchronization. Only when these tasks are completed done it gives up control of the computer to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate, it is the key factor for system stability, and in ensuring that your system performance as its best.

3-1 Entering Setup

Power on the computer and by pressing immediately allows you to enter Setup.

If the message disappears before your respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the “RESET” button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to


Press to enter Setup; press < F7> to enter pop-up Boot menu.

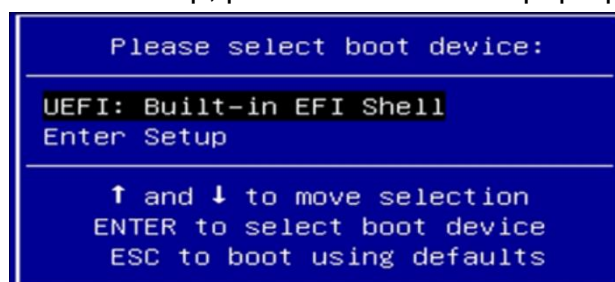

BIOS Boot Menu Screen (boot device options please refer to actual configuration)

3-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen:

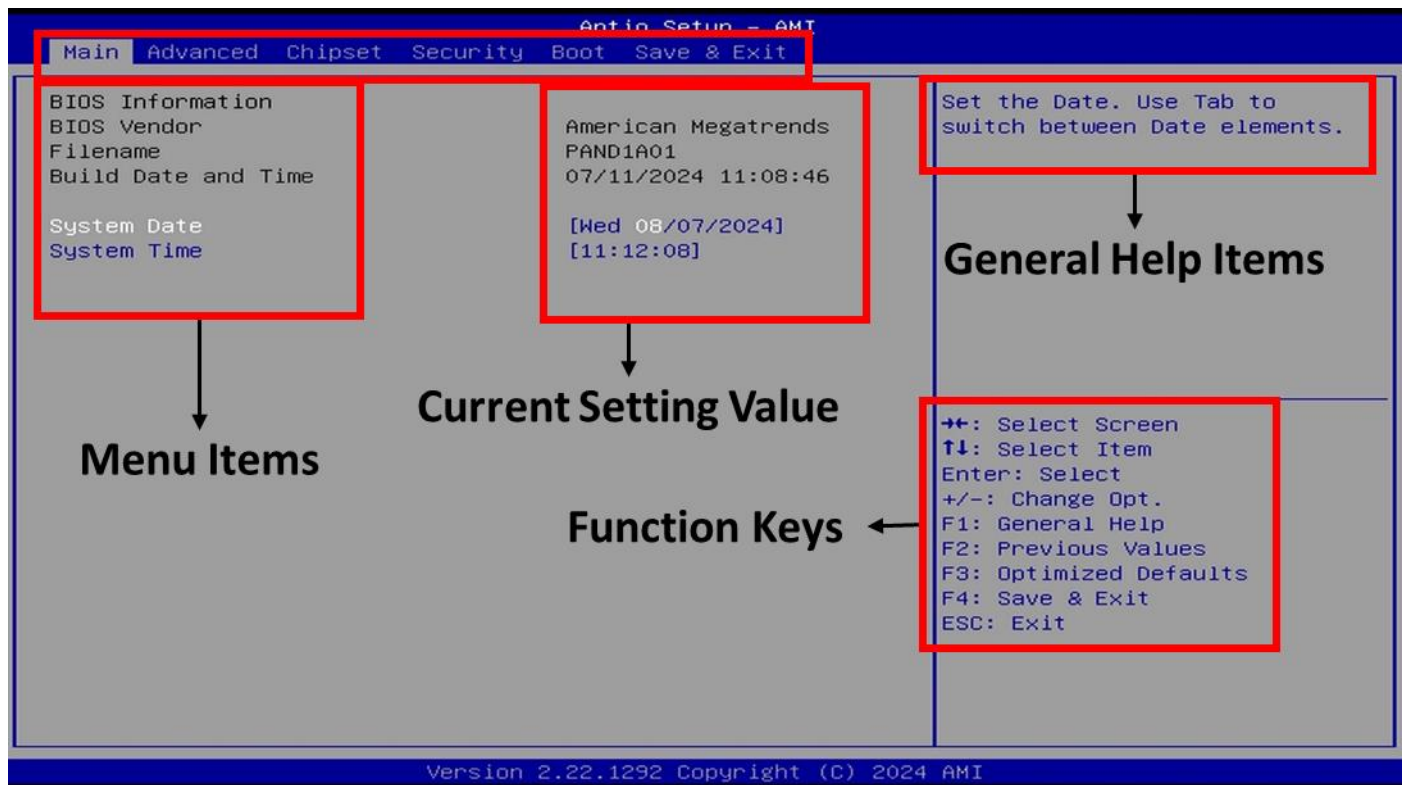

3-3 Function Keys

In the above BIOS Setup main menu of, you can see several options. We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen.
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- Press <Enter> to select.
- Press <+>/<-> keys when you want to modify the BIOS parameters for the active option.
- [F1]: General help.
- [F2]: Previous values.
- [F3]: Optimized defaults.
- [F4]: Save & Exit.
- Press <Esc> to exit from BIOS Setup.

3-4 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

Status Page Setup Menu/Option Page Setup Menu

Press **【F1】** to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press **<Esc>**.

3-5 Menu Bars

There are six menu bars on top of BIOS screen:

Main	To change system basic configuration
Advanced	To change system advanced configuration
Chipset	To change chipset configuration
Security	Password settings
Boot	To change boot settings
Save & Exit	Save setting, loading and exit options.

User can press the right or left arrow key on the keyboard to switch from menu bar. The selected one is highlighted.

3-6 Main Menu

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.




System Date

Set the date. Please use [Tab] to switch between date elements.


System Time

Set the time. Please use [Tab] to switch between time elements.

3-7 Advanced Menu

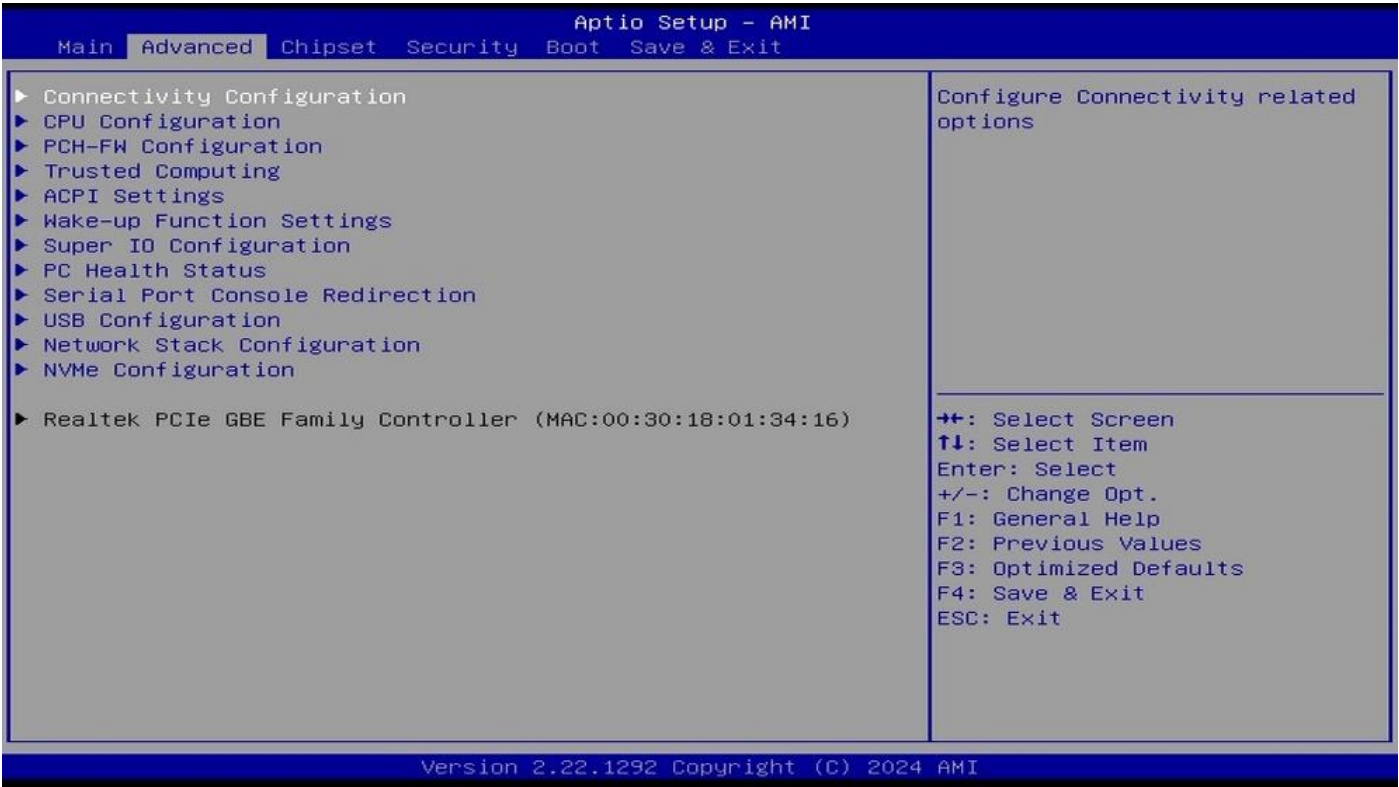

► Connectivity Configuration

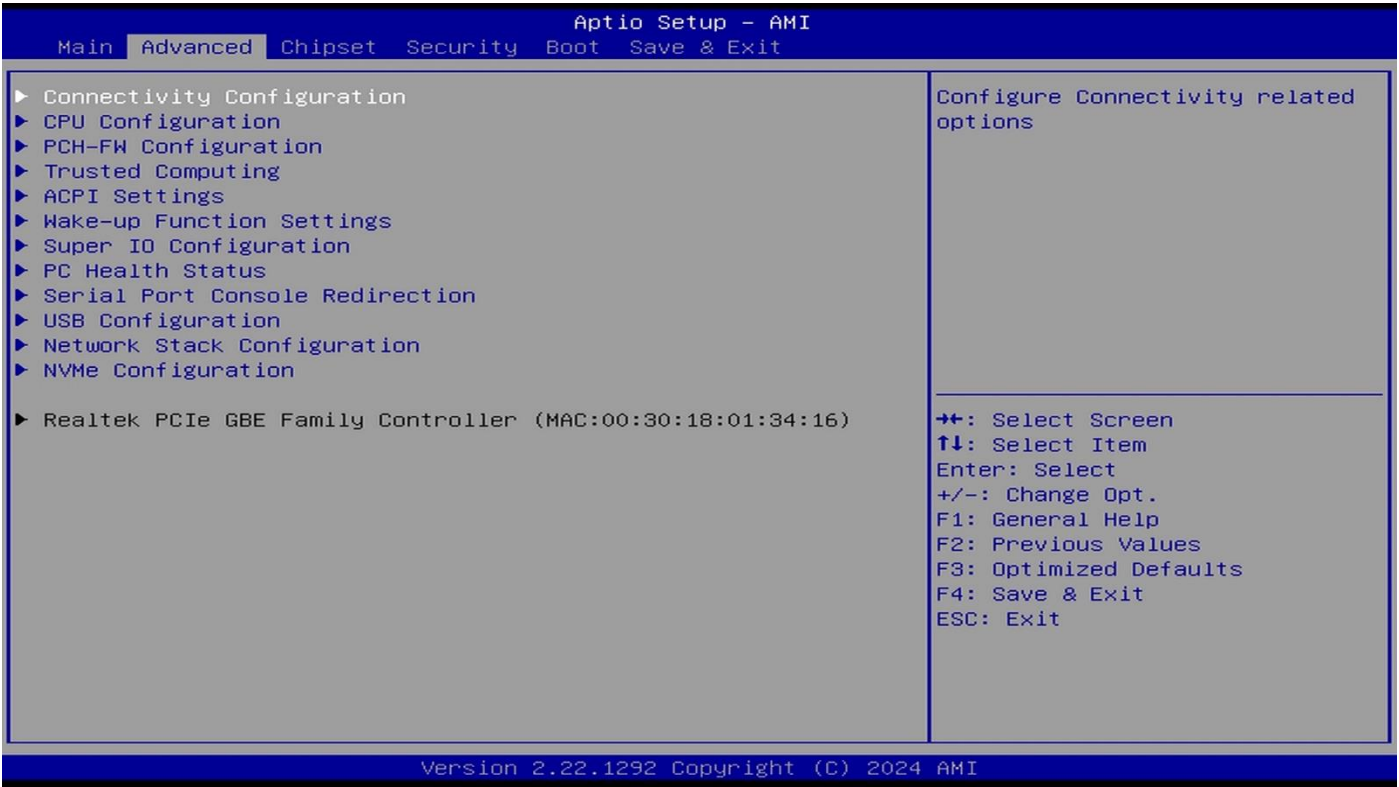

Use this item to configure Connectivity related options. Press [Enter] to make settings for the following sub-items:

► CNVi CRF Present



CNVi Mode

This option configures Connectivity.


CNVi Mode Set the default value to: [Auto Detection]

The optional settings: [Disabled Integrated]; [Auto Detection].

[Auto Detection] means that if Discrete solution is discovered it will be enabled by default. Otherwise Integrated solution (CNVi) will be enabled;

[Disabled Integrated] disables Integrated Solution.

► CPU Configuration

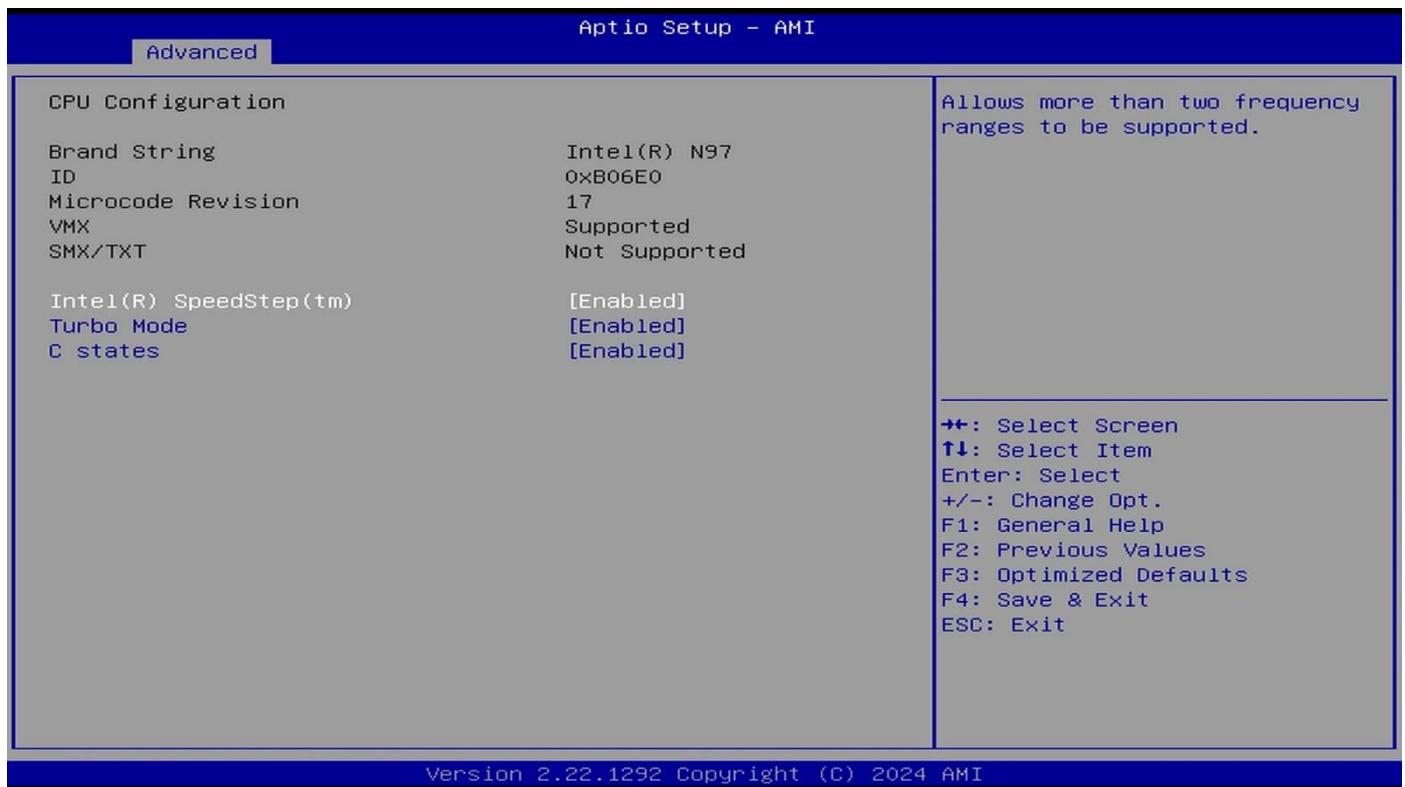

Press [Enter] to view current CPU configuration and make settings for the following sub-items:

Intel(R) SpeedStep(tm)

This item allows more than two frequency ranges to be supported.

Intel(R) SpeedStep(tm) Set the default value to: [Enabled]

The optional settings: [Disabled]; [Enabled].

Turbo Mode

Use this item to enable or disable processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled).

Turbo Mode Set the default value to: [Enabled]

The optional settings: [Disabled]; [Enabled]

C states

Use this item to enable or disable CPU Power Management. When set as [Enabled], it allows CPU to go to C states when it's not 100% utilized.


C states Set the default value to: [Enabled]

The optional settings: [Disabled]; [Enabled].

► **PCH-FW Configuration**

Press [Enter] to view ME information and make settings in the following sub-items:

► **Firmware Update Configuration**

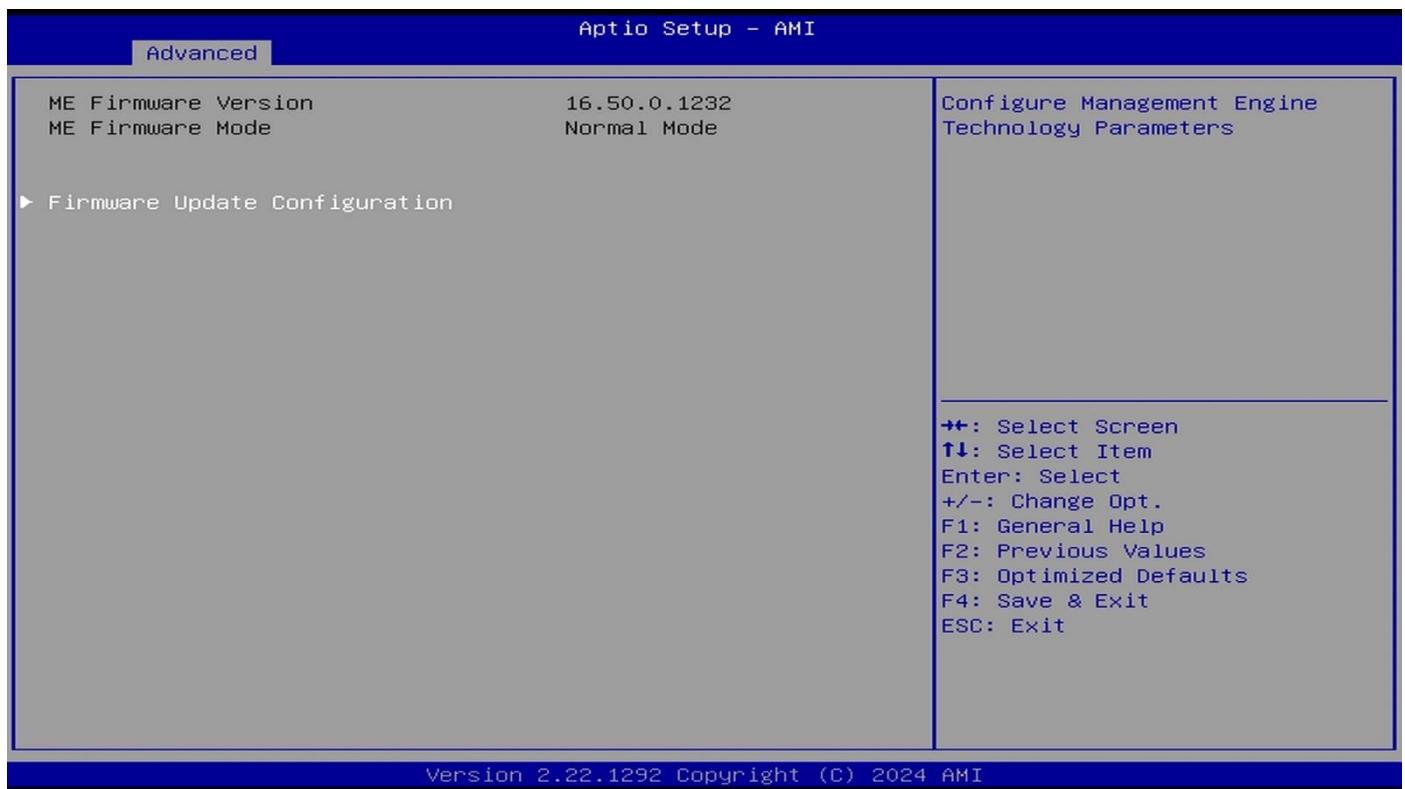

Press [Enter] to make settings for '**ME FW Image RE-Flash**'.

ME FW Image Re-Flash


Use this item to enable or disable ME FW Image Re-Flash function.

ME FW Image Re-Flash Set the default value to: [Disabled]

The optional settings: [Disabled]; [Enabled].

** In the case that user needs to update ME firmware, user should set '**ME FW Image Re-Flash**' as **[Enabled]**, save the settings and exit. The system will turn off and reboot after 4 seconds. If the user goes to BIOS screen again will find this item is set again as **[Disabled]**, but user can still re-flash to update firmware next time.*

► Trusted Computing

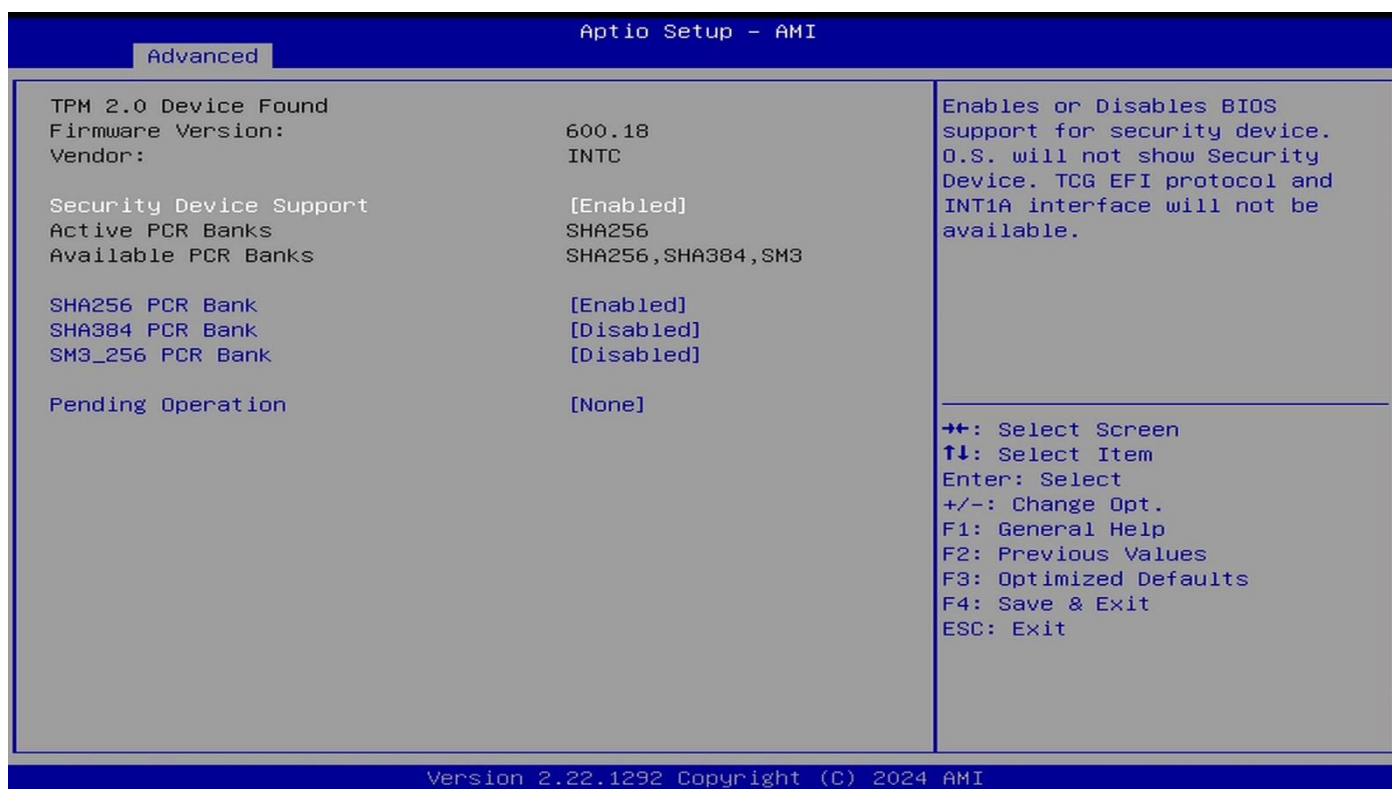

Press [Enter] to make settings in the following sub-items:

Security Device Support

Use this item to enables or disables BIOS support for security device. O.S will not show security device. TCG EFI protocol and INT1A interface will not be available.

The optional settings: [Disabled]; [Enabled].

Security Device Support Set the default value to: [Enabled]

When set as [Enabled], user can make setting in the following items that appear:

SHA256 PCR Bank

Use this item to enable or disable SHA256 PCR Bank.

The optional settings: [Disabled]; [Enabled].

SHA256 PCR Bank Set the default value to: [Enabled]

SHA384 PCR Bank

Use this item to enable or disable SHA384 PCR Bank.

The optional settings: [Disabled]; [Enabled].

SHA384 PCR Bank Set the default value to: [Disabled]

SM3_256 PCR Bank

Use this item to enable or disable SM3_256 PCR Bank.

The optional settings: [Disabled]; [Enabled].

SHA384 PCR Bank Set the default value to: [Disabled]

Pending Operation


Use this item to schedule an operation for security device.

The optional settings: [None]; [TPM Clear].

Pending Operation Set the default value to: [None]

****Note:** *Your computer will reboot during restart in order to change State of Security Device.*

► ACPI Settings

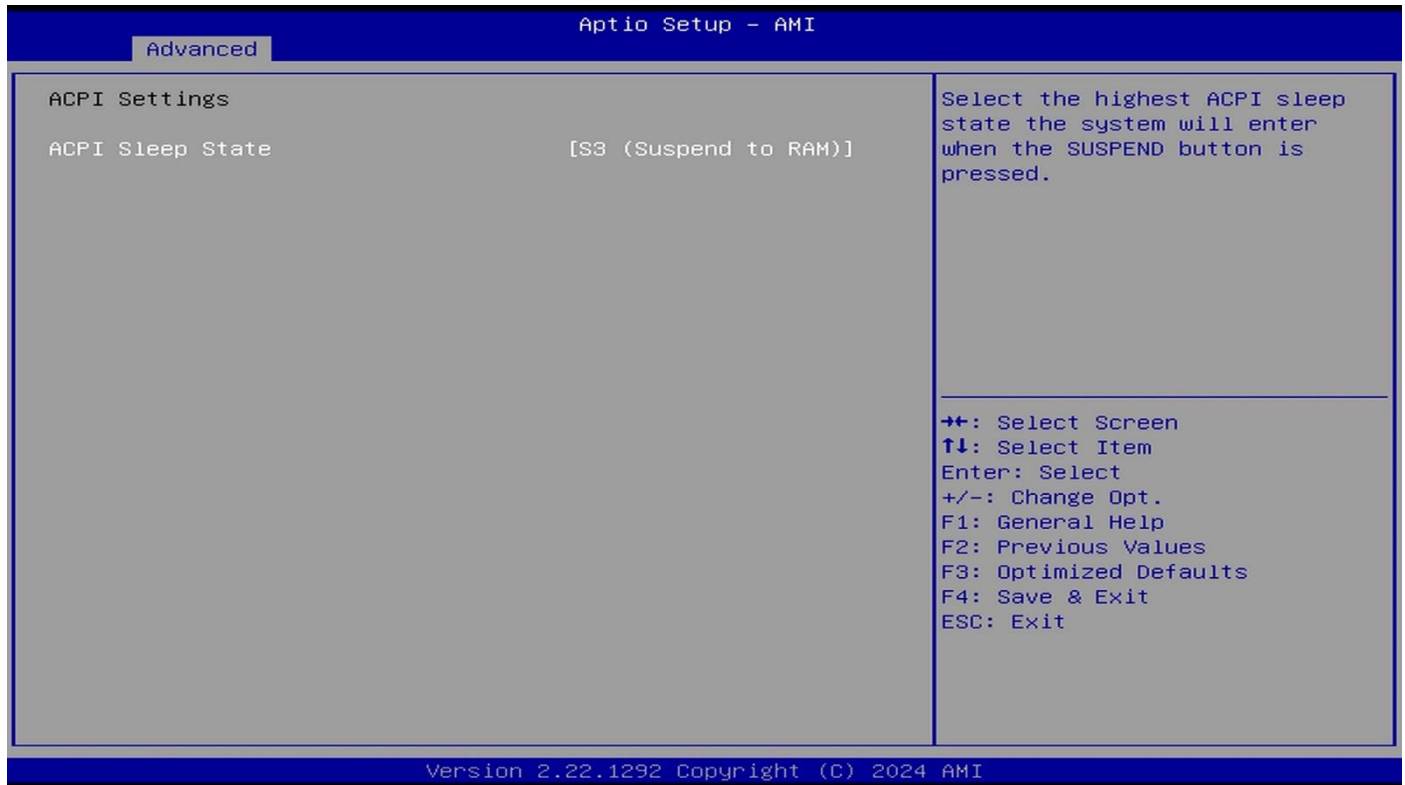

Press [Enter] to make settings for the following sub-items:


PCH-FW **ACPI Sleep State**

Use this item to select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

The optional settings are: [Suspend Disabled]; [S3 (Suspend to RAM)].

ACPI Sleep State Set the default value to: [S3 (Suspend to RAM)]

► Wake-up Function Settings

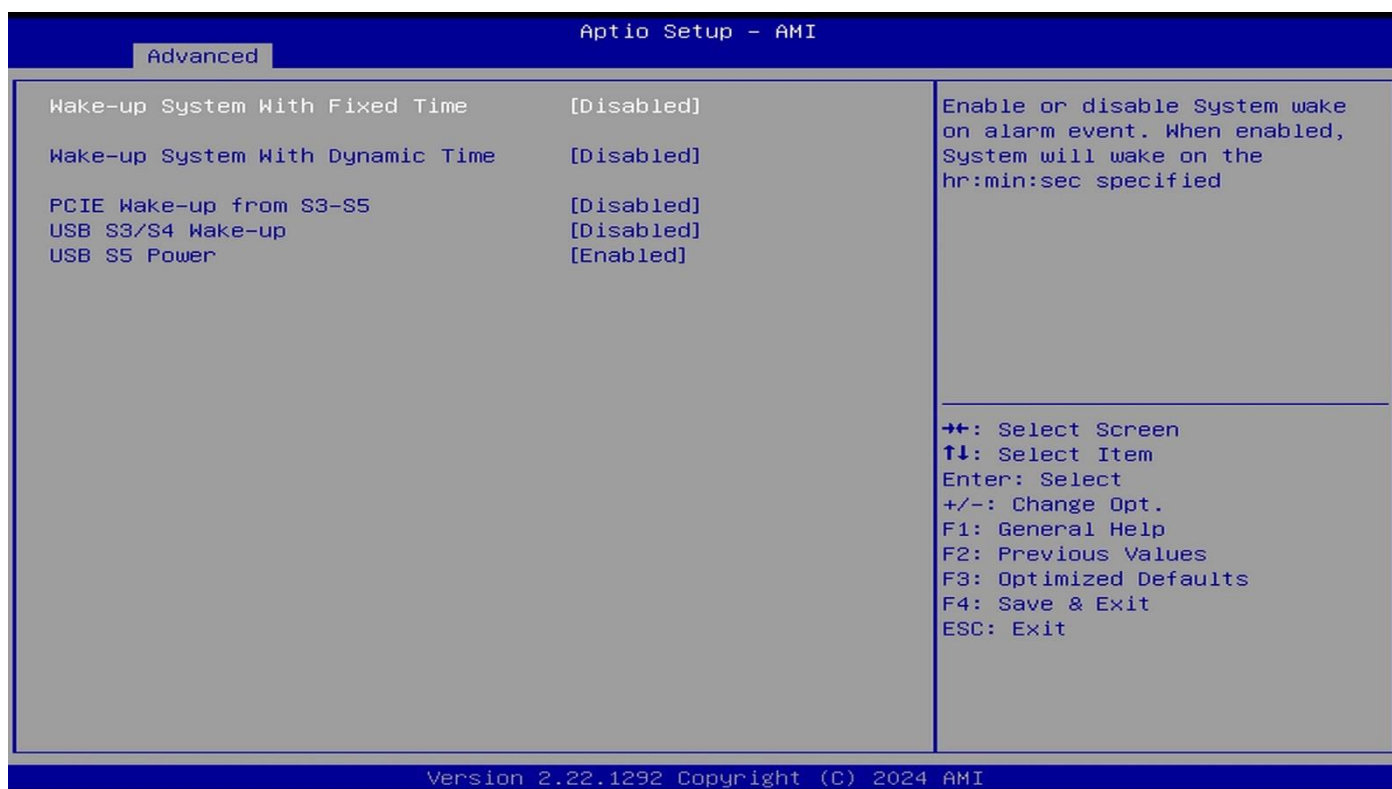

Wake-up System With Fixed Time

**This item will only show when 'Wake-up System with Dynamic Time' is set as [Disabled].*

Use this item to enable or disable system wake-up by RTC alarm. When this function is enabled, system will wake on the time (hr::min::sec) specified.

The optional settings: [Disabled]; [Enabled].

Wake-up System With Fixed Time Set the default value to: [Disabled]

When set as [Enabled], user can make settings in the following items that appear:

Wake-up Hour

Use this item to select 0-23 for example enter 3 for 3am and 15 for 3pm.

Wake-up Hour Set the default value to: [0]

Wake-up Minute

Use this item to select 0-59.

Wake-up Minute Set the default value to: [0]

Wake-up Second

Use this item to select 0-59.

Wake-up Second Set the default value to: [0]

Wake-up System with Dynamic Time

**This item will only show when 'Wake-up System with Fixed Time' is set as [Disabled].*

Use this item to enable or disable system wake-up by RTC alarm. When enabled, system will wake on the current time + Increase minute(s).

Wake-up System with Dynamic Time Set the default value to: [Disabled]

When set as [Enabled], user can make settings in the following items that appear:

Wake-up Minute Increase

Use this item to select 1-60 minute(s).

Wake-up Minute Increase Set the default value to: [1]

PCIE Wake-up from S3-S5

Enable or Disable PCIE Wake-up Support.

The optional settings: [Disabled]; [Enabled].

PCIE Wake-up from S3-S5 Set the default value to: [Disabled]

USB S3/S4 Wake-up

Enable or Disable USB S3/S4 Wake-up Support Only Disable ERP Function.

The optional settings: [Disabled]; [Enabled].

USB S3/S4 Wake-up Set the default value to: [Disabled]

USB S5 Power

USB Power after System Shutdown Support Only Disable ERP Function

The optional settings: [Disabled]; [Enabled].

USB S5 Power Set the default value to: [Enabled]


► **Super IO Configuration**



Press [Enter] to make settings for the following sub-items:

Super IO Configuration

► ERP Support

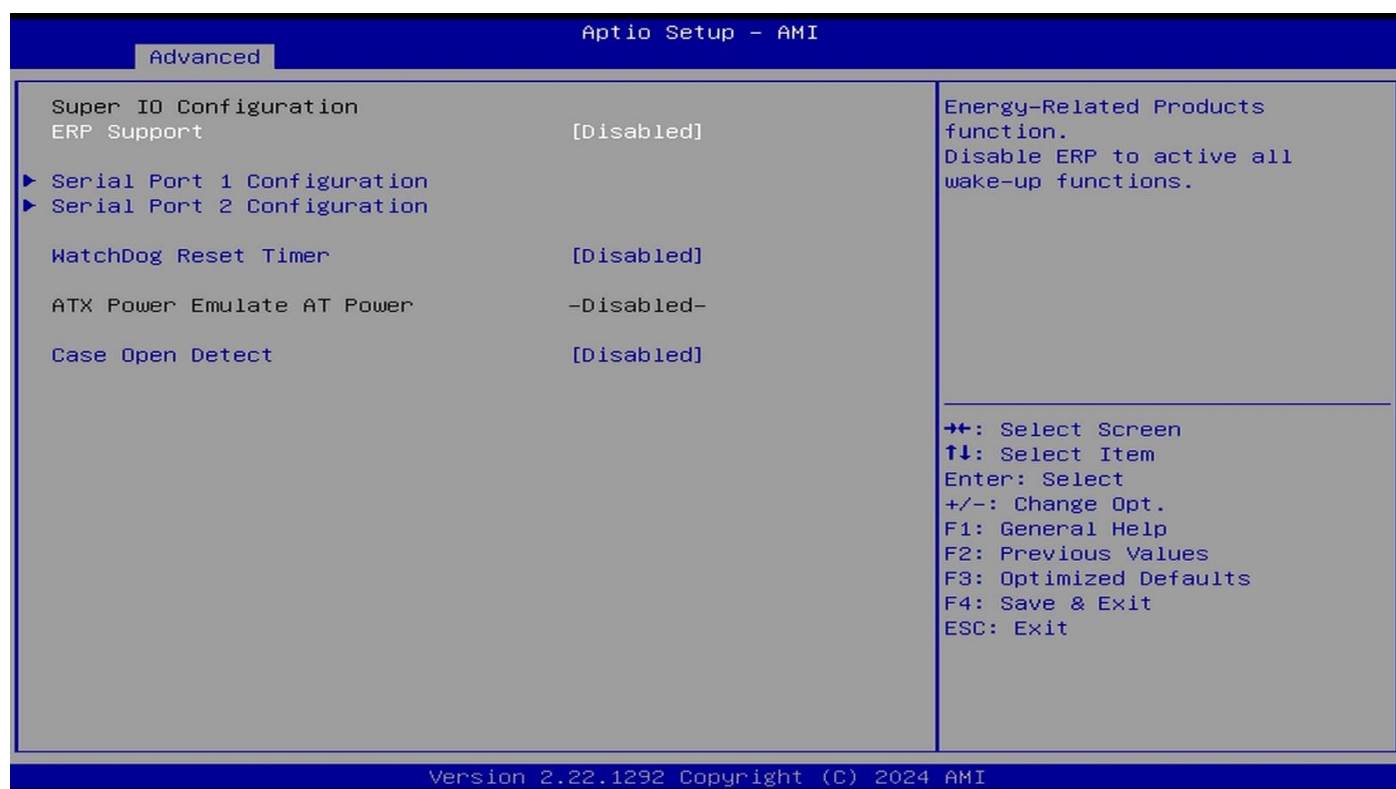


Use this item to make setting for energy-related products function. Disable ERP to active all wake-up function.

The optional settings: [Disabled]; [Enabled].

ERP Support Set the default value to: [Disabled]

► Serial Port 1 Configuration

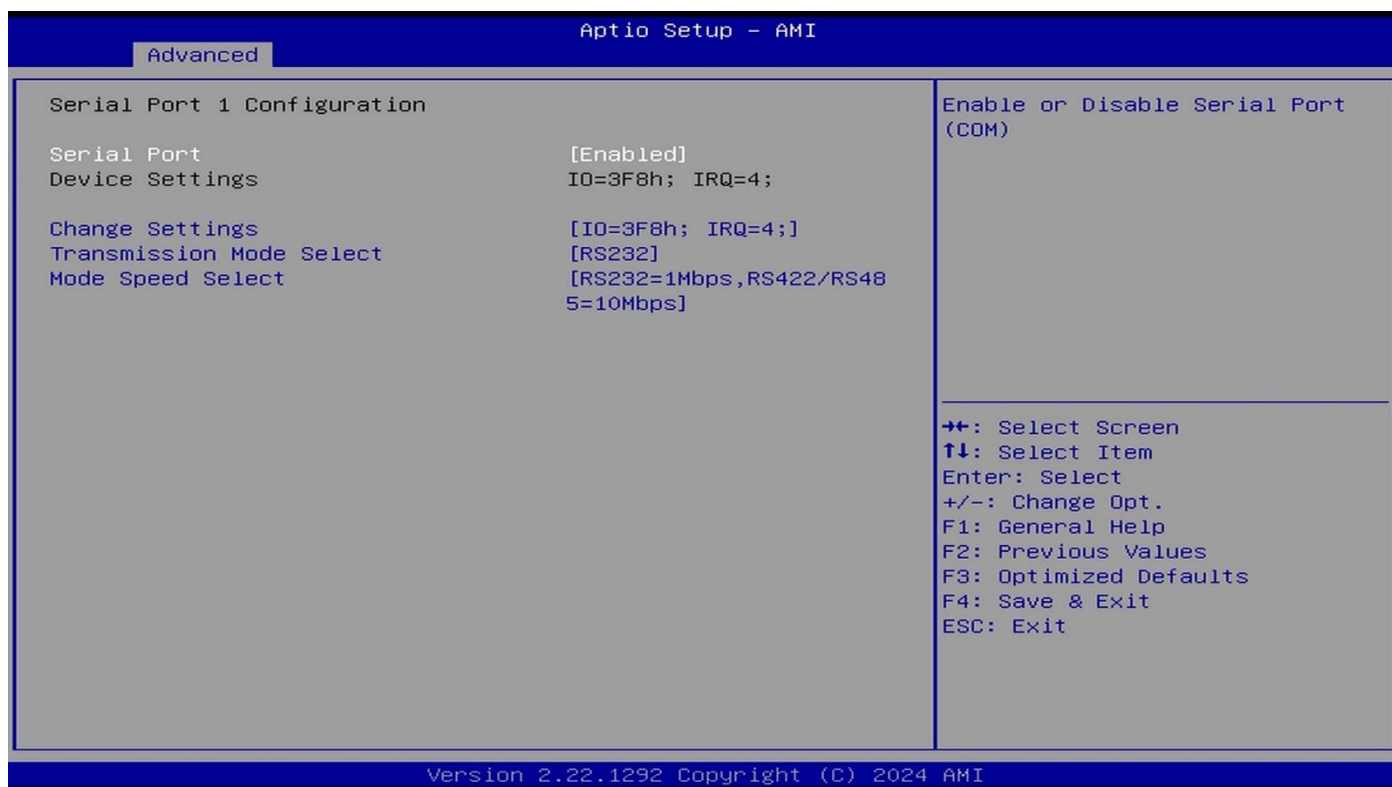

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings: [Disabled]; [Enabled].

Serial Port Set the default value to: [Enabled]

When set as [Enabled], user can make settings in the following items that appear:

Change Settings

Use this item to select an optimal settings for super IO device.

The optional settings are:[IO=3F8h;IRQ=4];[IO=3F8h;IRQ=3,4,5,7,10,11];

[IO=2F8h;IRQ=3,4,5,7,10,11];[IO=3E8h;IRQ=3,4,5,7,10,11];[IO=2E8h;IRQ=3,4,5,7,10,11].

Change Settings Set the default value to: [IO=3F8h;IRQ=4]

Transmission Mode Select

The optional settings are: [RS422]; [RS232]; [[RS485].

Transmission Mode Select Set the default value to: [RS232]


Mode Speed Select

Use this item to RS232/RS422/RS485 Speed Select.

The optional settings are: [RS232/RS422/RS485=250Kbps]; [RS232=1Mbps, RS422/RS485=10Mbps].

Mode Speed Select Set the default value to: [RS232=1Mbps, RS422/RS485=10Mbps]

► Serial Port 2 Configuration

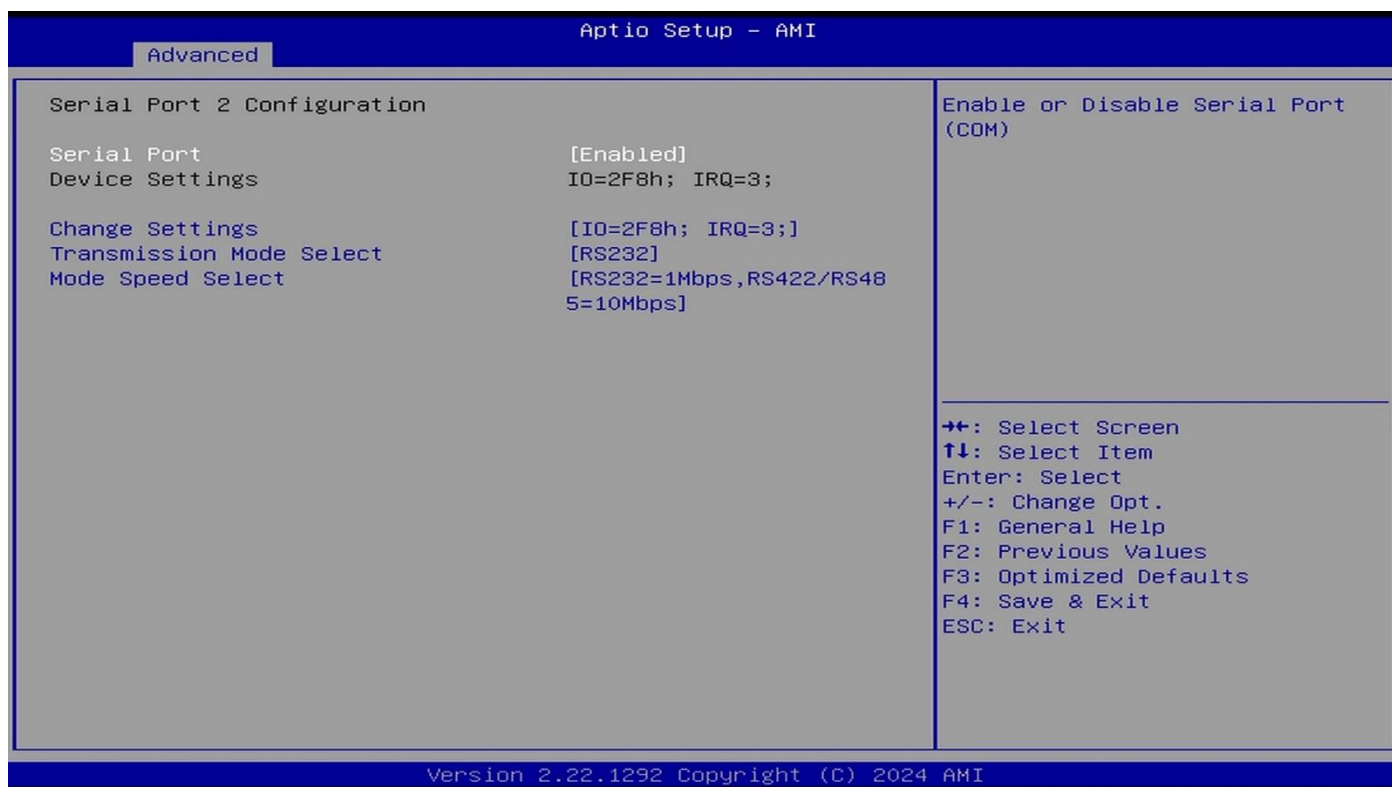

Press [Enter] to make settings for the following items:

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings: [Disabled]; [Enabled].

Serial Port Select Set the default value to: [Enabled]

When set as [Enabled], user can make settings in the following items that appear:

Change Settings

Use this item to select an optimal setting for super IO device.

The optional settings are:

[IO=2F8h;IRQ=3]; [IO=3F8h;IRQ=3,4,5,7,10,11]; [IO=2F8h;IRQ=3,4,5,7,10,11];

[IO=3E8h;IRQ=3,4,5,7,10,11] ; [IO=2E8h;IRQ=3,4,5,7,10,11].

Change Settings Set the default value to: [IO=2F8h;IRQ=3]

Transmission Mode Select

The optional settings are: [RS422]; [RS232]; [[RS485].


Transmission Mode Select Set the default value to: [RS232]

Mode Speed Select

Use this item to RS232/RS422/RS485 Speed Select.

The optional settings are: [RS232/RS422/RS485=250Kbps]; [RS232=1Mbps, RS422/RS485=10Mbps].

Mode Speed Select Set the default value to: [RS232=1Mbps, RS422/RS485=10Mbps]

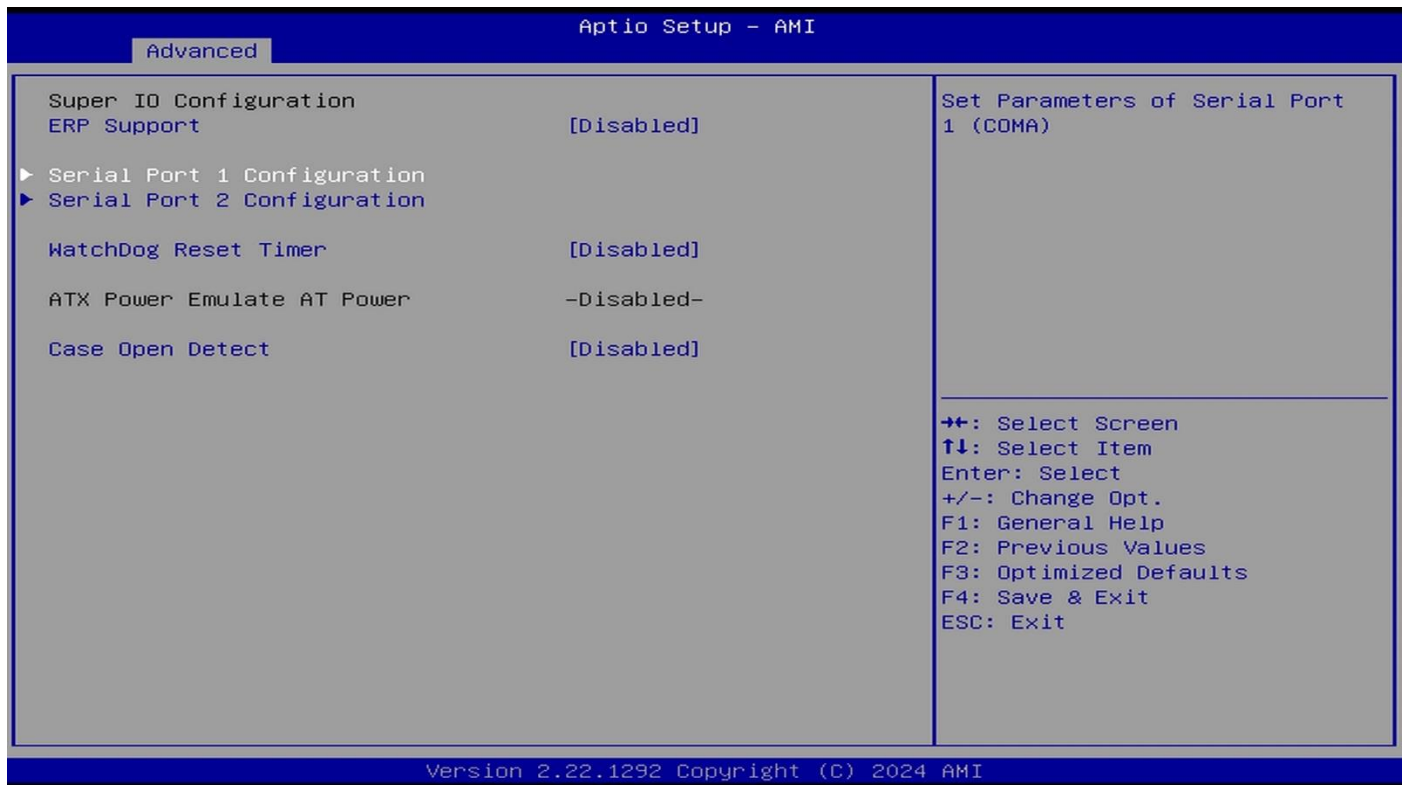

WatchDog Reset Timer

Use this item to support WDT reset function.

The optional settings: [Disabled]; [Enabled].

WatchDog Reset Timer Set the default value to: [Disabled]

When set as [Enabled], user can make settings in the following items that appear:

WatchDog Reset Timer Value

User can set a value in the range of [10] to [255] seconds or [1] to [255] minutes.

WatchDog Reset Timer Value Set the default value to: [10]

WatchDog Reset Timer Unit

The optional settings are: [Sec.]; [Min.].

WatchDog Reset Timer Unit Set the default value to: [Sec]

ATX Power Emulate AT Power

This item support Emulate AT power function, MB power On/Off control by power supply. Use needs to select 'AT or ATX Mode' on MB jumper at first (refer to **JPAT1** jumper setting Pin 1&2 of for **ATX Mode** & Pin 2&3 of **AT Mode** Select).

Case Open Detect


Use this item to detect if case have ever been opened. Show message in POST.

The optional settings: [Disabled]; [Enabled].

Case Open Detect Set the default value to: [Disabled]

- ▶ When set as [Enabled], system will detect if COPEN has been short or not (*refer to **JCLR1** jumper setting for Case Open Detection*); if Pin 7&8 of **JCLR1** are short, system will show Case Open Message during POST.

► PC Health Status

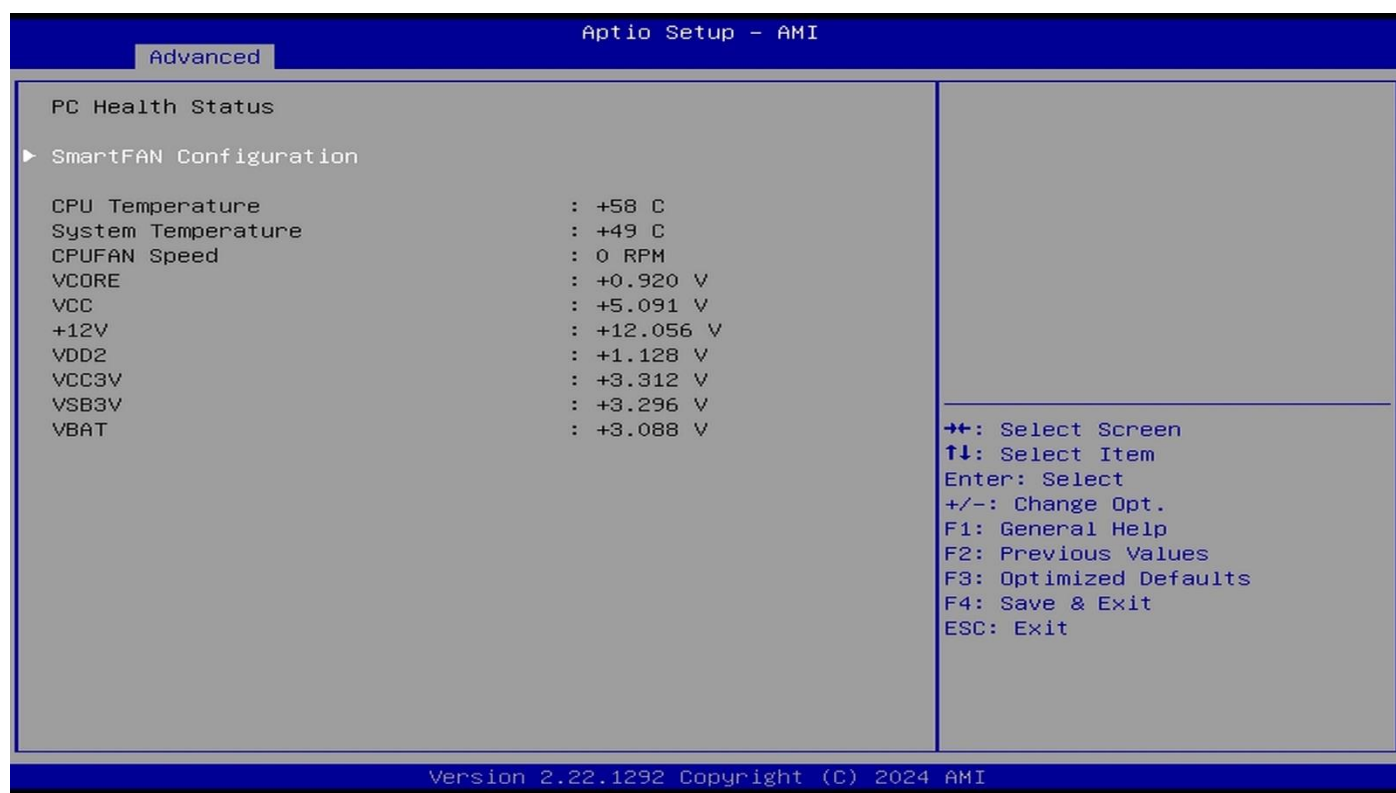

Press [Enter] to view current hardware health status, make further settings in '**SmartFAN Configuration**'.

► SmartFAN Configuration



Press [Enter] to make settings for SmartFAN Configuration:

SmartFAN Configuration

CPUFAN Type

CPU Fan Mode Select. Auto: Auto Detect; PWM Mode: Force 4-Pin Fan;
DC Mode: Force 3-Pin Fan.

The optional settings: [Auto]; [PWM Mode]; [DC Mode].

CPUFAN Smart Mode Set the default value to: [Enabled]

CPUFAN1 Smart Mode

The optional settings: [Disabled]; [Enabled].

CPUFAN Smart Mode Set the default value to: [Enabled]

When set as [Enabled], the following sub-items shall appear:

CPUFAN1 Full-Speed Temperature

Use this item to set CPUFAN full speed temperature. Fan will run at full speed when above this pre-set temperature.

CPUFAN Full-Speed Temperature Set the default value to: [60]

CPUFAN1 Full-Speed Duty

Use this item to set CPUFAN full-speed duty. Fan will run at full speed when above this pre-set duty.

CPUFAN Full-Speed Duty Set the default value to: [100]

CPUFAN1 Idle-Speed Temperature

Use this item to set CPUFAN idle speed temperature. Fan will run at idle speed when below this pre-set temperature.


CPUFAN Idle-Speed Temperature Set the default value to: [40]

CPUFAN1 Idle-Speed Duty

Use this item to set CPUFAN idle speed duty. Fan will run at idle speed when below this pre-set duty.

CPUFAN Idle-Speed Duty Set the default value to: [60]


► **Serial Port Console Redirection**

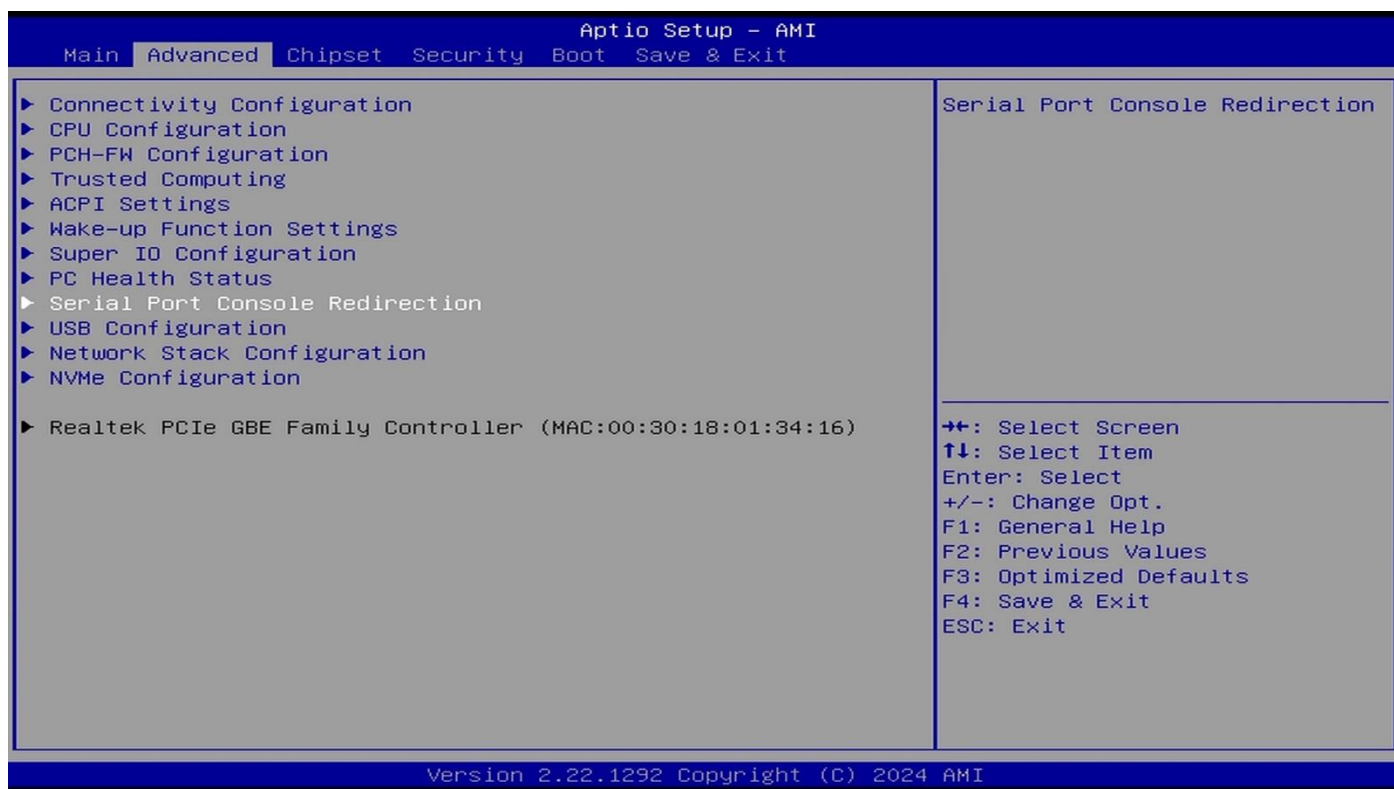

Press [Enter] to make settings for the following sub-items:

COM1

Console Redirection

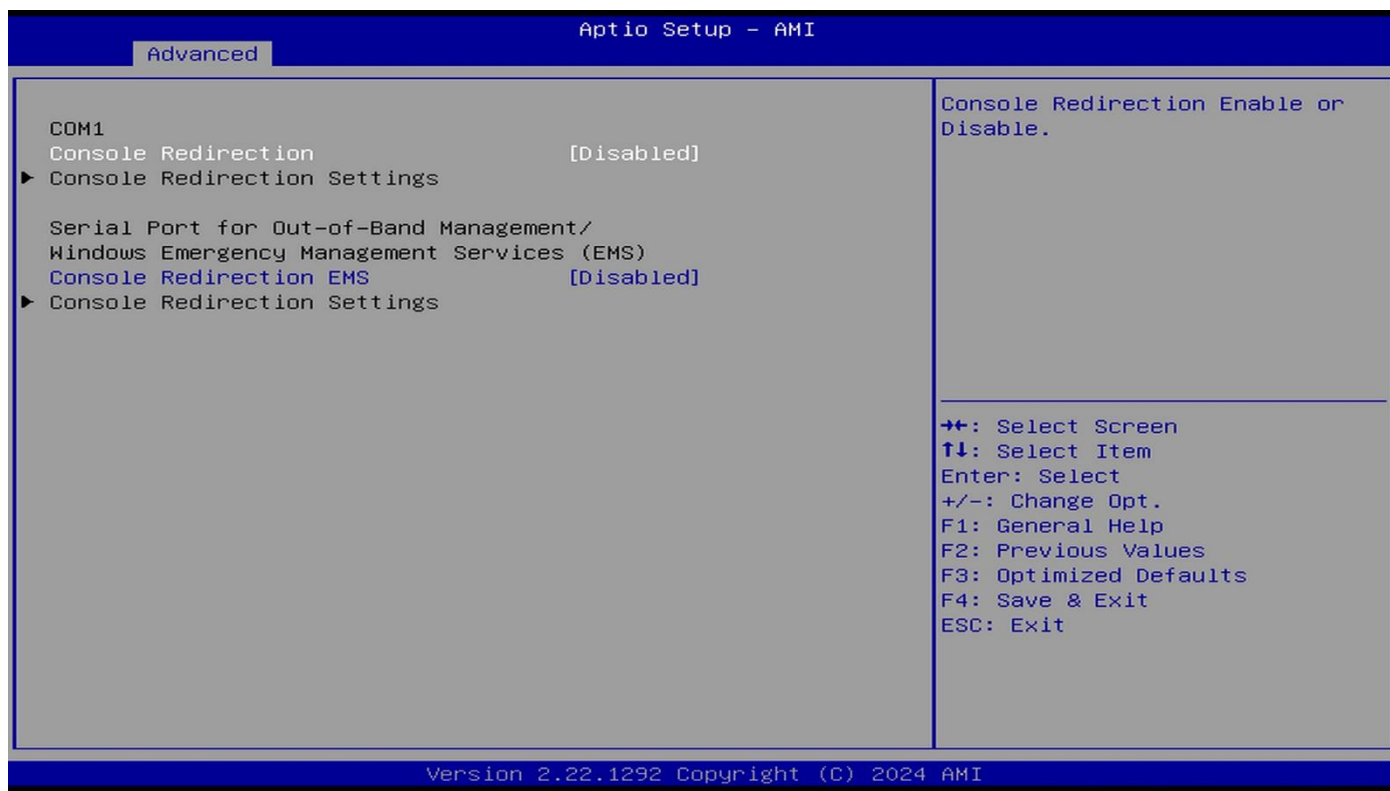

Console Redirection enable or disable.

The optional settings: [Disabled]; [Enabled].

Console Redirection Set the default value to: [Disabled]

When set as **[Enabled]**, user can make further settings in the '**Console Redirection Settings**' screen:

► **Console Redirection Settings**

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following sub-items:

Terminal Type

The optional settings: [VT100]; [VT100Plus]; [VT-UTF8]; [ANSI].

[ANSI]: Extended ASCII char set;

[VT100]: ASCII char set;

[VT100Plus]: Extends VT100 to support color, function keys, etc.

[VT-UTF8]: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.

Terminal Type Set the default value to: [ANSI]

Bits per second

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings: [9600]; [19200]; [38400]; [57600]; [115200].

Bits per second Set the default value to: [115200]

Data Bits

The optional settings: [7]; [8].

Data Bits Set the default value to: [8]

Parity

A parity bit can be sent with the data bits to detect some transmission errors.

The optional settings: [None]; [Even]; [Odd]; [Mark]; [Space].

[Even]: parity bit is 0 if the num of 1's in the data bits is even;

[Odd]: parity bit is 0 if num of 1's in the data bits is odd;

[Mark]: parity bit is always 1;

[Space]: parity bit is always 0;

Parity Set the default value to: [None]

[Mark] and **[Space]**: parity do not allow for error detection. They can be used as an additional data bit.

Stop Bits

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

The optional settings: [1]; [2].

Stop Bits Set the default value to: [1]

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

The optional settings: [None]; [Hardware RTS/CTS].

Flow Control Set the default value to: [None]

VT-UTF8 Combo Key Support

Use this item to enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.

The optional settings: [Disabled]; [Enabled].

VT-UTF8 Combo Key Support Set the default value to: [Enabled]

Recorder Mode

With this mode enabled only text will be sent. This is to capture Terminal data.

The optional settings: [Disabled]; [Enabled].

Recorder Mode Set the default value to: [Disabled]

Resolution 100x31

Use this item to enable or disable extended terminal resolution.

The optional settings: [Disabled]; [Enabled].

Resolution 100x31 Set the default value to: [Disabled]

Putty KeyPad

Use this item to select FunctionKey and KeyPad on Putty.

The optional settings: [VT100]; [LINUX]; [XTERMR6]; [SCO]; [ESCN]; [VT400].

Putty KeyPad Set the default value to: [VT100]

Serial Port for Out-of-Band Management/

Windows Emergency Management Services (EMS)

Console Redirection EMS

Use this item to enable or disable console redirection.

The optional settings: [Disabled]; [Enabled].

Console Redirection EMS Set the default value to: [Disabled]

When set as **[Enabled]**, user can make further settings in '**Console Redirection Settings**' screen:

► **Console Redirection Settings**

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Press [Enter] to make settings for the following sub-items.

Terminal Type EMS

The optional settings: [VT100]; [VT100Plus]; [VT-UTF8]; [ANSI].

[VT-UTF8] is the preferred terminal type for out-of-band management. The next best choice is **[VT100+]** and then **[VT100]**. See above, in Console Redirection Settings page, for more help with Terminal Type/Emulation.

Terminal Type EMS Set the default value to: [VT-UTF8]

Bits per second EMS

Use this item to select serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

The optional settings: [9600]; [19200]; [57600]; [115200].

Bits per second EMS Set the default value to: [115200]

Flow Control EMS

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

The optional settings: [None]; [Hardware RTS/CTS]; [Software Xon/Xoff].

Flow Control EMS Set the default value to: [None]

Data Bits EMS

The default setting is: [8].

**This item may or may not show up, depending on different configuration.*

Parity EMS

The default setting is: [None].


**This item may or may not show up, depending on different configuration.*

Stop Bits EMS

The default setting is: [1].

**This item may or may not show up, depending on different configuration.*

► USB Configuration

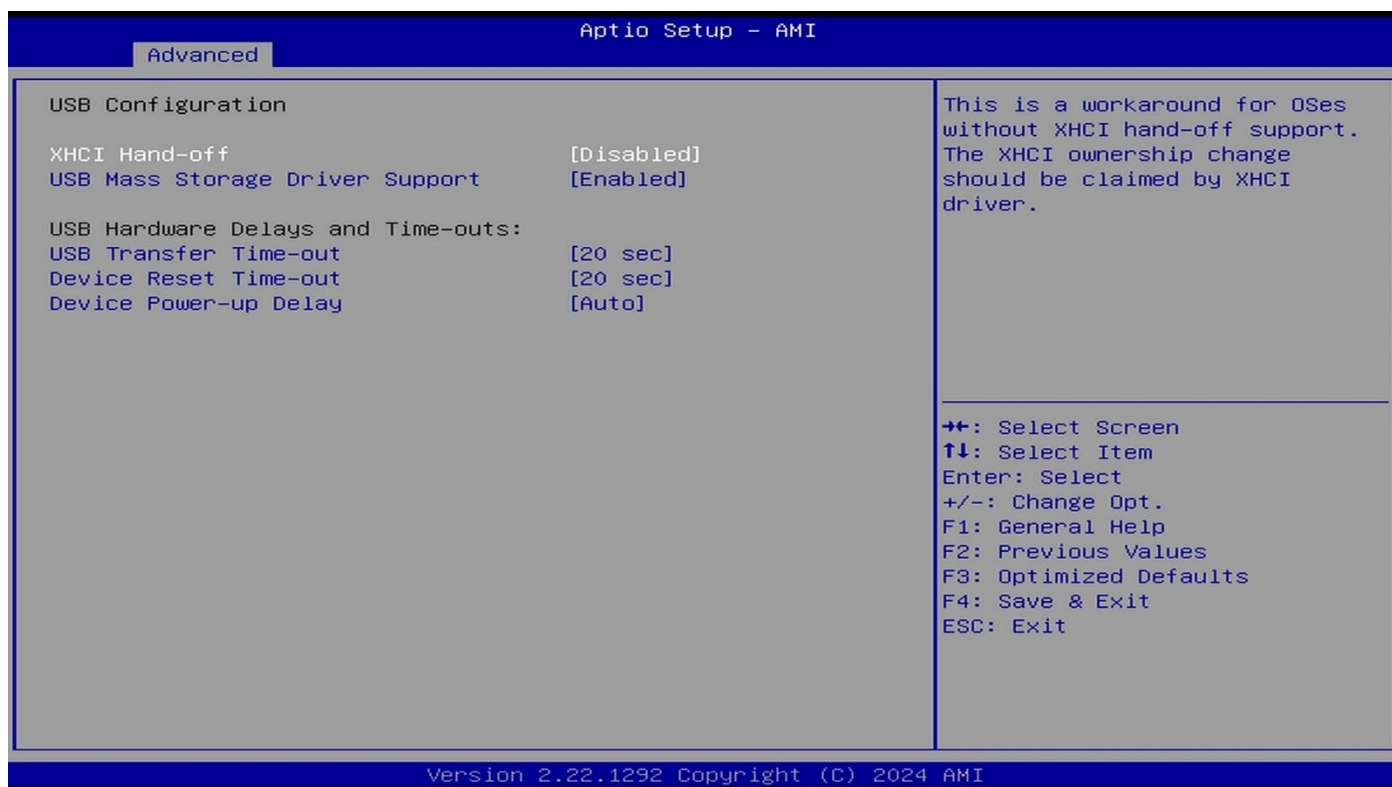

Press [Enter] to make settings for the following sub-items:

USB Configuration

XHCI Hand-off

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

The optional settings: [Enabled]; [Disabled].

XHCI Hand-off Set the default value to: [Disabled]

USB Mass Storage Driver Support

Use this item to enable or disable USB Mass storage driver support.

The optional settings: [Disabled]; [Enabled].

USB Mass Storage Driver Support Set the default value to: [Enabled]

USB hardware delay and time-out

USB Transfer time-out

Use this item to set the time-out value for control, bulk, and interrupt transfers.

The optional settings: [1 sec]; [5 sec]; [10 sec]; [20 sec].

USB Transfer time-out Set the default value to: [20 sec]

Device reset time-out

Use this item to set USB mass storage device start unit command time-out.

The optional settings: [10 sec]; [20 sec]; [30 sec]; [40 sec].

Device reset time-out Set the default value to: [20 sec]

Device power-up delay

Use this item to set maximum time the device will take before it properly reports itself to the host controller. 'Auto' uses default value: for a root port it is 100 ms, for a hub port the delay is taken from hub descriptor.

The optional settings: [Auto]; [Manual].

Device power-up delay Set the default value to: [Auto]

Select **[Manual]** you can set value for the following sub-item: '**Device power-up delay in seconds**', the delay range is 1 .. 40 seconds, in one second increments.

► Network Stack Configuration



Press [Enter] to go to '**Network Stack**' screen to make further settings.

Network Stack

Use this item to enable or disable UEFI Network Stack.

The optional settings: [Disabled]; [Enabled].

Network Stack Set the default value to: [Disabled]

When set as **[Enabled]**, the following sub-items shall appear:

IPv4 PXE Support

Use this item to enable/disable IPv4 PXE Boot Support. When set as [Disabled], IPv4 PXE boot support will not be available.

The optional settings: [Disabled]; [Enabled].

IPv4 PXE Support Set the default value to: [Enabled]

IPv6 PXE Support

Use this item to enable/disable IPv6 PXE Boot Support. When set as [Disabled], IPv6 PXE boot support will not be available.

The optional settings: [Disabled]; [Enabled].

IPv6 PXE Support Set the default value to: [Disabled]

PXE boot wait time

Wait time in seconds to press [ESC] key to abort the PXE boot.

Use either [+]/[-] or numeric keys to set the value.

PXE boot wait time Set the default value to: [2]

Media detect count

Use this item to set number of times presence of media will be checked.

Use either [+] / [-] or numeric keys to set the value.

Media detect count Set the default value to: [5]

► **NVMe Configuration**



Use this item to set NVMe Device options settings.

NVMe Configuration

► **Realtek PCIe GBE Family Controller (MAC:XX:XX:XX:XX:XX:XX)**


3-8 Chipset Menu



▶ System Agent (SA) Configuration



Press [Enter] to make settings for the following sub-items:
System Agent (SA) Configuration
Maximum Memory Frequency

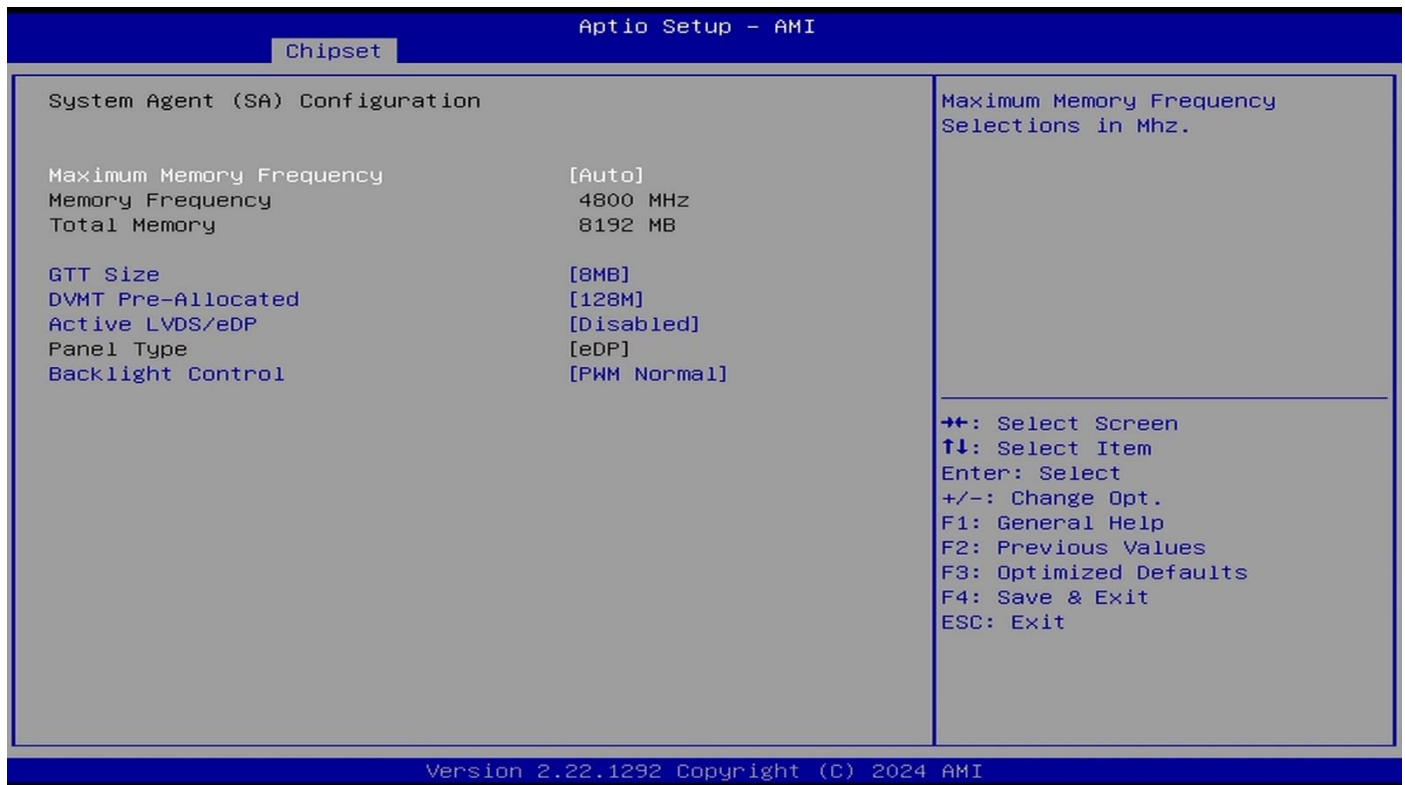

Maximum Memory Frequency Selections in Mhz.

The optional settings are: [Auto]; [3200]; [3467]; [3600]; [3733]; [4000]; [4200] ; [4267]; [4400]; [4600]; [4800].

GTT Size Set the default value to: [Auto]

GTT Size

Use this item to select GTT Size.

The optional settings are: [2MB]; [4MB]; [8MB].

GTT Size Set the default value to: [8MB]

DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.

The optional settings: [32M]; [64M]; [96M]; [128M]; [160M]; [8M]; [12M]; [16M]; [20M]; [24M]; [28M]; [32M/F7]; [36M]; [40M]; [44M]; [48M]; [52M]; [56M]; [60M].

DVMT Pre-Allocated Set the default value to: [128M]

Active LVDS/eDP


Use this item to select the Active LFP Configuration.

The optional settings: [Disabled]; [Enabled].

Active LFP Set the default value to: [Disabled]

When set as [Enabled], the following sub-item shall appear:

Panel Type

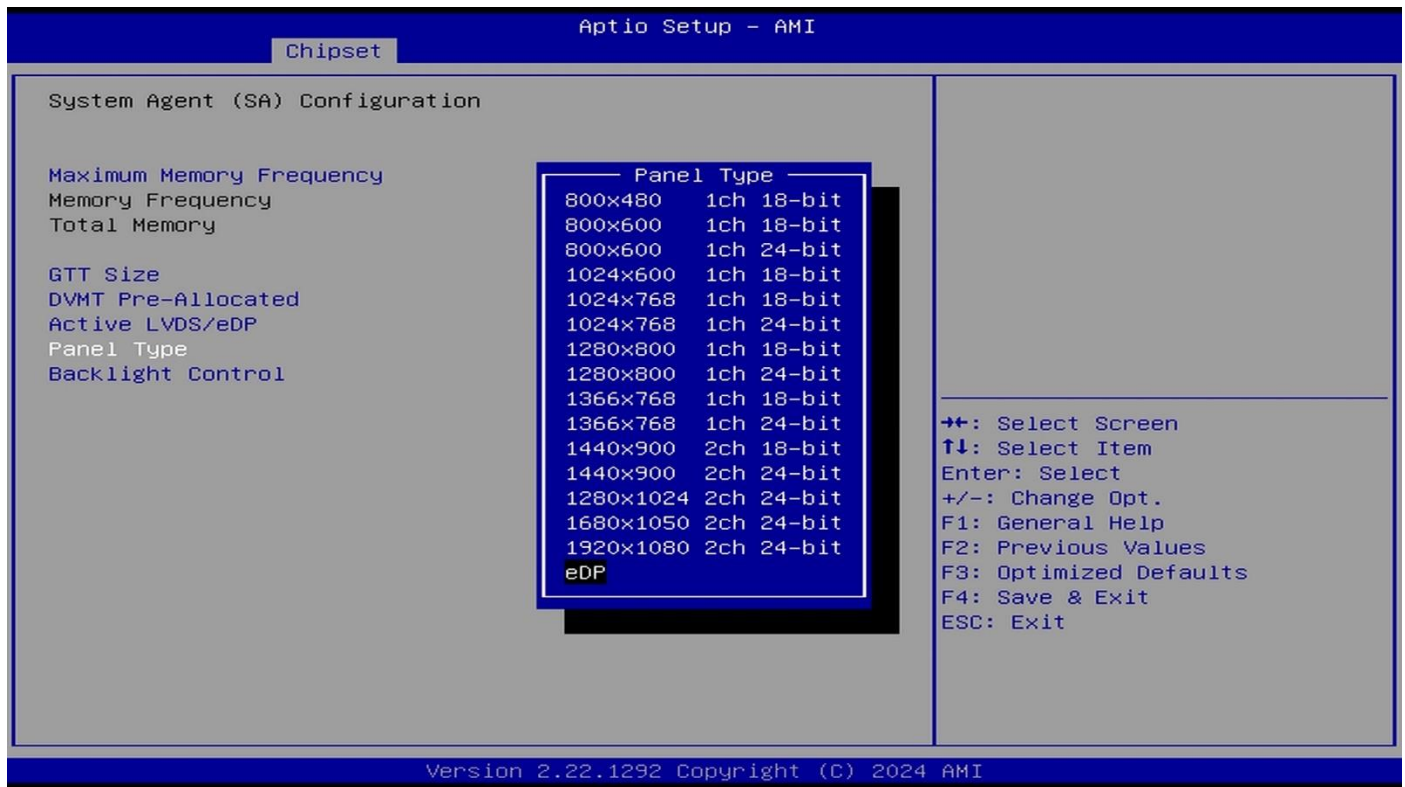

The optional settings are: [800x480 1ch 18-bit]; [800x600 1ch 18-bit]; [800x600 1ch 24-bit]; [1024x600 1ch 18-bit]; [1024x768 1ch 18-bit]; [1024x768 1ch 24-bit]; [1280x800 1ch 18-bit]; [1280x800 1ch 24-bit]; [1366x768 1ch 18-bit]; [1366x768 1ch 24-bit]; [1440x900 2ch 18-bit]; [1440x900 2ch 24-bit]; [1280x1024 2ch 24-bit]; [1680x1050 2ch 24-bit]; [1920x1080 2ch 24-bit]; [eDP].

Panel Type Set the default value to: [eDP]


Backlight Control

Use this item to make back light control setting.

The optional settings are: [PWM Inverted]; [PWM Normal].

Backlight Control Set the default value to: [PWM Normal]

► PCH-IO Configuration

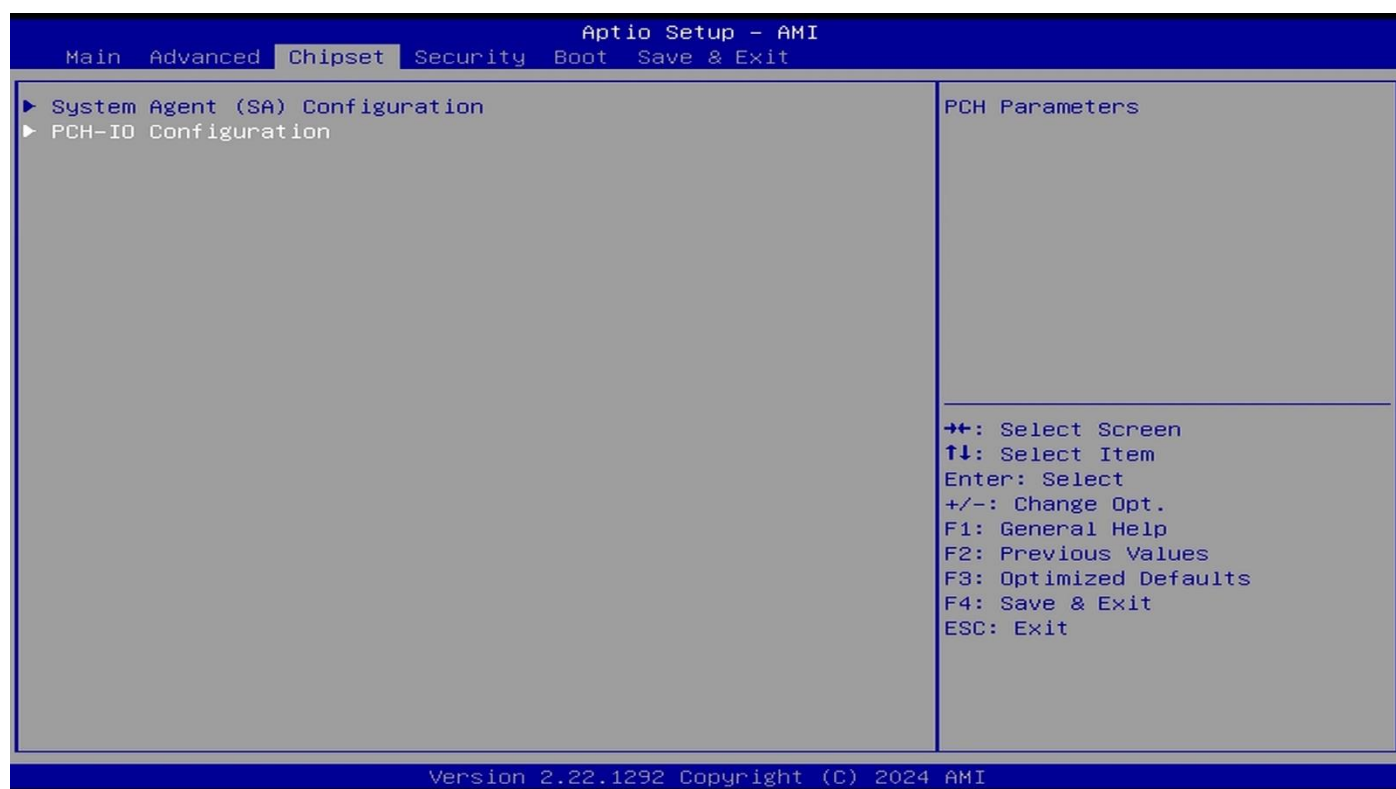

Press [Enter] to make settings for the following sub-items:

PCH-IO Configuration


► SATA Configuration



SATA Device Options Settings.

SATA Configuration

SATA Controller(s)

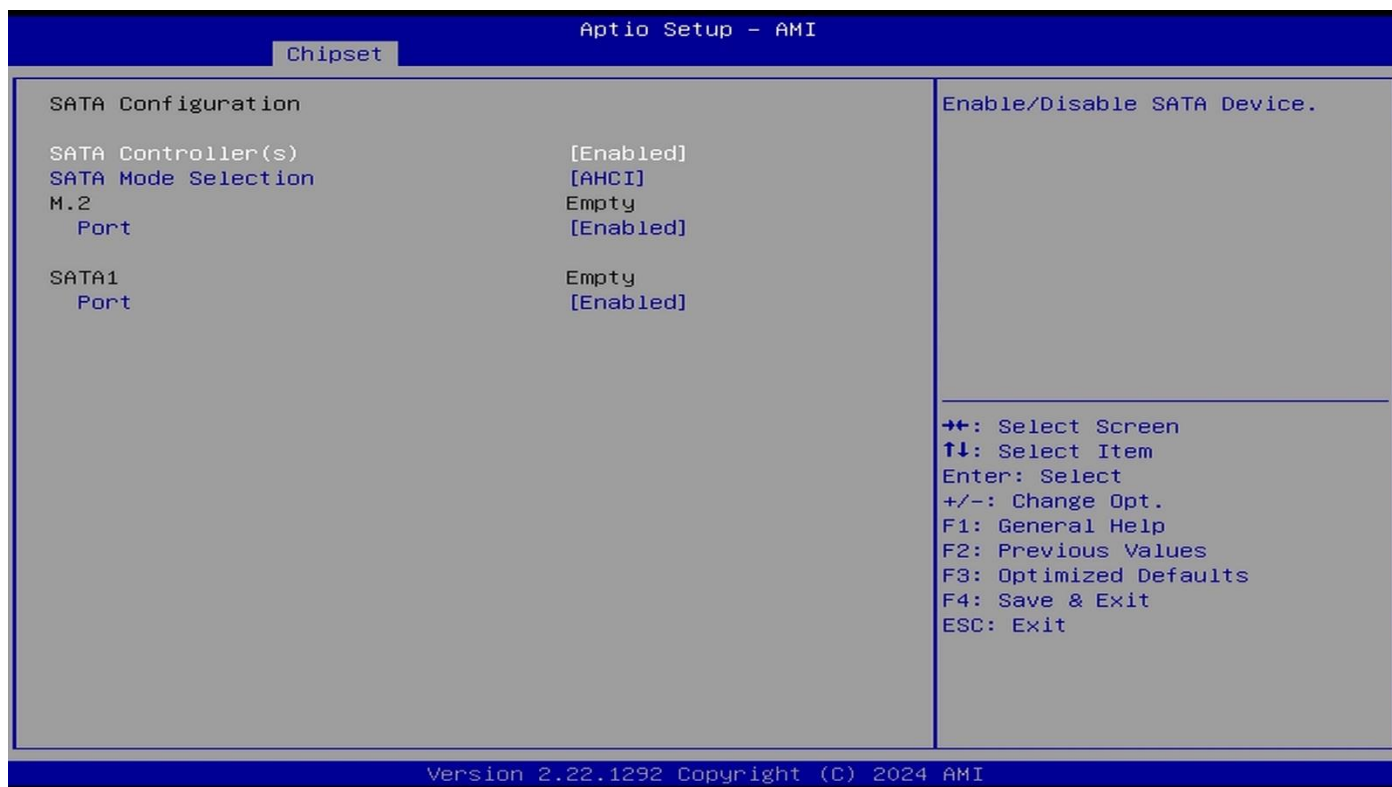

Use this item to enable/disable SATA Device.

The optional settings are: [Enabled]; [Disabled].

SATA Controller(s) Set the default value to: [Enabled]

When set as [Enabled], the following sub-items shall appear:

SATA Mode Selection

Use this item to determines how SATA controller(s) operate.

The optional settings are: [AHCI].

SATA Mode Selection Set the default value to: [AHCI]

M.2

Port

Use this item to enable or disable SATA Port.

The optional settings are: [Disabled]; [Enabled].

Port Set the default value to: [Enabled]

SATA1

Port

Use this item to enable or disable SATA Port.

The optional settings are: [Disabled]; [Enabled].

Port Set the default value to: [Enabled]

M2B Slot Select

Select slot Function

The optional settings: [Auto]; [SATA] [PCIex2]; [PCIex1+USB3].

HD Audio Set the default value to: [Auto]

HD Audio

Use this item to control detection of the HD-Audio device.

Disabled= HDA will be unconditionally disabled.

Enabled= HDA will be unconditionally enabled.

The optional settings: [Disabled]; [Enabled].

HD Audio Set the default value to: [Enabled]


System State after Power Failure

Specify what state to go to when power is re-applied after a power failure (G3 state).

The optional settings: [Always On]; [Always Off]; [Former State].

System State after Power Failure Set the default value to: [Always Off]

3-9 Security Menu

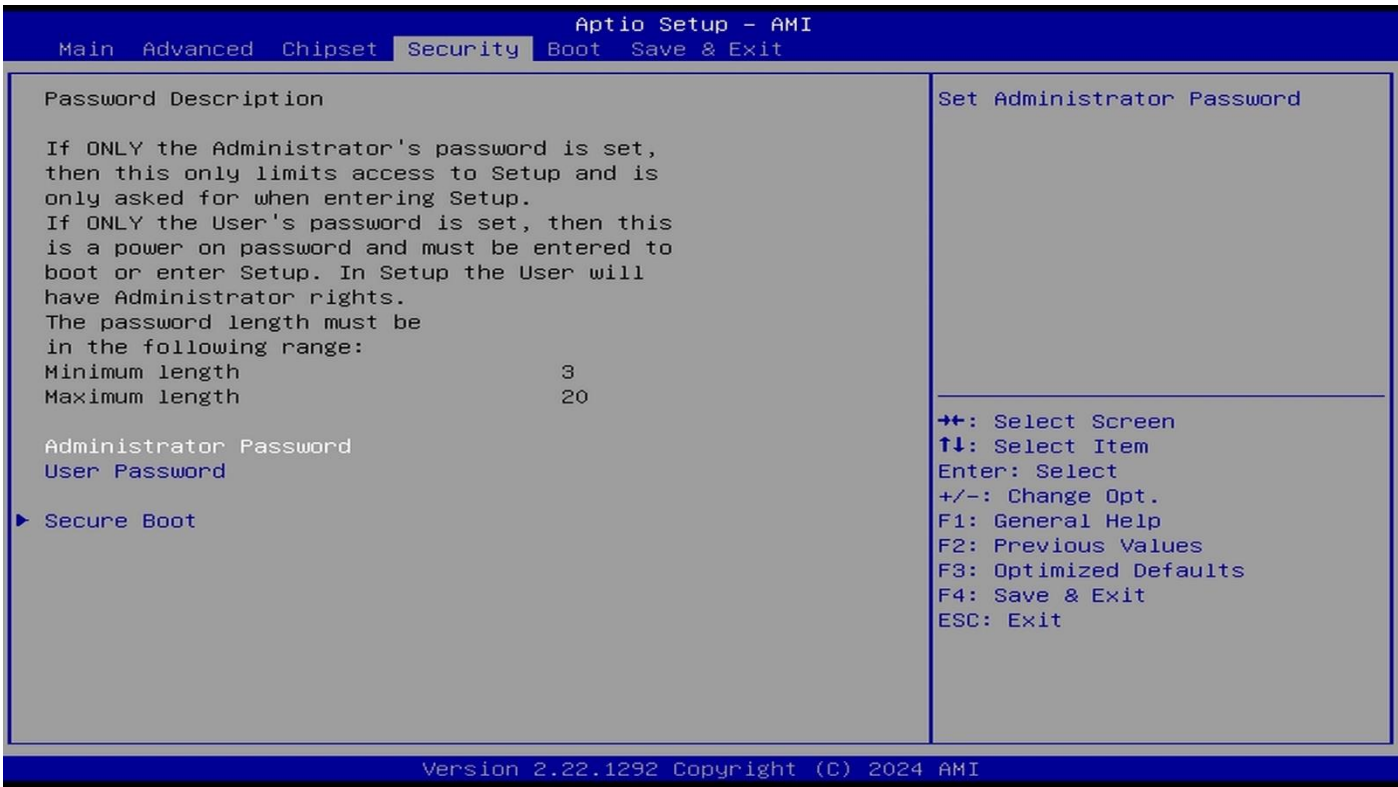

Security menu allow users to change administrator password and user password settings.

Administrator Password

If there is no password present on system, please press [Enter] to create new administrator password. If password is present on system, please press [Enter] to verify old password then to clear/change password. Press again to confirm the new administrator password.

User Password

If there is no password present on system, please press [Enter] to create new administrator password. If password is present on system, please press [Enter] to verify old password then to clear/change password. Press again to confirm the new administrator password.

► Secure Boot



Press [Enter] to make customized secure settings:

System Mode

Secure Boot

Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.

The optional settings: [Disabled]; [Enabled].

Secure Boot Set the default value to: [Enabled]

Secure Boot Mode

Set UEFI Secure Boot Mode to Standard mode or Custom mode. This change is effective after save. After reset, this mode will return to Standard mode.

In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

The optional settings: [Standard]; [Custom].

Secure Boot Mode Set the default value to: [Standard]

When set as [**Custom**], user can make further settings in the following items that show up:

► **Restore Factory Keys**

Use this item to force system to User Mode, to install factory default Secure Boot key databases.

► **Reset To Setup Mode**


Use this item to Delete all secure boot key databases from NVRAM.

► **Key Management**

This item enables expert users to modify Secure Boot Policy variables without full authentication, which includes the following items:

Vendor Keys

Factory Key Provision

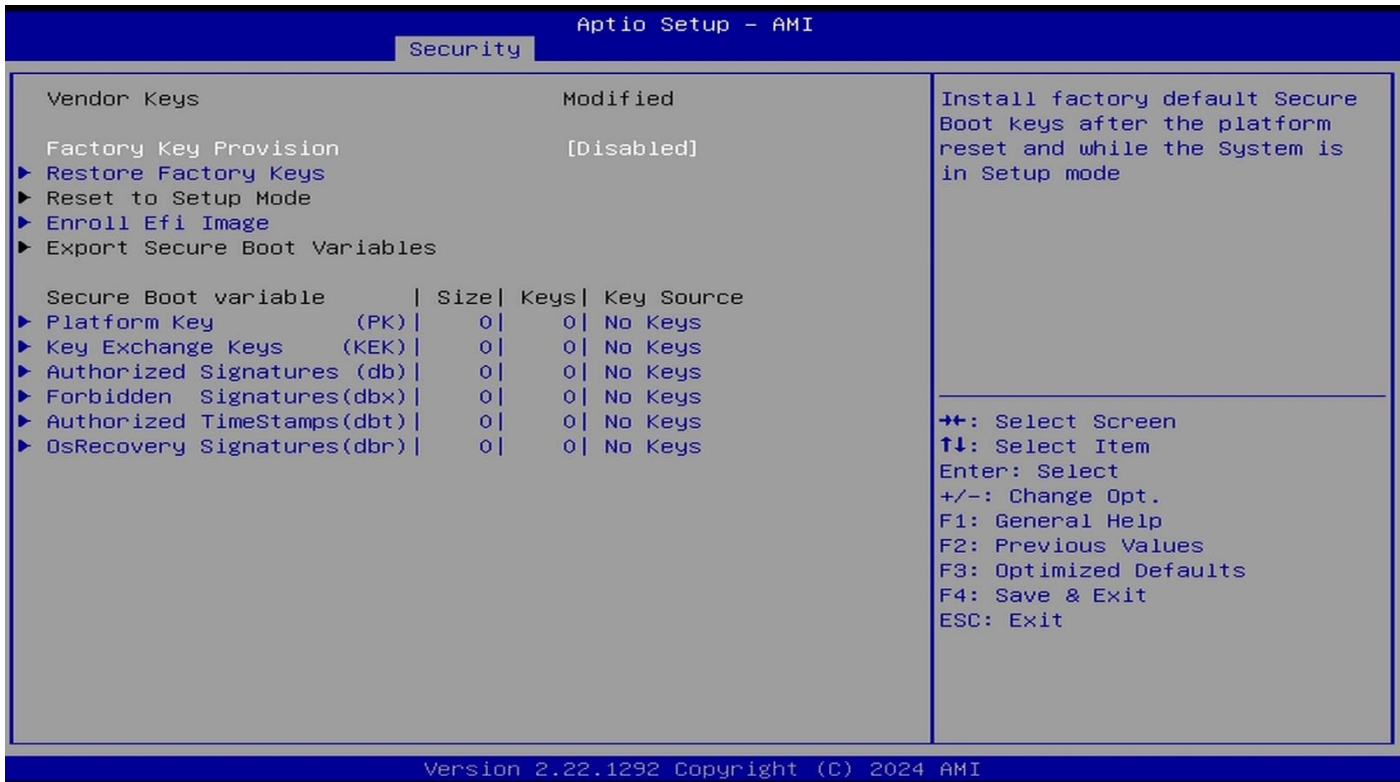

This item is for user to install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

The optional settings: [Disabled]; [Enabled].

Factory Key Provision Set the default value to: [Disabled]

▶ **Restore Factory Keys**

Use this item to force system into User Mode. Install factory default Secure Boot key databases.

▶ **Reset To Setup Mode**

Use this item to Delete all Secure Boot key databases from NVRAM.

▶ **Enroll Efi Image**

This item allows the image to run in Secure Boot mode.

Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).

▶ **Export Secure Boot variables**

Use this item to save NVRAM content of Secure Boot variables to a file.

▶ **Platform Key(PK)/Key Exchange Keys(KEK)/Authorized Signatures(db)/Forbidden Signatures(dbx)/ Authorized TimeStamps(dbt)/OsRecovery Signatures(dbr)**

Use this item to enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate:


- EFI_SIGNATURE_LIST
- EFI_CERT_X509 (DER)
- EFI_CERT_RSA2048 (bin)
- EFI_CERT_SHAXXX

2. Authenticated UEFI Variable


3. EFI PE/COFF Image (SHA256)

Key Source: Factory, Modified, Mixed

3-10 Boot Menu

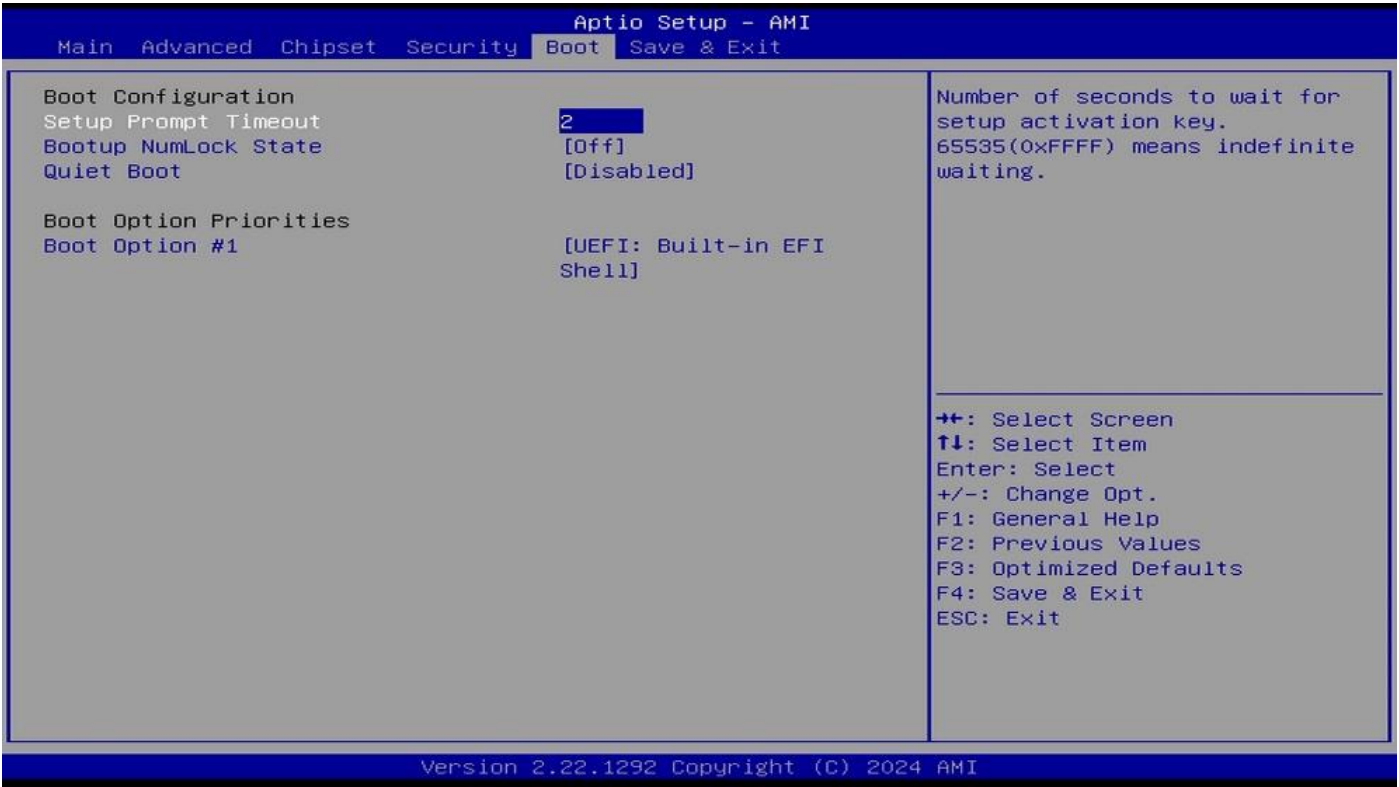

Boot Configuration

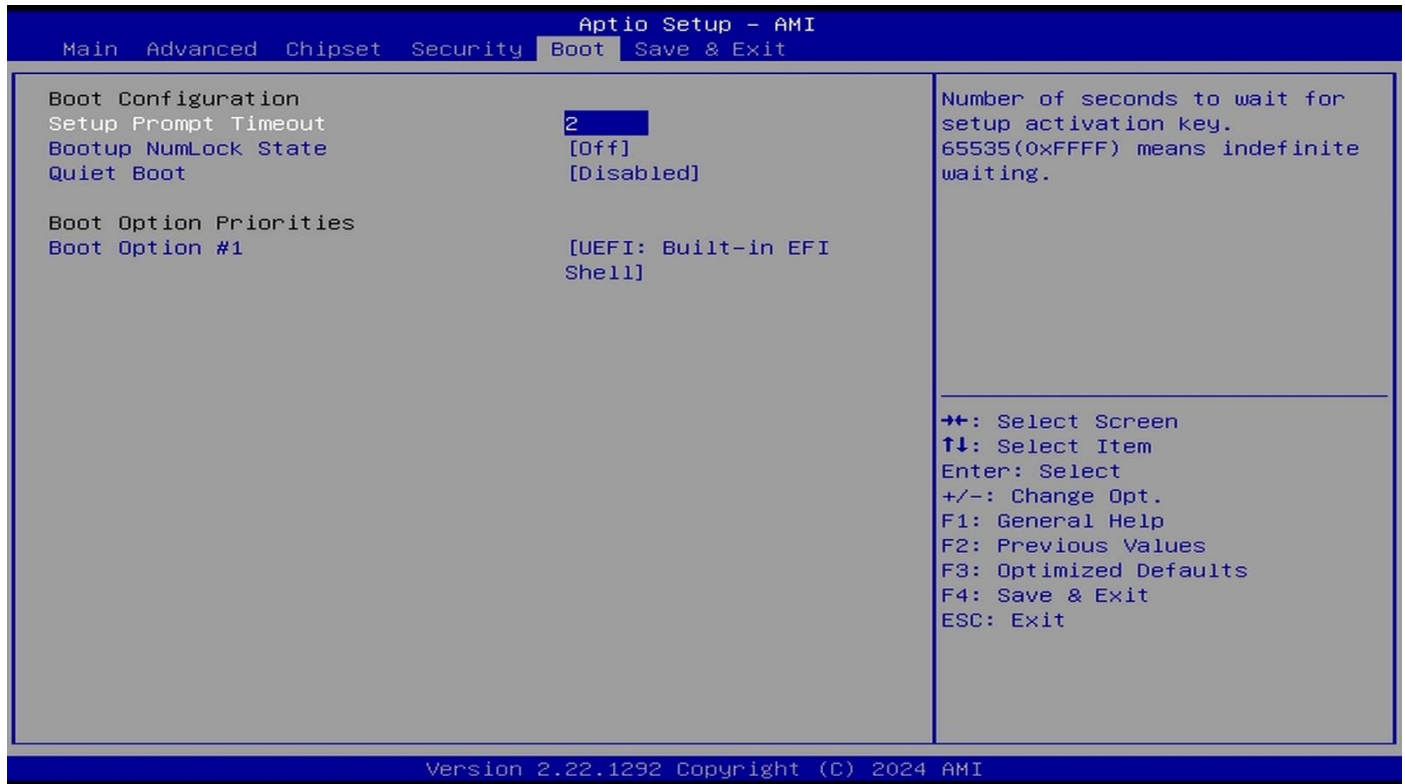

Setup Prompt Timeout

Use this item to set number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting.

Setup Prompt Timeout Set the default value to: [2]

Bootup NumLock State

Use this item to select keyboard NumLock state.

The optional settings: [On]; [Off].

Bootup NumLock State Set the default value to: [Off]


Quiet Boot

The optional settings: [Disabled]; [Enabled].

Quiet Boot Set the default value to: [Disabled]

Boot Option Priorities

3-11 Save & Exit Menu

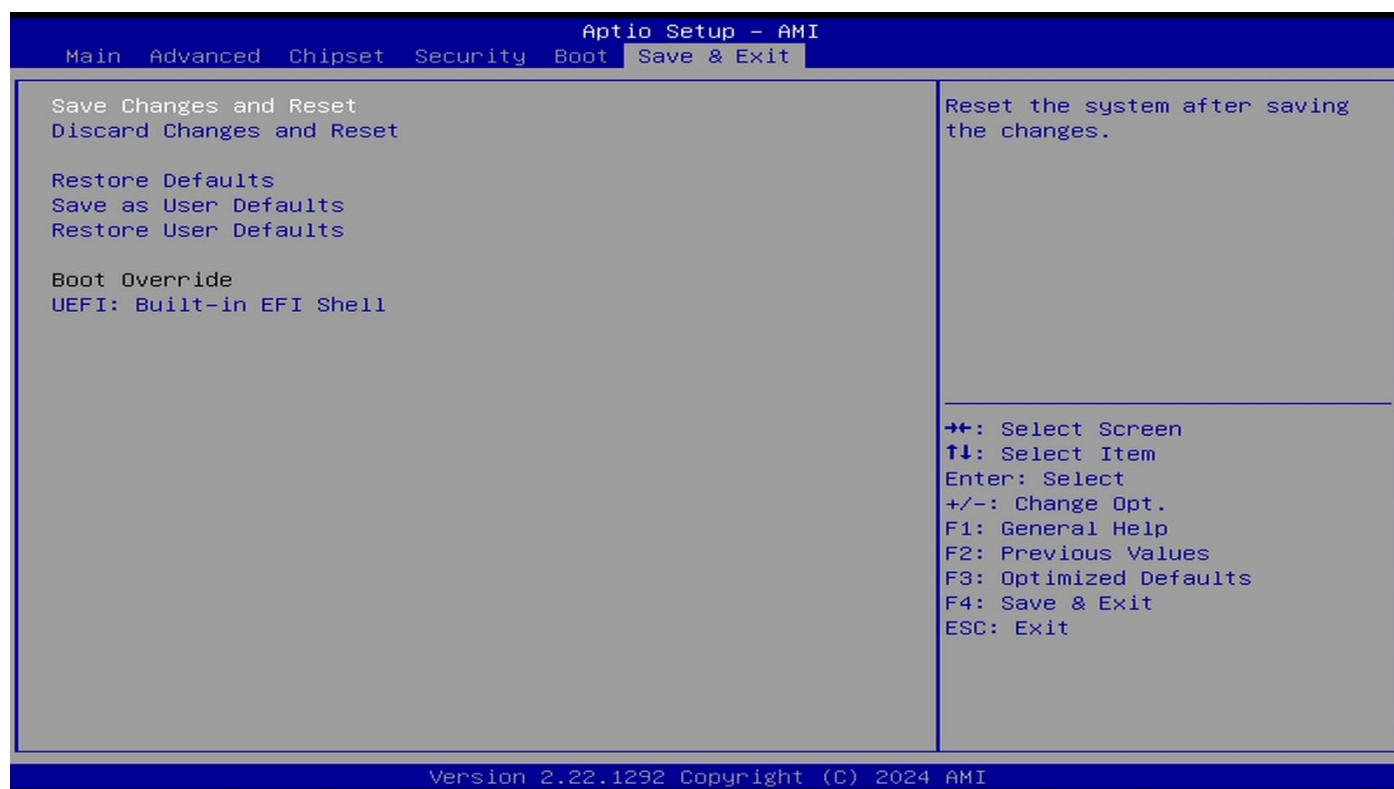

Save Changes and Reset

This item allows user to reset the system after saving the changes.

Discard Changes and Reset

This item allows user to reset the system setup without saving any changes.

Restore Defaults

Use this item to restore /load default values for all the setup options.

Save as User Defaults

Use this item to save the changes done so far as user defaults.

Restore User Defaults

Use this item to restore the user defaults to all the setup options.

Boot Override


Appendix A


Mating Connectors


Location Printing	Function	Vendor	Vendor P/N
INVERTER1	LVDS Inverter Connector	Topt	WF2-1108-K-S6R-B0
LVDS_EDP1	LVDS Port Header	Topt	WF7-12XX-T9N-G1-CR
F_AUDIO1	Front Panel Audio Header	Tops	PH200-205M-GBB0008D
CPUFAN1	CPU FAN Header	Tops	WF254-104S-TEW0004A
GPIO1	GPIO/80 Port Header	Tops	PH200-205M-GBB0002D
COM1	COM1 Port Header	Tops	PH200-205M-GBB00010D
COM2	COM2 Port Header	Tops	PH200-205M-GBB00010D
F_USB1	USB 2.0 Port Header	Tops	PH200-205M-GBB0009D
F_USB2	USB 2.0 Port Header	Tops	PH200-205M-GBB0009D
JW_FP1	Front Panel Function Header	Tops	PH254-104S-GBB0002A
SATA1	SATA3 Port Connector	Win Win	WAT3M-07A1G1BU4W
SATAPW1	SATA HDD Power-Out Connector	Tops	WF254-104S-TWE0004A
I2C_SMBUS1	SMBUS Header	Tops	PH200-A105-SGCB-RN
DCIN2	DC-In Power Header	TE	1-1123723
F_BUZZ1	BUZZ Header	Tops	PH200-102S-GBB0001A
BATCON1	Battery Header	Tops	WF125-102M-TFT0004D

Appendix B


I/O Address Map

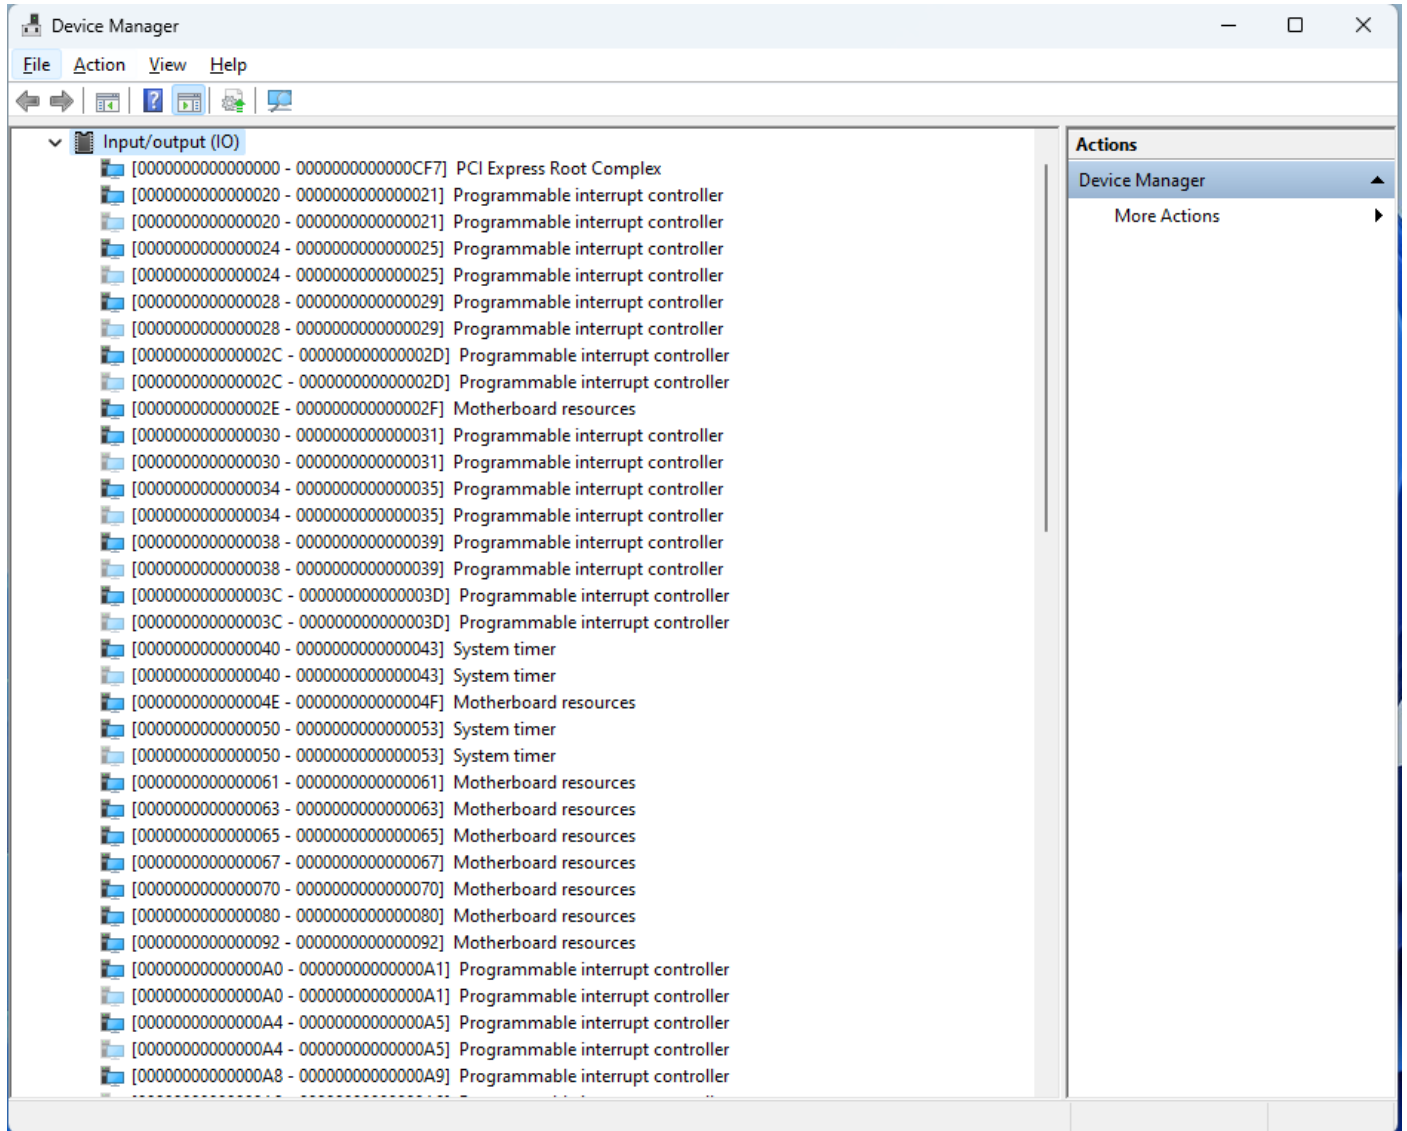


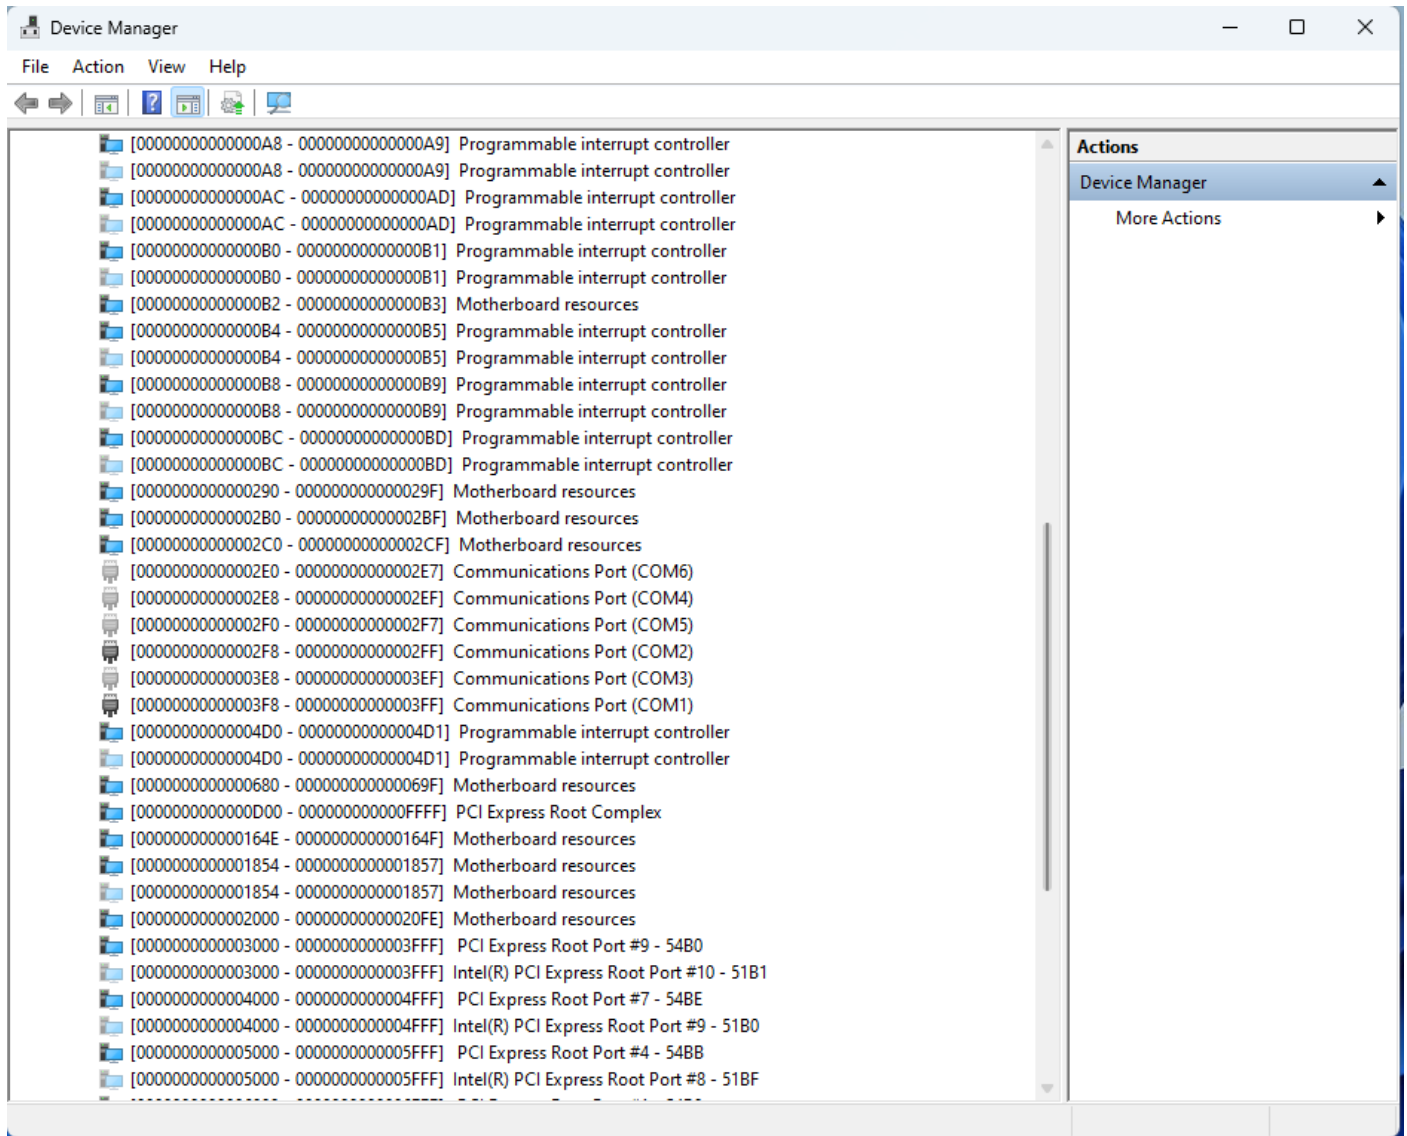


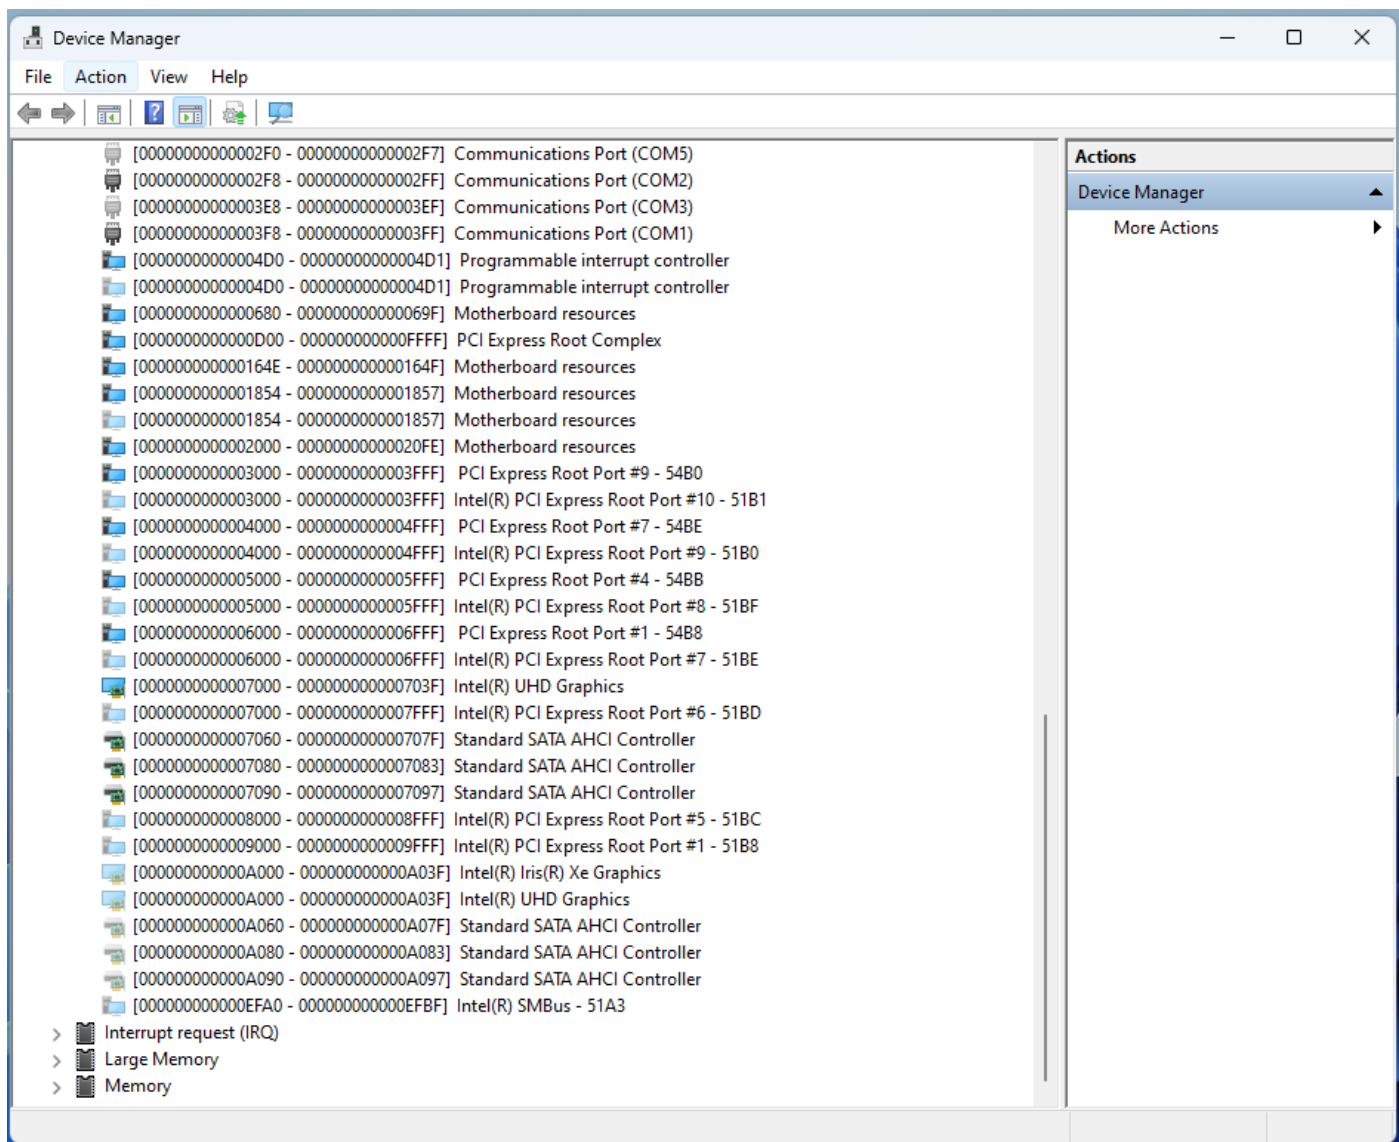

Memory Address Map

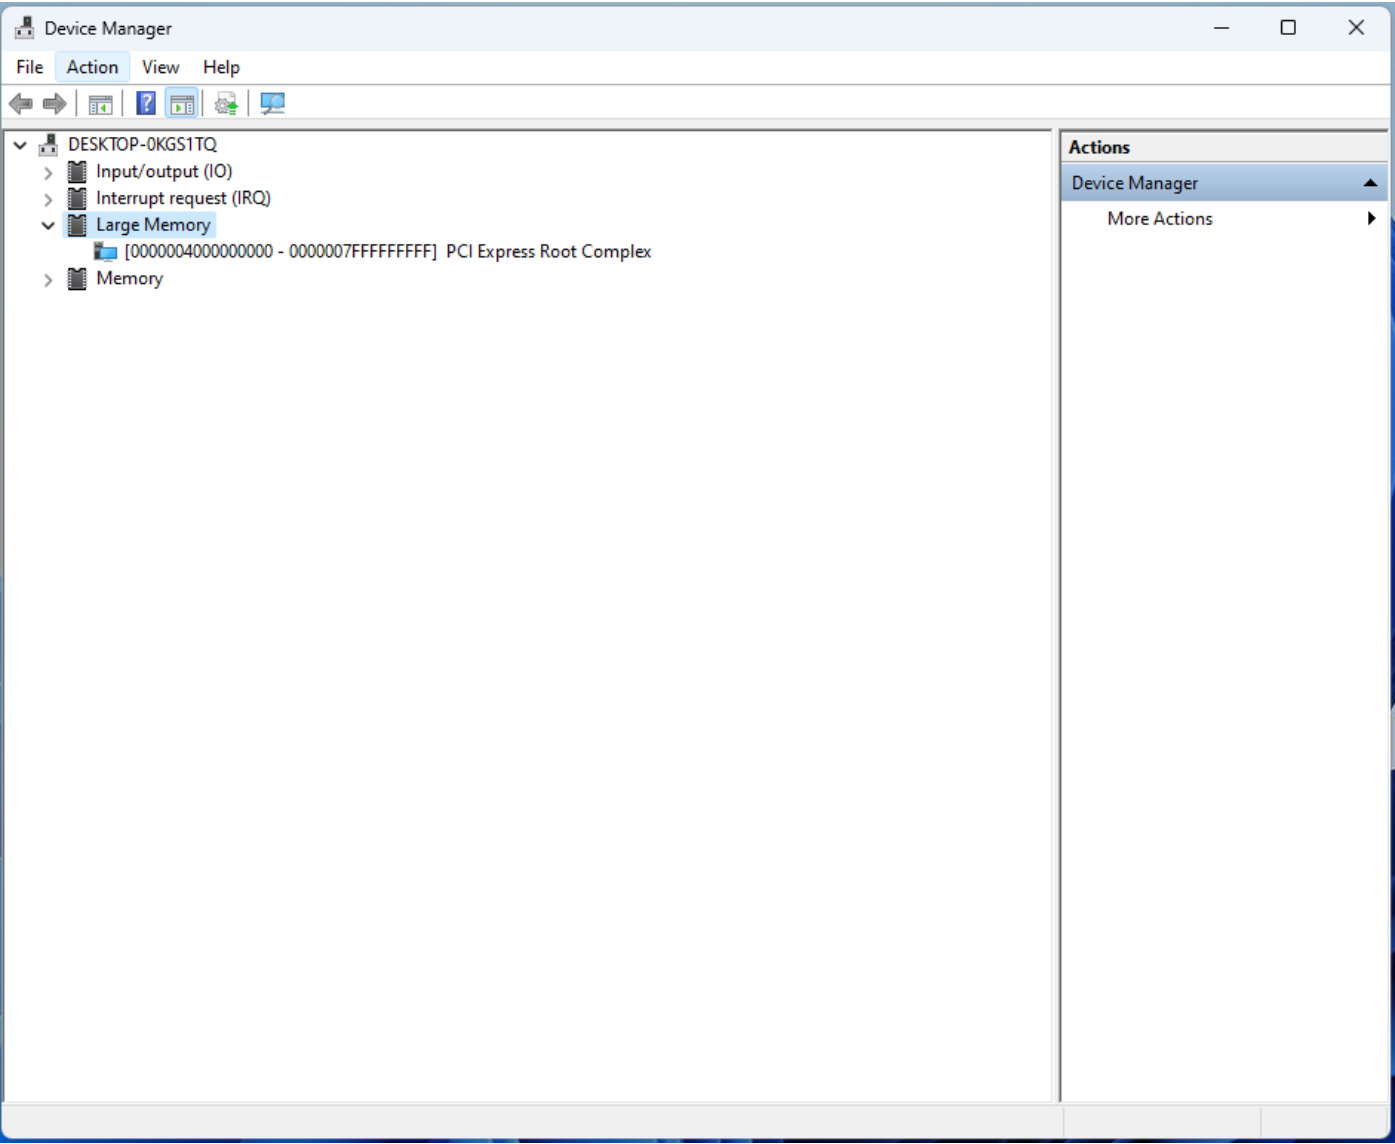

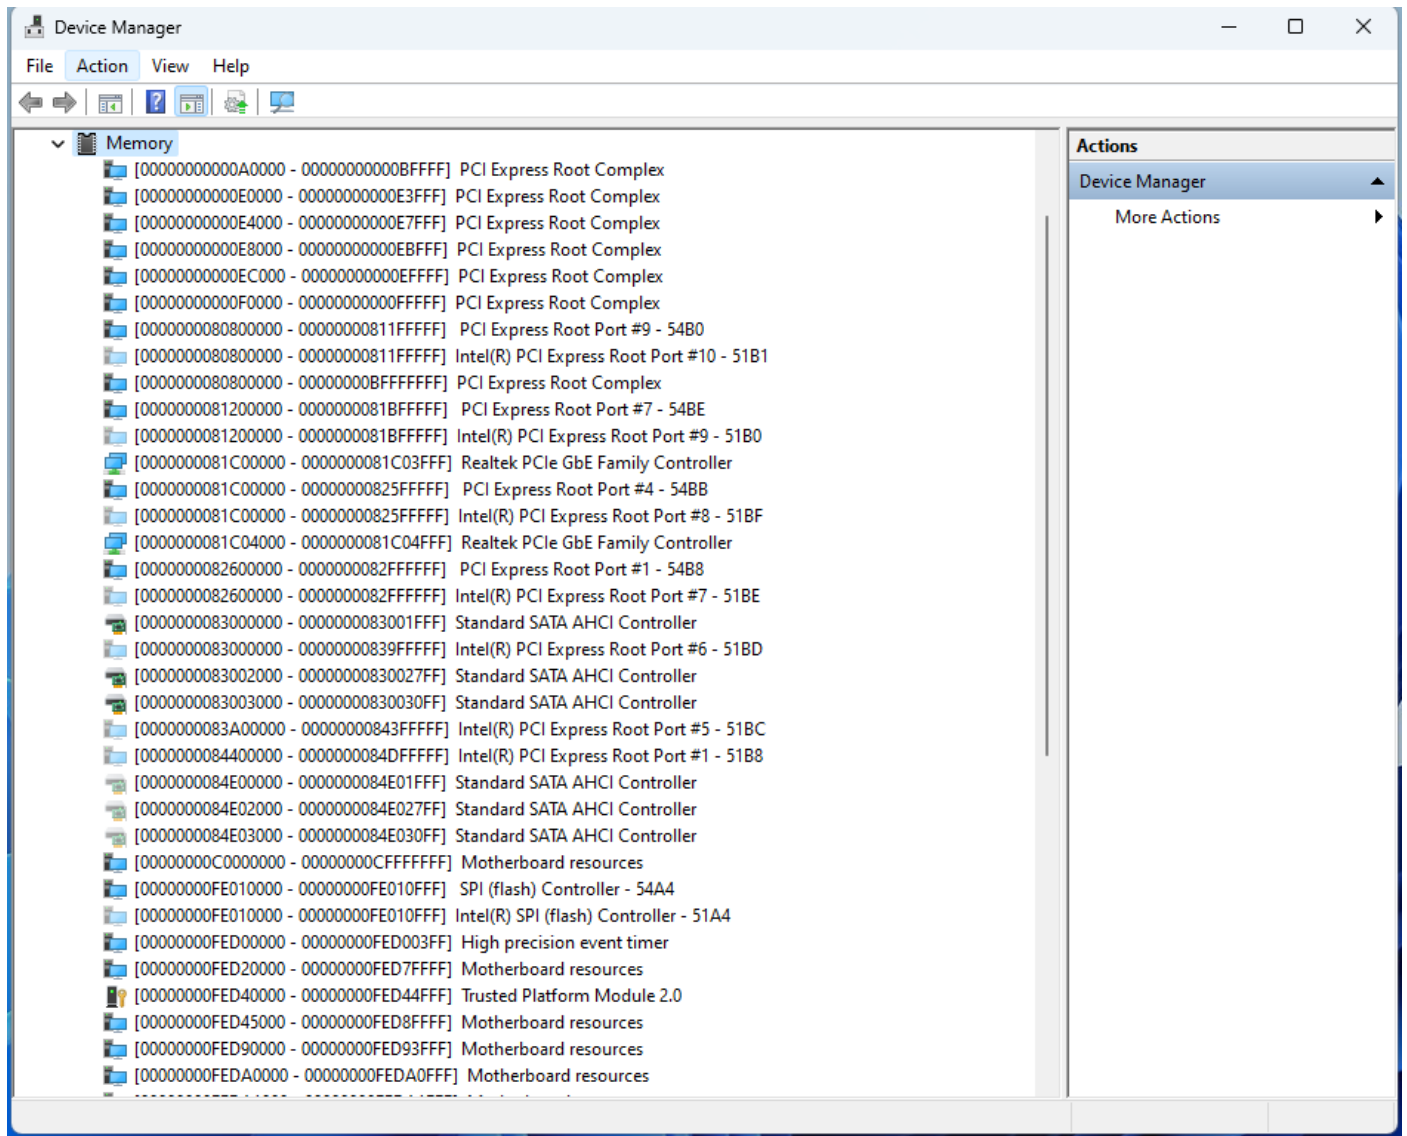

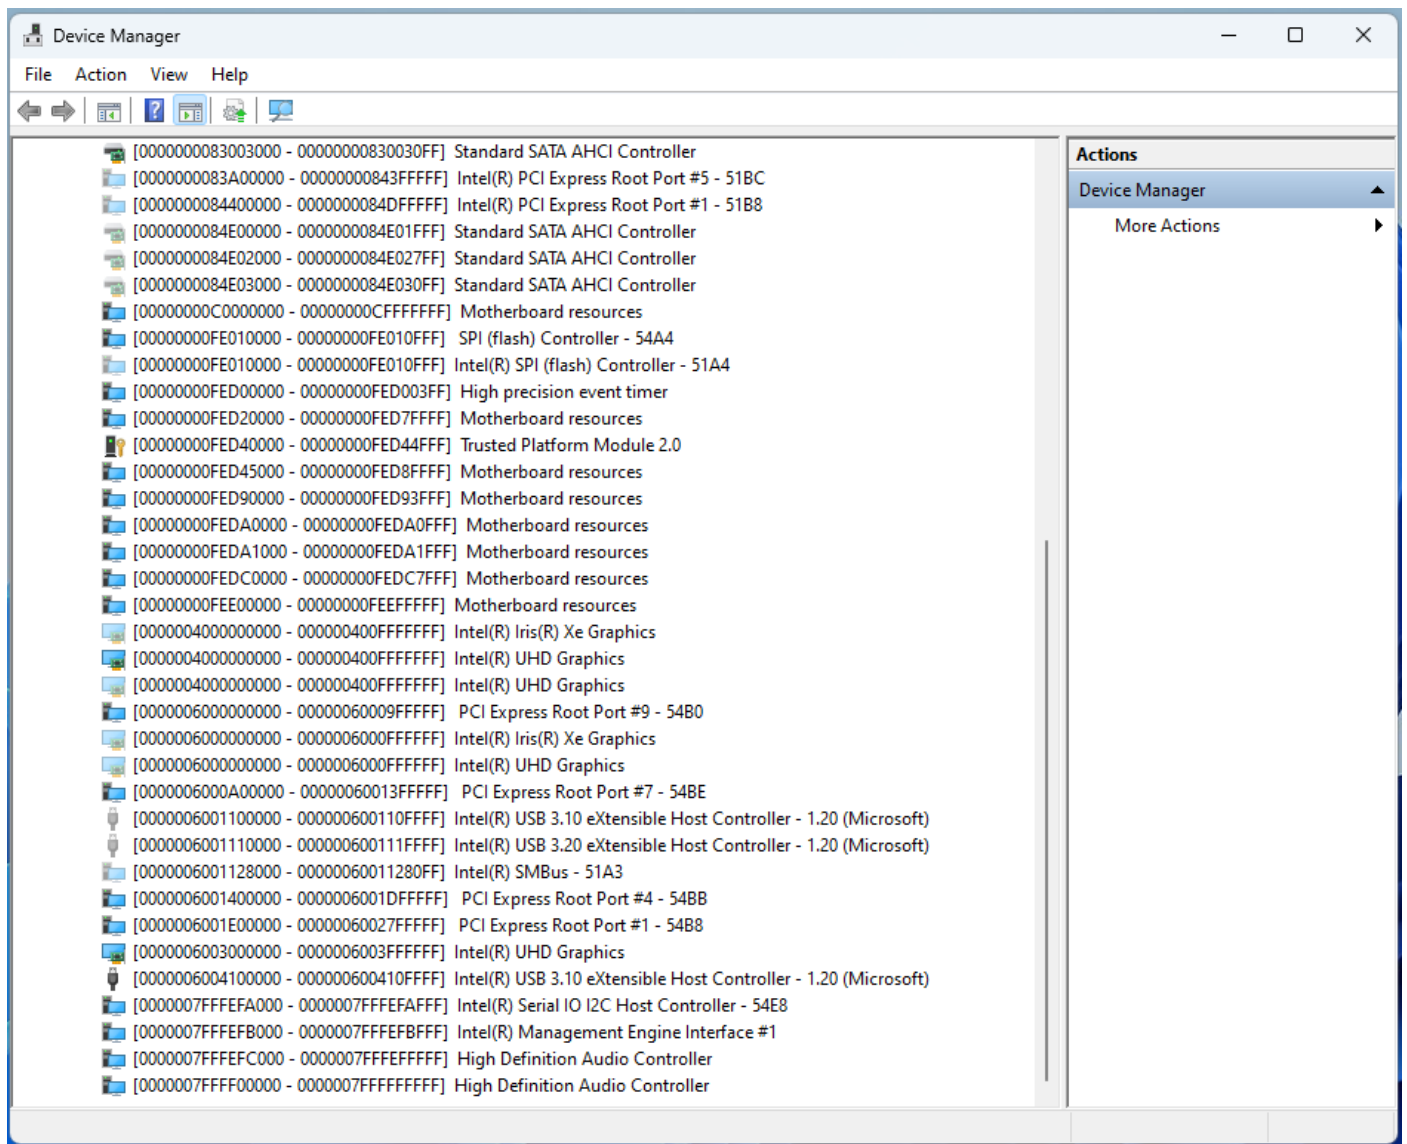

IRQ Mapping Chart

Device Manager

File Action View Help

Interrupt request (IRQ)

(ISA) 0x00000000 (00)

System timer

(ISA) 0x00000000 (00)

System timer

(ISA) 0x00000003 (03)

Communications Port (COM2)

(ISA) 0x00000004 (04)

Communications Port (COM1)

(ISA) 0x0000000A (10)

Communications Port (COM3)

(ISA) 0x0000000A (10)

Communications Port (COM4)

(ISA) 0x0000000B (11)

Communications Port (COM5)

(ISA) 0x0000000B (11)

Communications Port (COM6)

(ISA) 0x00000037 (55)

Microsoft ACPI-Compliant System

(ISA) 0x00000038 (56)

Microsoft ACPI-Compliant System

(ISA) 0x00000039 (57)

Microsoft ACPI-Compliant System

(ISA) 0x0000003A (58)

Microsoft ACPI-Compliant System

(ISA) 0x0000003B (59)

Microsoft ACPI-Compliant System

(ISA) 0x0000003C (60)

Microsoft ACPI-Compliant System

(ISA) 0x0000003D (61)

Microsoft ACPI-Compliant System

(ISA) 0x0000003E (62)

Microsoft ACPI-Compliant System

(ISA) 0x0000003F (63)

Microsoft ACPI-Compliant System

(ISA) 0x00000040 (64)

Microsoft ACPI-Compliant System

(ISA) 0x00000041 (65)

Microsoft ACPI-Compliant System

(ISA) 0x00000042 (66)

Microsoft ACPI-Compliant System

(ISA) 0x00000043 (67)

Microsoft ACPI-Compliant System

(ISA) 0x00000044 (68)

Microsoft ACPI-Compliant System

(ISA) 0x00000045 (69)

Microsoft ACPI-Compliant System

(ISA) 0x00000046 (70)

Microsoft ACPI-Compliant System

(ISA) 0x00000047 (71)

Microsoft ACPI-Compliant System

(ISA) 0x00000048 (72)

Microsoft ACPI-Compliant System

(ISA) 0x00000049 (73)

Microsoft ACPI-Compliant System

(ISA) 0x0000004A (74)

Microsoft ACPI-Compliant System

(ISA) 0x0000004B (75)

Microsoft ACPI-Compliant System

(ISA) 0x0000004C (76)

Microsoft ACPI-Compliant System

(ISA) 0x0000004D (77)

Microsoft ACPI-Compliant System

(ISA) 0x0000004E (78)

Microsoft ACPI-Compliant System

(ISA) 0x0000004F (79)

Microsoft ACPI-Compliant System

(ISA) 0x00000050 (80)

Microsoft ACPI-Compliant System

(ISA) 0x00000051 (81)

Microsoft ACPI-Compliant System

Actions

Device Manager

More Actions

